

 
## 1 HOURS

APPROXIMATE ASSEMBLY TIME

2 PERSON ASSEMBLY





FLOOR AREA  
2.0m X 2.7m



REQUIRED ASSEMBLY SPACE

## ASSEMBLY INSTRUCTIONS

REQUIRED ASSEMBLY TOOLS

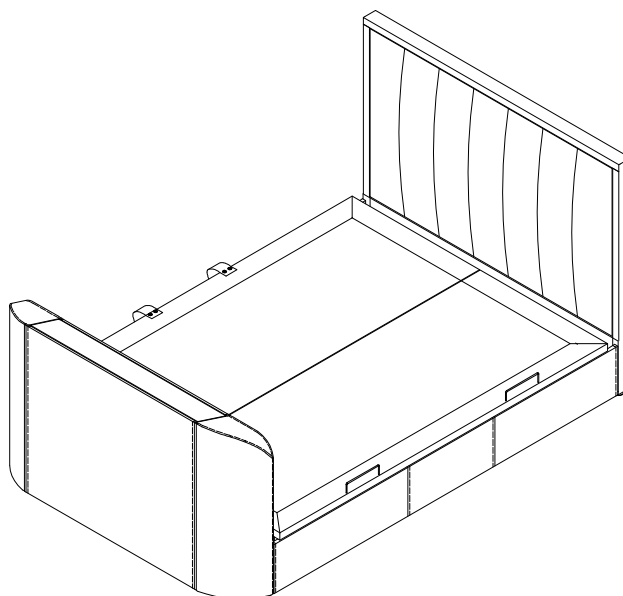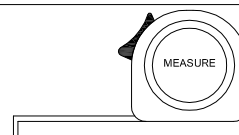

### Important Information

- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
- Carefully check that you have all the parts before beginning assembly.
- Keep fittings out of children's reach and keep children well away from construction area.
- We suggest you retain these instructions for future reference.

### Product Information

- TV bed.
- Upholstered Bed. Conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 80lbs ( 37kg )
- Compatible with slimline LED televisions with a screen size of 20" to 42".
- **Can accommodate some TV's up to 43", however the TV size must be within the maximum T.V dimensions.**
- Maximum T.V dimensions D75mm x W970mm x H580mm (WITHOUT STAND)

### Care Instructions

- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the color.
- Periodically check & re-tighten any fastener.
- Periodically dust lightly with a clean soft cloth.
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

**Whereas every effort has been made to allow this product to utilise the maximum number of TV's available it is not possible to accommodate every product in an ever changing market. It is the responsibility of the customer to ensure suitability of the TV to the TV bed before attempting operation. It is the customers responsibility to ensure all wiring is correctly placed in accordance with both the TV and TV bed manufacturer.**



Comforms To : CE\_LIFT\_Controller unit Linear actuator in UK/ EU (LVD + EMC + RoHS):


-EN 60335-1; EN 62233; EN 55014-1; EN55014-2; EN 61000-3-2; EN 61000-3-3;  
EN 61558-2-16; EN 61558-1; EN 62321

CE\_MEDIA\_SYSTEM\_For Audio System in UK/ EU (LVD + EMC + RoHS):


-EN 55032; EN 55024; EN 61000-3-2; EN 61000-3-3; EN301489-1; EN301489-17;  
EN62479; IEC/EN 60065; EN 300 328; EN 1122

## Components of Carton 1


(A) Headboard x 1

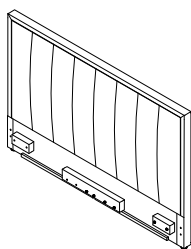

 
(B) DVD/Media  
Compartment  
Top Panel x 1



 
(C) DVD/Media  
Compartment Side  
Panel (Left) x 1



 (D) DVD/Media  
Compartment Side  
Panel (Right) x 1



 
(E) DVD/Media  
Compartment  
Rear Panel x 1





## Component of Carton 2

(F) Footboard x 1

TV Mechanism &  
sound system  
pre-fixed in the foot end

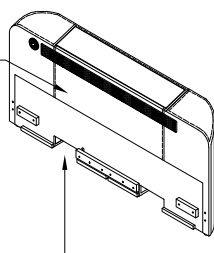


Hardware Box

 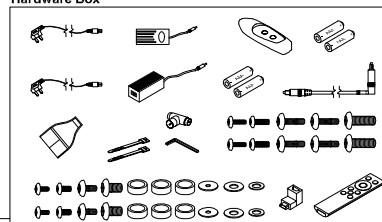


## Components of Carton 3


(G) Side Rail-1 x 1

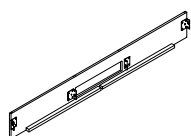

(H) Side Rail-2 x 1

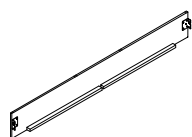

(I) Bottom Cross  
Rail (Long) x 1

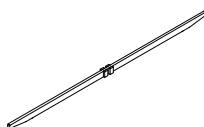


(J) Bottom Cross  
Rail (Short) x 2




Hardware  
Bag

## Components of Carton 4


(K) Base Panel-1 x 2

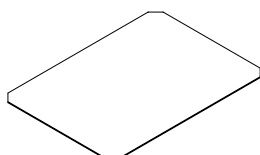

(L) Base Panel-2 x 1

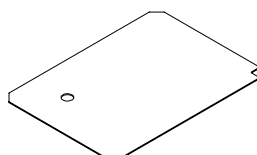


(M) Base Panel-3 x 1

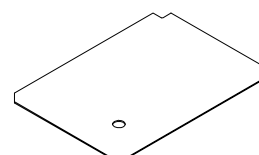


## Components of Carton 5

(N) Lift Base -1 x 1

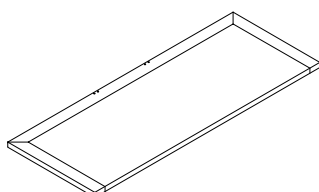


(O) Lift Base -2 x 1

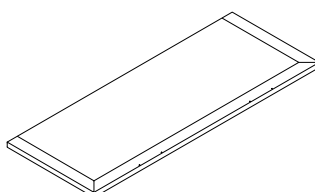


## Components of Carton 6

 

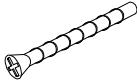

(P) Lift Up Mechanism-1 x 1

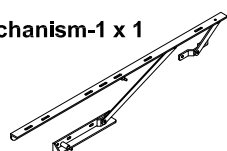

 

(Q) Lift Up Mechanism-2 x 1

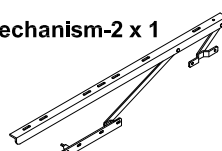













### Hardware List (in Carton 1)

<b>(R) M8 x 25mm x 10 (Pre-Installed)</b> 	<b>(S) M8 x 18mm x 6 (Pre-Installed)</b> 	<b>(T) M5 x 35mm x 11</b> 	<b>(U) M8 x 16mm x 4</b> 
--	---	---	---

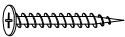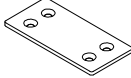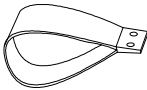

### Hardware List (in Carton 2)
 
<b>(R) M8 x 25mm x 10 (Pre-Installed)</b> 	<b>(S) M8 x 18mm x 6 (Pre-Installed)</b> 	
--	---	--
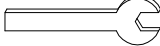
### Hardware List (in Carton 3)

<b>(V) #8 x 1-1/4" x 16</b> 	<b>(W) 3 X 40 X 86mm x 4</b> 	<b>(X) Strap Handle x 2</b> 	<b>(Y) M8 x 13mm x 4</b> 
<b>(Z) Gas Spring x 2</b> 	<b>* DOUBLE 650N * KING 800N * SUPER KING 1100N</b>	<b>(AA) M6 x 20mm x 4</b> 	<b>(AB) M6 x 16mm x 4</b> 
<b>(AC) Ø5 x 80 x 200mm x 2</b> 	<b>(AD) Screw Driver x 1</b> 	<b>(AE) Allen Key (M4) x 1</b> 	<b>(AF) Spanner x 1</b> 
<b>(AG) Stud Bolt M6 x 40mm x 2</b> 			

### Hardware List (in Carton 5)

<b>(AA) M6 x 20mm x 12 (Pre-Installed)</b> 	<b>(AB) M6 x 16mm x 12 (Pre-Installed)</b> 	
---	---	--

## **Tips before you start!**

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely. (Minimum Two Persons)
4. We recommend where possible, all items are assembled near to the area where they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. Please ensure that your bed is placed on a level floor area. (Avoid setting up and installing your bed on uneven floor surface.)
6. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
7. During assembly please take care not to over-tighten any fittings, as this may damage the product.

## **Care and Maintenance of your Furniture**

- Please do not jump on your furniture.
- Never allow any kind of liquid to remain on your furniture. This can cause finishes to de-laminate. Take care when spraying Perfume and deodorants etc as the vapour can settle on the fabric surface and cause damage.
- Periodically check the condition of your bed slats and plastic locating caps to ensure they are in good condition and have not become loose.
- The bed should always be lifted into position if moved for cleaning.

## **CARE INSTRUCTIONS FOR VELVET FABRIC**




- If liquid has spilled onto the velvet, soak it up with a paper towel or cloth. Make sure there is no food or debris left on the material. Combine a small amount of dish soap and water in a bucket, mixing it until it becomes soapy. Soak the cloth in the soapy water and apply it gently to the stain. Use the soapy cloth to blot the stain until it disappears. It is important for the velvet fabric to dry quickly. Use a hair dryer luke warm to accelerate the drying process.
- Carefully apply the upholstery cleaner to velvet with soft sponge, leaving the velvet's pile undisturbed. After it is clean, be sure to vacuum and brush the velvet following the grain always.
- A steam cleaner is perfect for removing stains, dirt and debris, disinfecting the velvet fabric, without leaving any damage to it. If you have it, apply it on your velvet upholstery for cleaning it with better results.
- If you have concerns regarding liquid/stain removal on your product, please consult a professional cleaning company.

**DO NOT USE ANY POWER TOOLS AS THIS MAY DAMAGE THE FRAME AND WILL  
INVALIDATE ANY CLAIM**




## Step 1

- Before assembly please decide which side you require the "DVD / Media Compartment " Part 'G' side rail with opening will need to be placed at that side.
- Loosen the bolts located in the head end. (Note: only loosen the bolts Do NOT remove them.)
- Hook the side rail over the bolts as shown.
- Repeat the action on the opposite side.

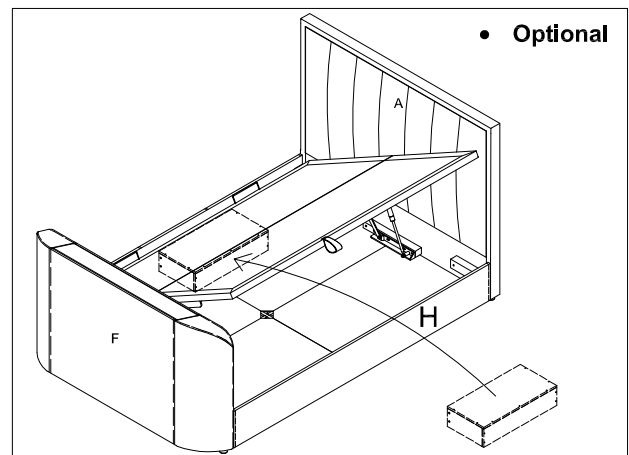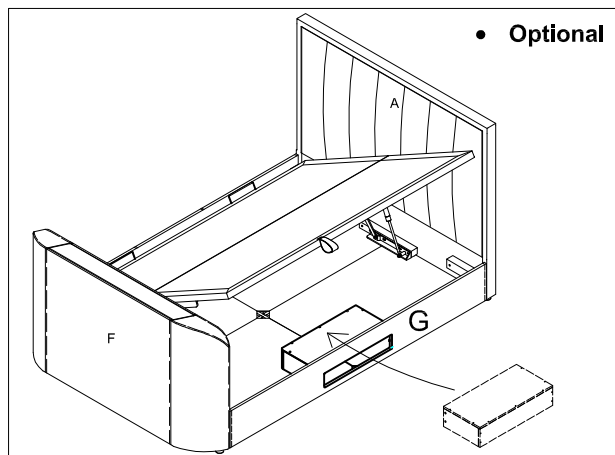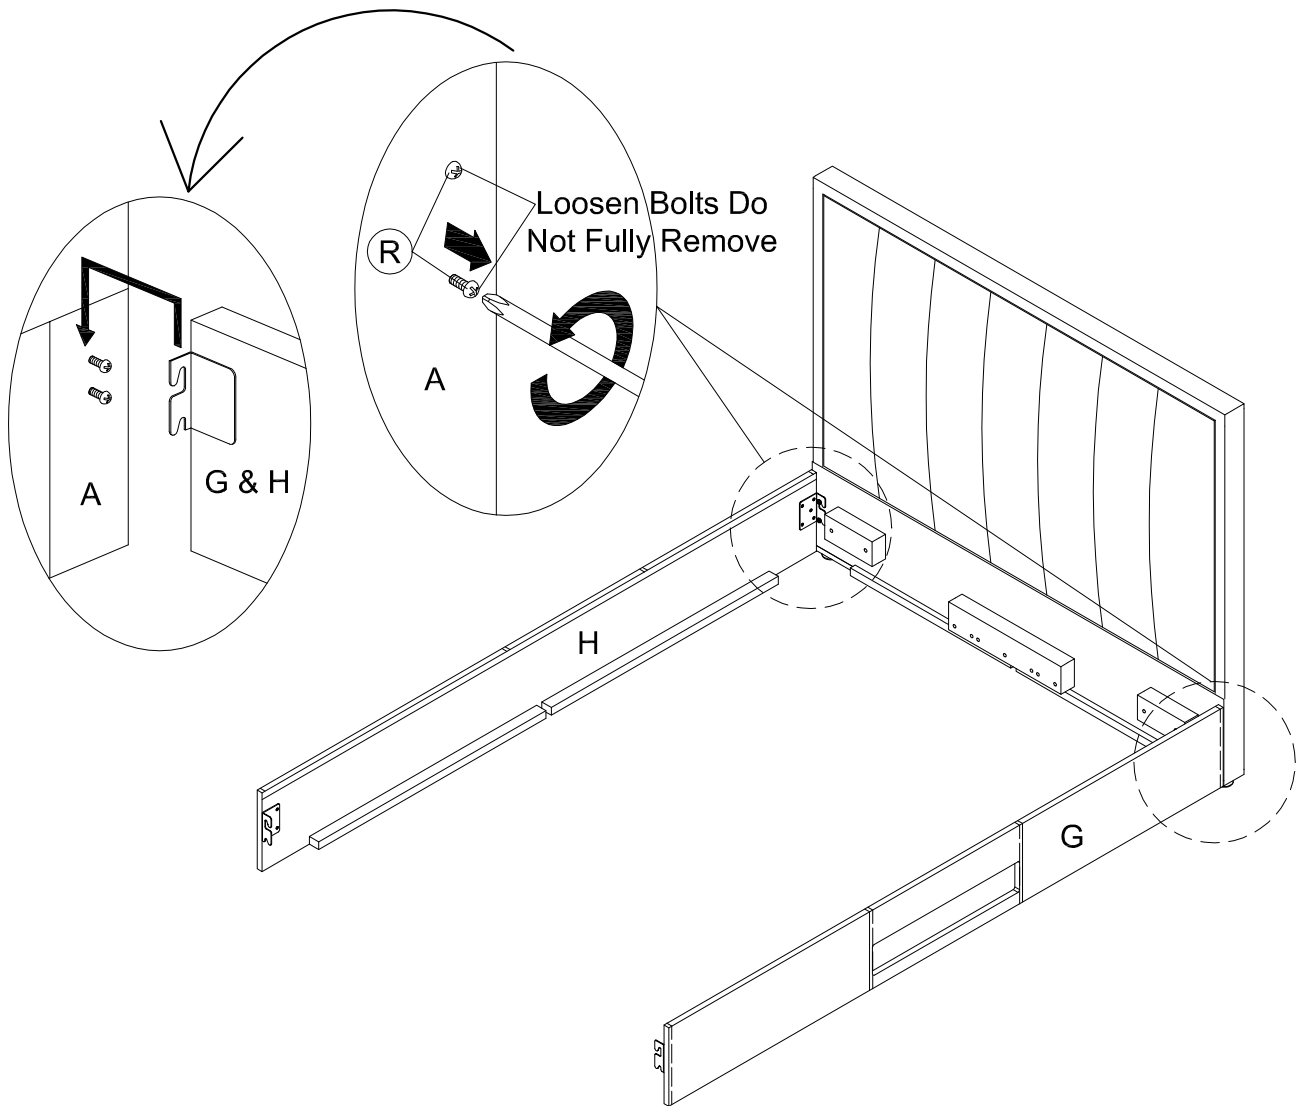


## Step 2

- Carefully remove the footboard from carton B, remove the Hardware Box and all extra transportation packaging from inside.
- To do this you will need to gently lay the foot end on it's back. Before doing so please ensure the area is completely free of anything that may cause damage or press into the fabric. Place a protective cover on the floor to avoid possible damage.
- The controls and hardware are held in place by string please carefully cut these and remove.

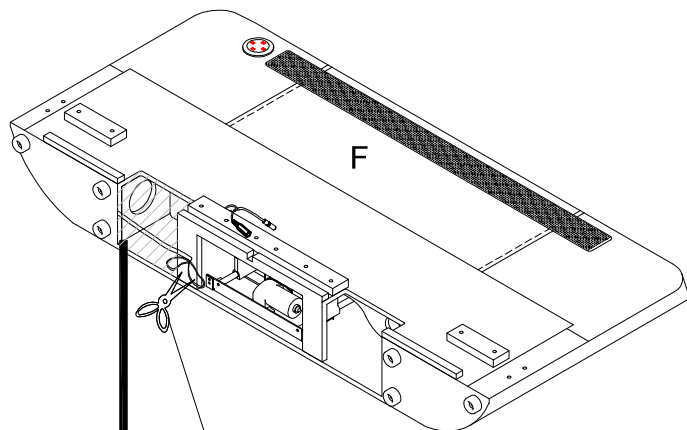


**CAUTION:**  
PLEASE USE SCISSORS TO CUT  
THE STRING.  
TAKE CARE WHEN REMOVING  
THE ACCESSORY BOXES NOT  
TO CATCH YOUR HANDS ON  
THE SIDES.

Hardware Box

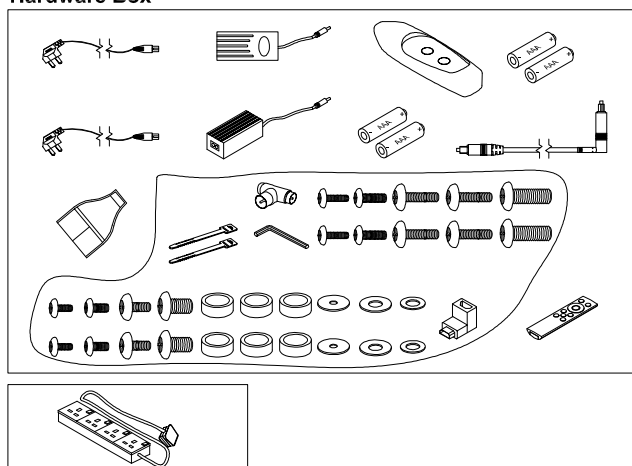

YOUR TELEVISION REAR VIEW  
HDMI CABLE PLUG POSITION POSSIBLE SCENARIO'S

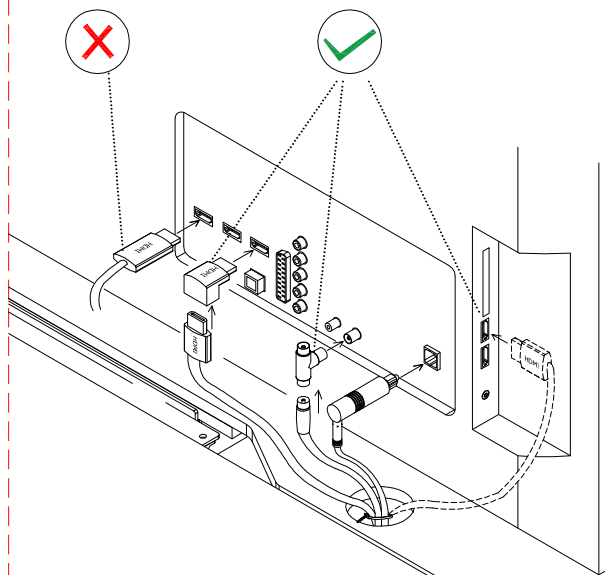

**Attention Please Note : Connecting Your HDMI or Aerial Cable as shown in diagram (X) can seriously Damage Your TV sockets.**

To reduce this possibility we have supplied 90 degree adaptors for both HDMI and Aerial connections.



This will reduce the cable protrusion and lessen the possibility of the cable colliding with the bed frame. **These can be found in the bed frame hardware pack located in Box B (foot end).** Please refer to the diagram above for the correct fitting of cables. More detailed information can also be found on page 14 (step 12) of your assembly instructions.

**The manufacturer or retailer will not accept responsibility for any damages arising from incorrect installation.**

## ATTENTION! PLEASE NOTE:

In the event you are experiencing any technical difficulties and you require additional assistance/ support with your product 'Mechanical/ Electrical' function - Please contact:


SUPPORT EMAIL : [support@bssbfurnitureinnovation.com](mailto:support@bssbfurnitureinnovation.com)

UK PRODUCT SUPPORT HOTLINE : 01462600064

Contact your retailer for all other issues such as damage, missing or faulty components ( non electrical ) or anything else of a non technical/electrical nature.

### Step 3

- Carefully lift the foot end back to it's upright position.
- Loosen the bolts located in the foot end.
- Please note these should only be loosened and NOT removed.
- Hook the side rail brackets over the bolts on both sides.
- Make sure the four bedframe interior angles are at 90°.
- Fully tighten all screws on the head and foot ends.

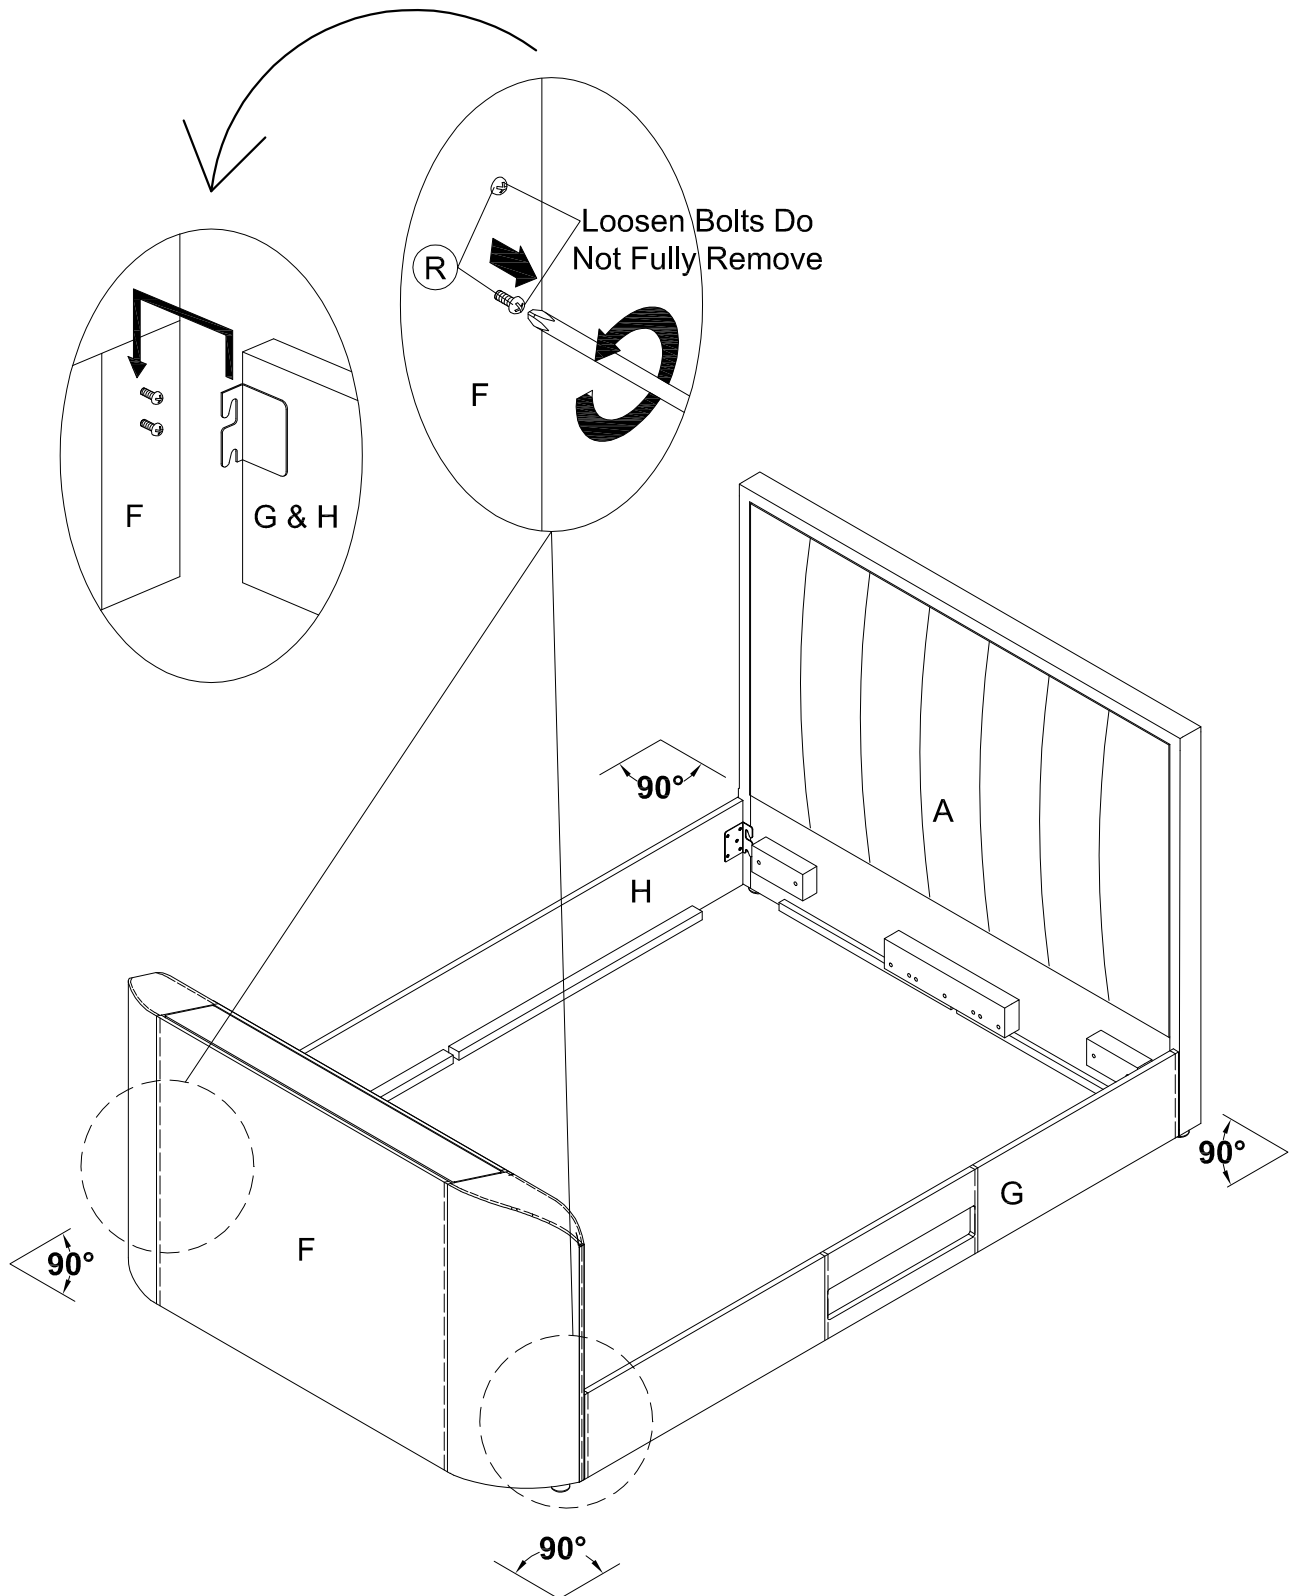

## Step 4

- Installing Batteries in the TV mechanism Wireless Remote Control.

### Battery:


Size: AAA - Ø10.5 X T44.5mm

Spec.: 1.5V

(AAA) Batteries x 2pcs (provided) install to battery case.

Caution: May explode or leak if recharged, inserted improperly, mixed with different battery types. Do not open battery. Dispose of used batteries promptly. Keep away from children.

Pull out the battery case  
from here to open

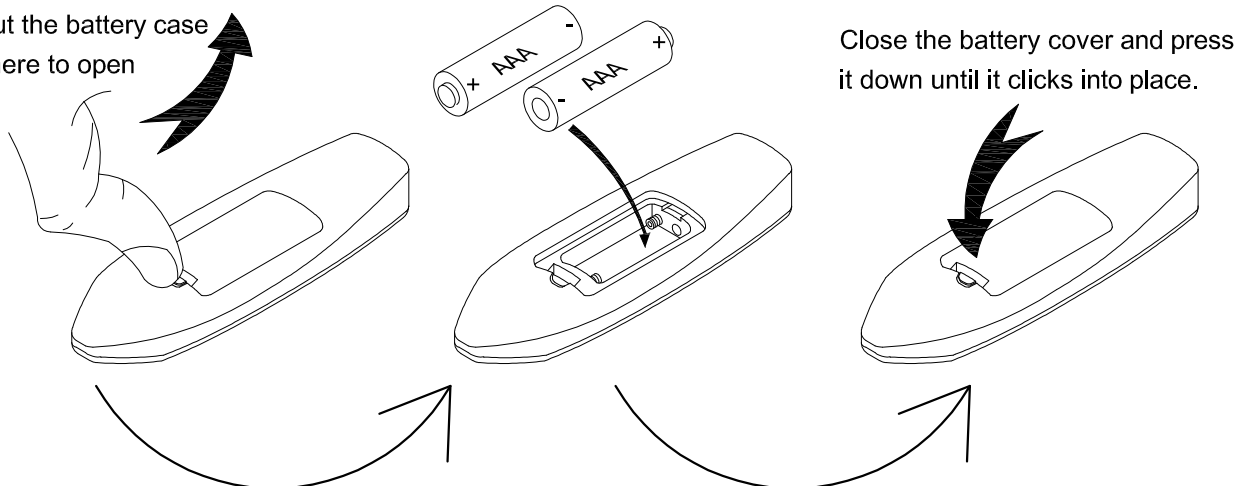

Close the battery cover and press  
it down until it clicks into place.

## Step 5

- Installing Batteries in the Audio system Wireless Remote Control.

### Battery:


Size: AAA - Ø10.5 X T44.5mm

Spec.: 1.5V

(AAA) Batteries x 2pcs (provided) install to battery case.

Caution: May explode or leak if recharged, inserted improperly, mixed with different battery types. Do not open battery. Dispose of used batteries promptly. Keep away from children.

Pull out the battery case  
from here to open

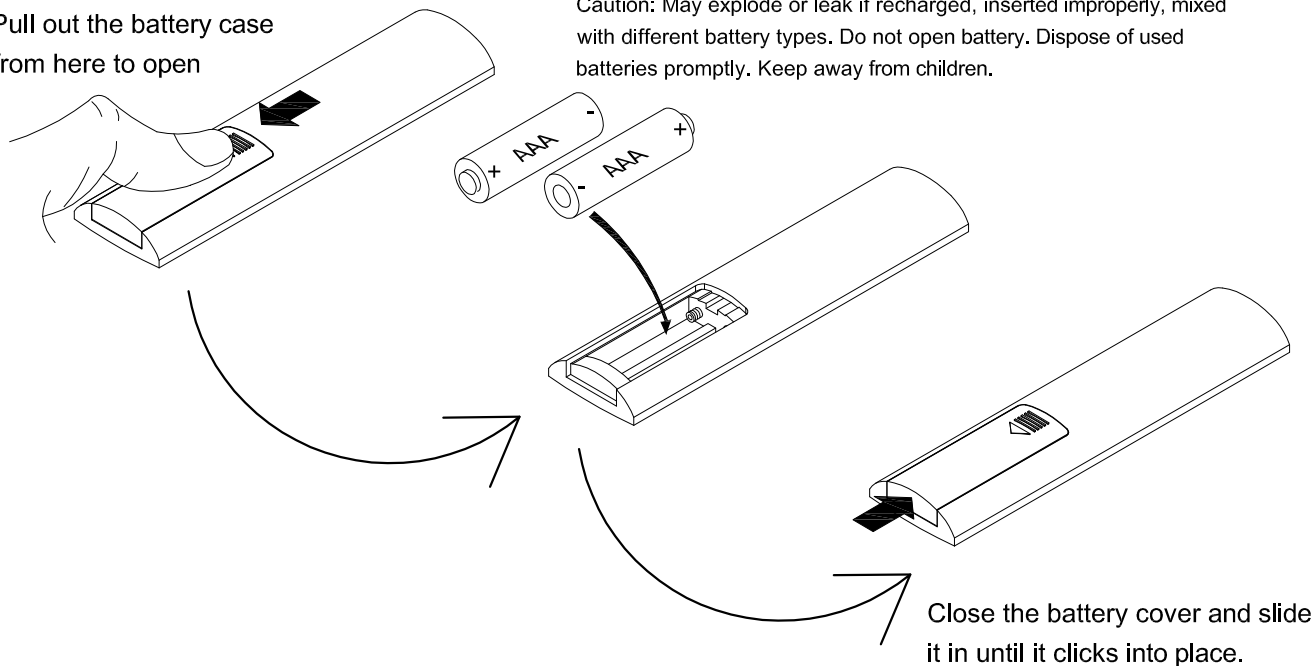

Close the battery cover and slide  
it in until it clicks into place.



## Step 6

- Connecting the TV mechanism cable & Audio system cable as shown. It is essential that connecting to the power supply is done in this order. Failure to do so will result in damage to your product.


**Step6-1(a)** Connect the Power Cable (VI) to the Audio system AC adaptor (11), then plug the Audio AC adaptor power plug into the Audio system power socket, which is pre-installed in the footboard, as shown.

**Step6-1(b)** Connect the Power Cable (13) to the TV mechanism adaptor (11), then plug the TV mechanism adaptor power plug into the TV mechanism receiver, which is pre-installed in the footboard, as shown.


**Step6-2** Connect the power cable (13) power plug & power cable (VI) power plug into an 4 socket extension lead, then switch on.

**Step6-3** Switch on the main power supply, the  red light will appear on the footboard Audio touchpad. (note: The audio touchpad  red standby light will automatic go out after 15sec ) (This feature is in place to avoid light disturbance, when trying to sleep.)



### STEP 1

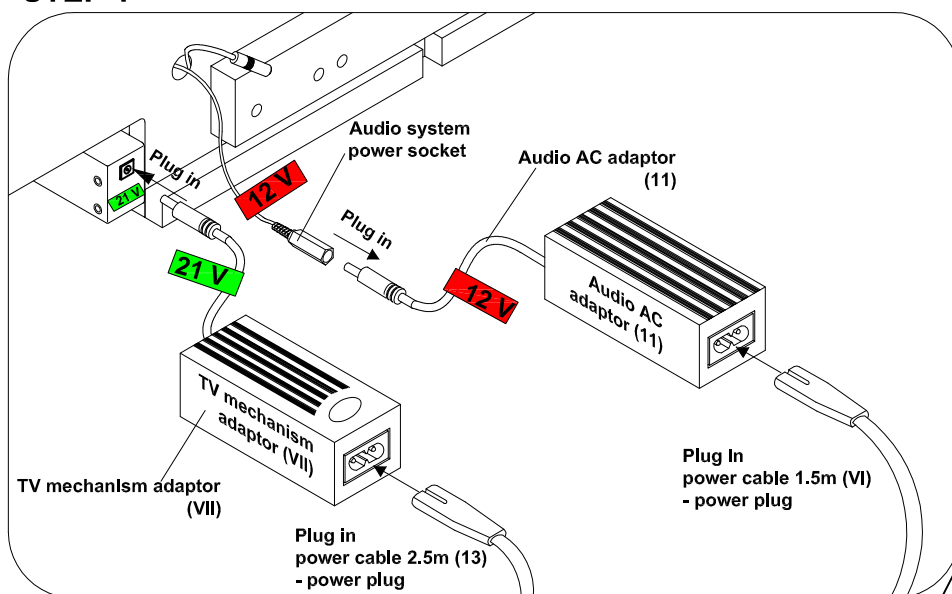

### STEP 2

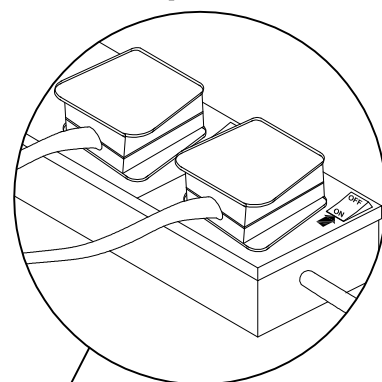


### STEP 3

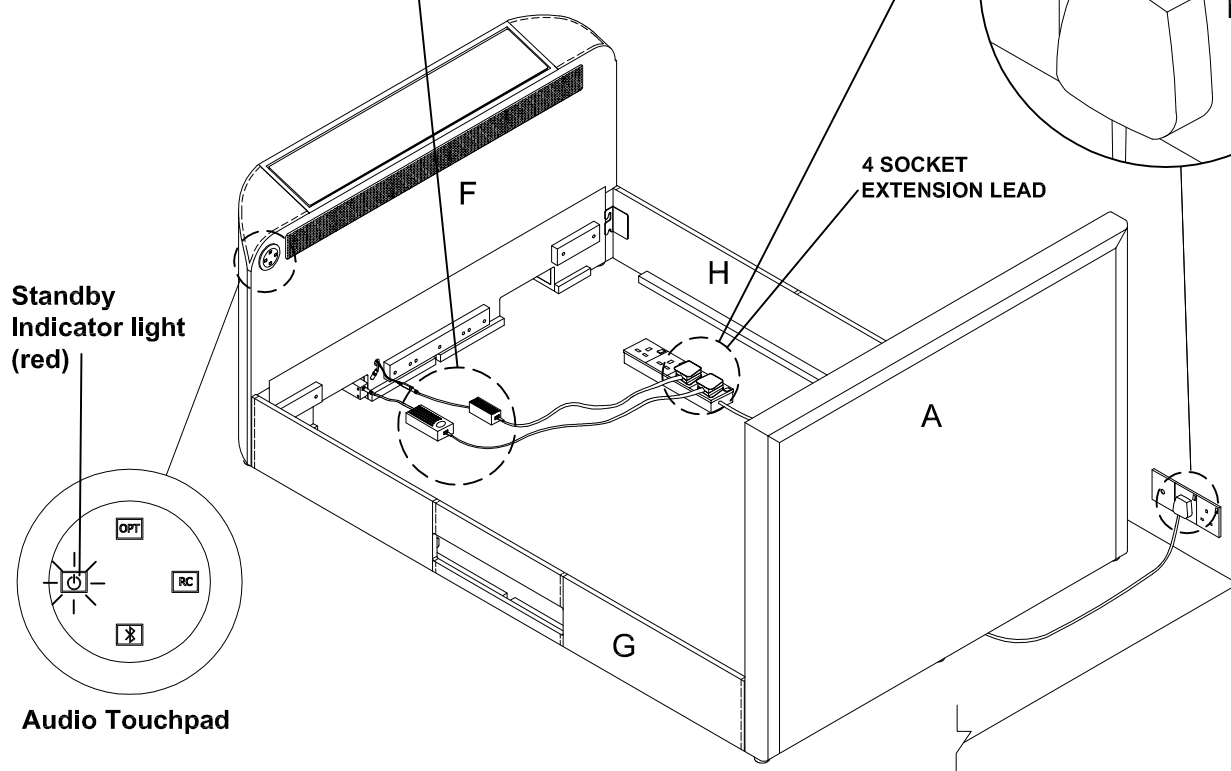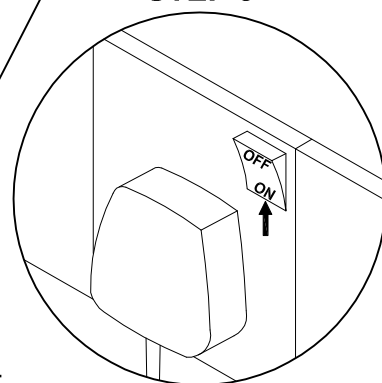

## Step 7

- Continually press the "UP" switch on the wireless remote control, which will then lift the TV mechanism up until the footboard TV lid opens to its full extent. Continually press the "DOWN" switch on the wireless remote control to lower the TV mechanism.
- If the wireless remote control does not operate the TV lift mechanism, please follow the **SYNCHRONIZED SETTING** shown in below.

Wireless Remote Control

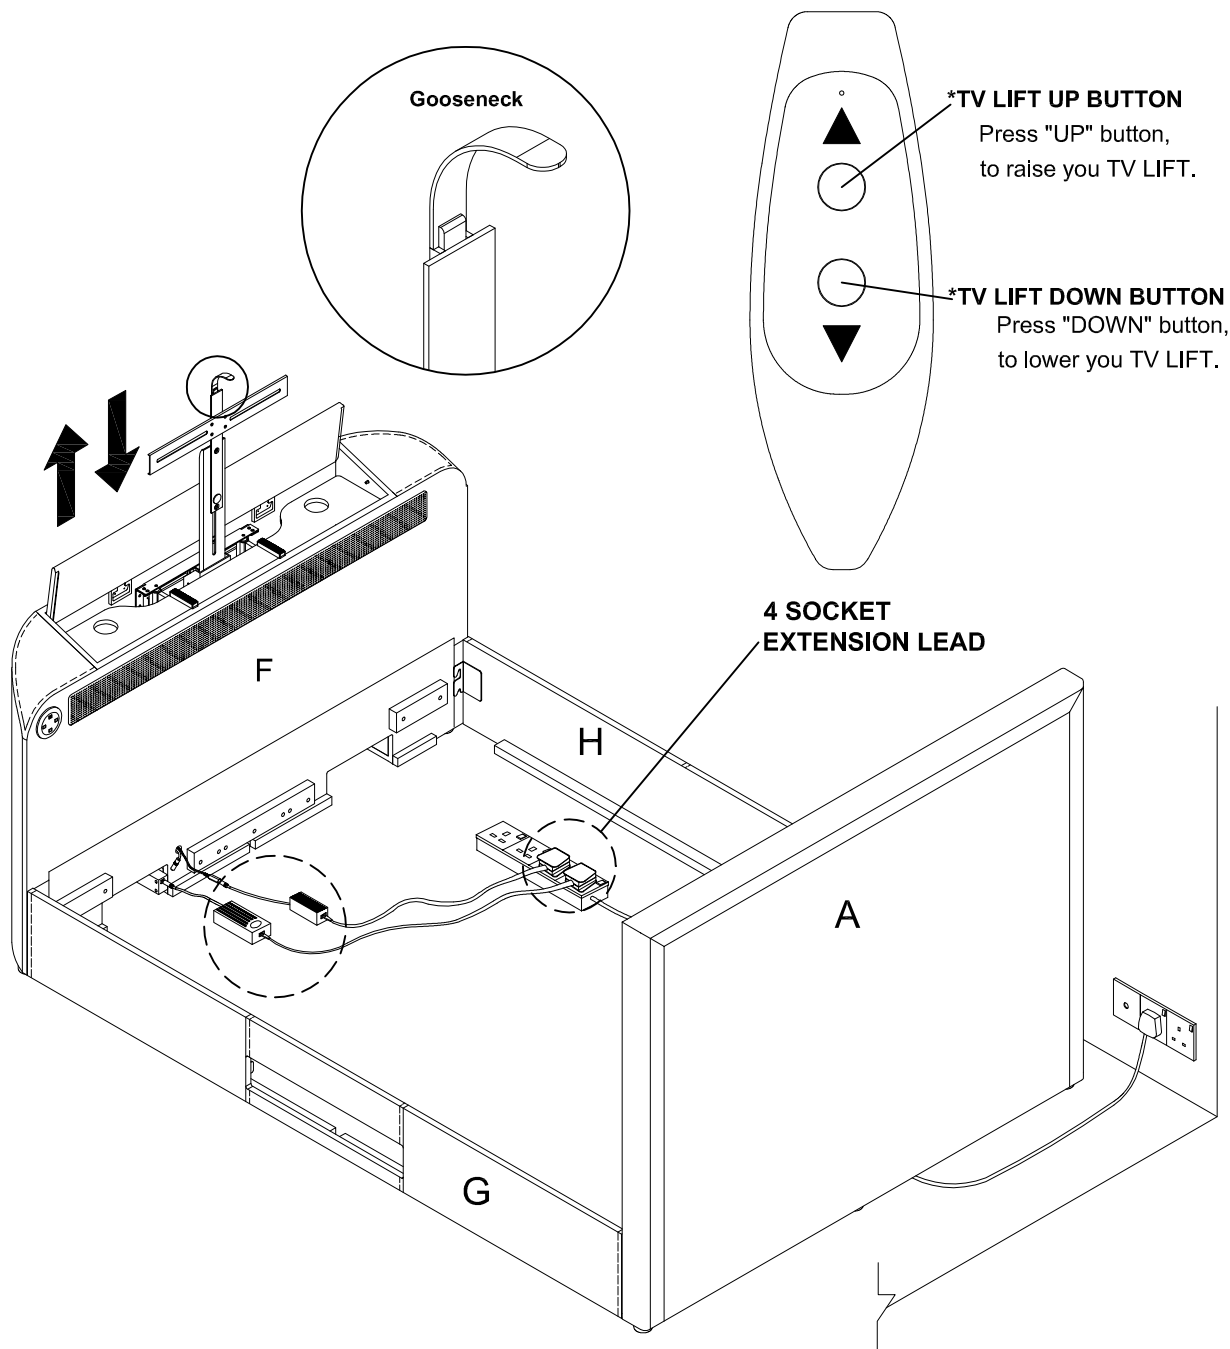

### **TV LIFT MECHANISM CONTROL BOX SYNCHRONIZATION**

- The wireless 'Radio Frequency' Remote Control is designed to operate your TV lift Mechanism.
  - Ensure there are two working batteries fitted correctly inside the remote control.
- Ensure the power is switched "off " at the mains power supply.
  - Press and (continuosly) hold the TV Lift "UP" button on the remote control.
  - While continuously pressing the "UP" Button , Power on the mains power supply socket. (Do not take you finger off the Remote Control TV Lift "UP" Button).
  - Only release the TV Lift Up Button Once the TV Lift starts to operate ( Should not take any longer than 5 seconds).

**Repeat if necessary.....**

**In the event the remote control is not synchronizing with the TV Lift Mechanism.**

**Please contact UK Support: 01462 600 064**


## Step 8

- TV cable connection plan. Make sure you have all the relevant cable connections required ( HDMI cable, TV Aerial cable, TV power cable, Optical cable etc...) before you install the TV.
- The cable management holes are provided in the TV Tray to help you manage the cable's to keep them tidy and free from snags. Pass all cables cleanly through these holes. While ensuring any cable slack is taken up from the bottom end of the footboard.

### TIP:

Before fitting the TV, pass any cables through the cable management holes from the top to the bottom, while ensuring the cables slack is taken up from the bottom end of the footboard. choose the best side to use depending on where the connection ports are, on back of your TV.

All TV, HDMI, Aerial, optical cables MUST thread through the bungee cable located at both left hand and right hand side of footboard mouse holes. From a position looking at the TV screen.

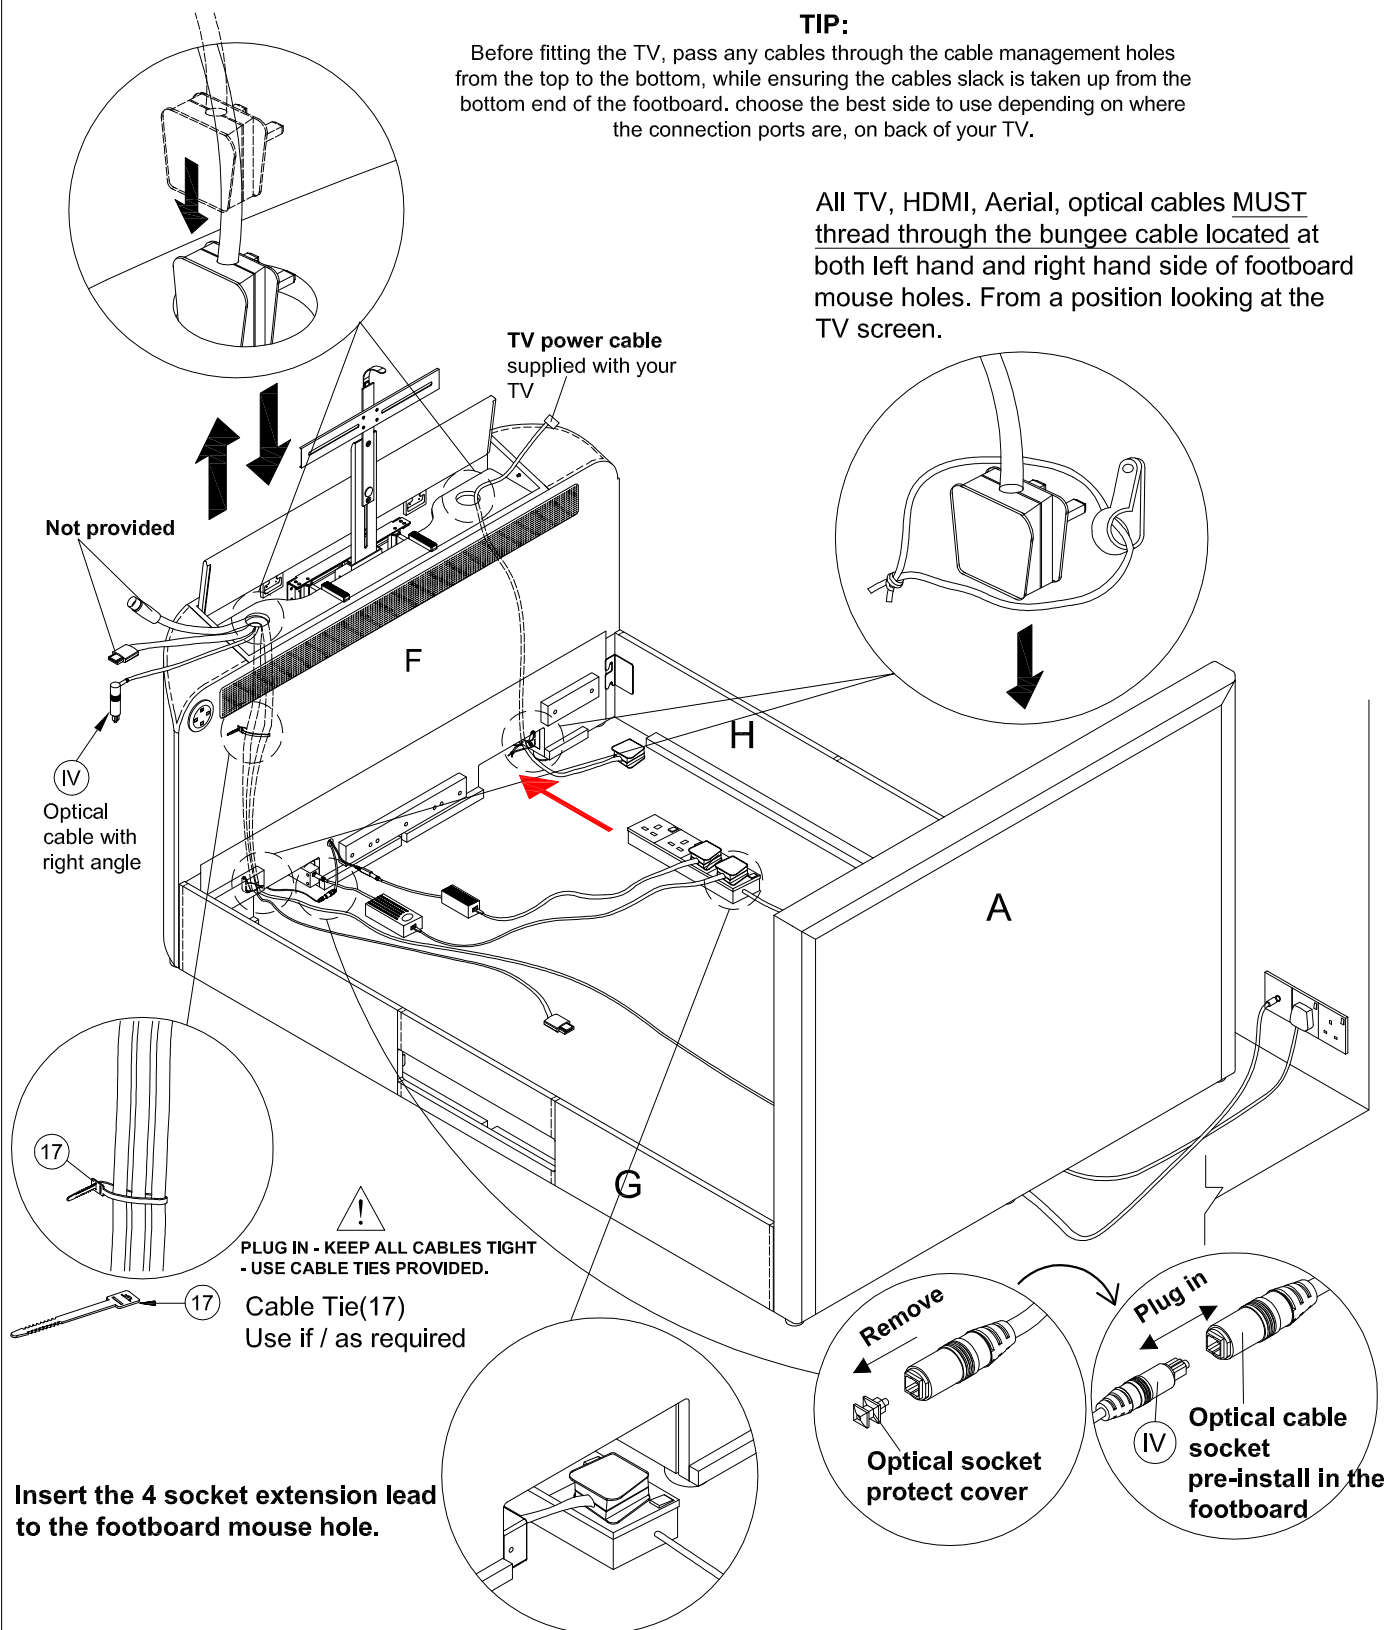

Place all cables through the 'Cable Management' holes to prevent any damage to the cable when the TV Lift Mechanism is operating. Make sure all your the cables are long enough to let the TV Lift Mechanism move freely.


All the cables MUST be carefully pulled and fully extended.

Group the cables together as required below the TV Tray using cable tie(17) provided.

## Step 9

- To adjust the TV tray to suit the height of your TV (without stand). Please follow step below
  - 9.1 : Measure and make a note of the height (without stand!).
  - 9.2 : Use the Allen key (20) to slightly loosen the up/down adjuster bolts-half turn only, do not remove all. (Please refer diagram below)
  - 9.3 : Slide "the TV vertical bar up/down", while using the measure line matching the noted measurement height of your TV. Then fully tighten the bolts.
  - 9.4 : When the TV is mounted it should sit neatly just beneath the lid opening Gooseneck.


**Note: TV's lower than the minimum height of 440mm, are not compatible with the TV mounting bracket system.**

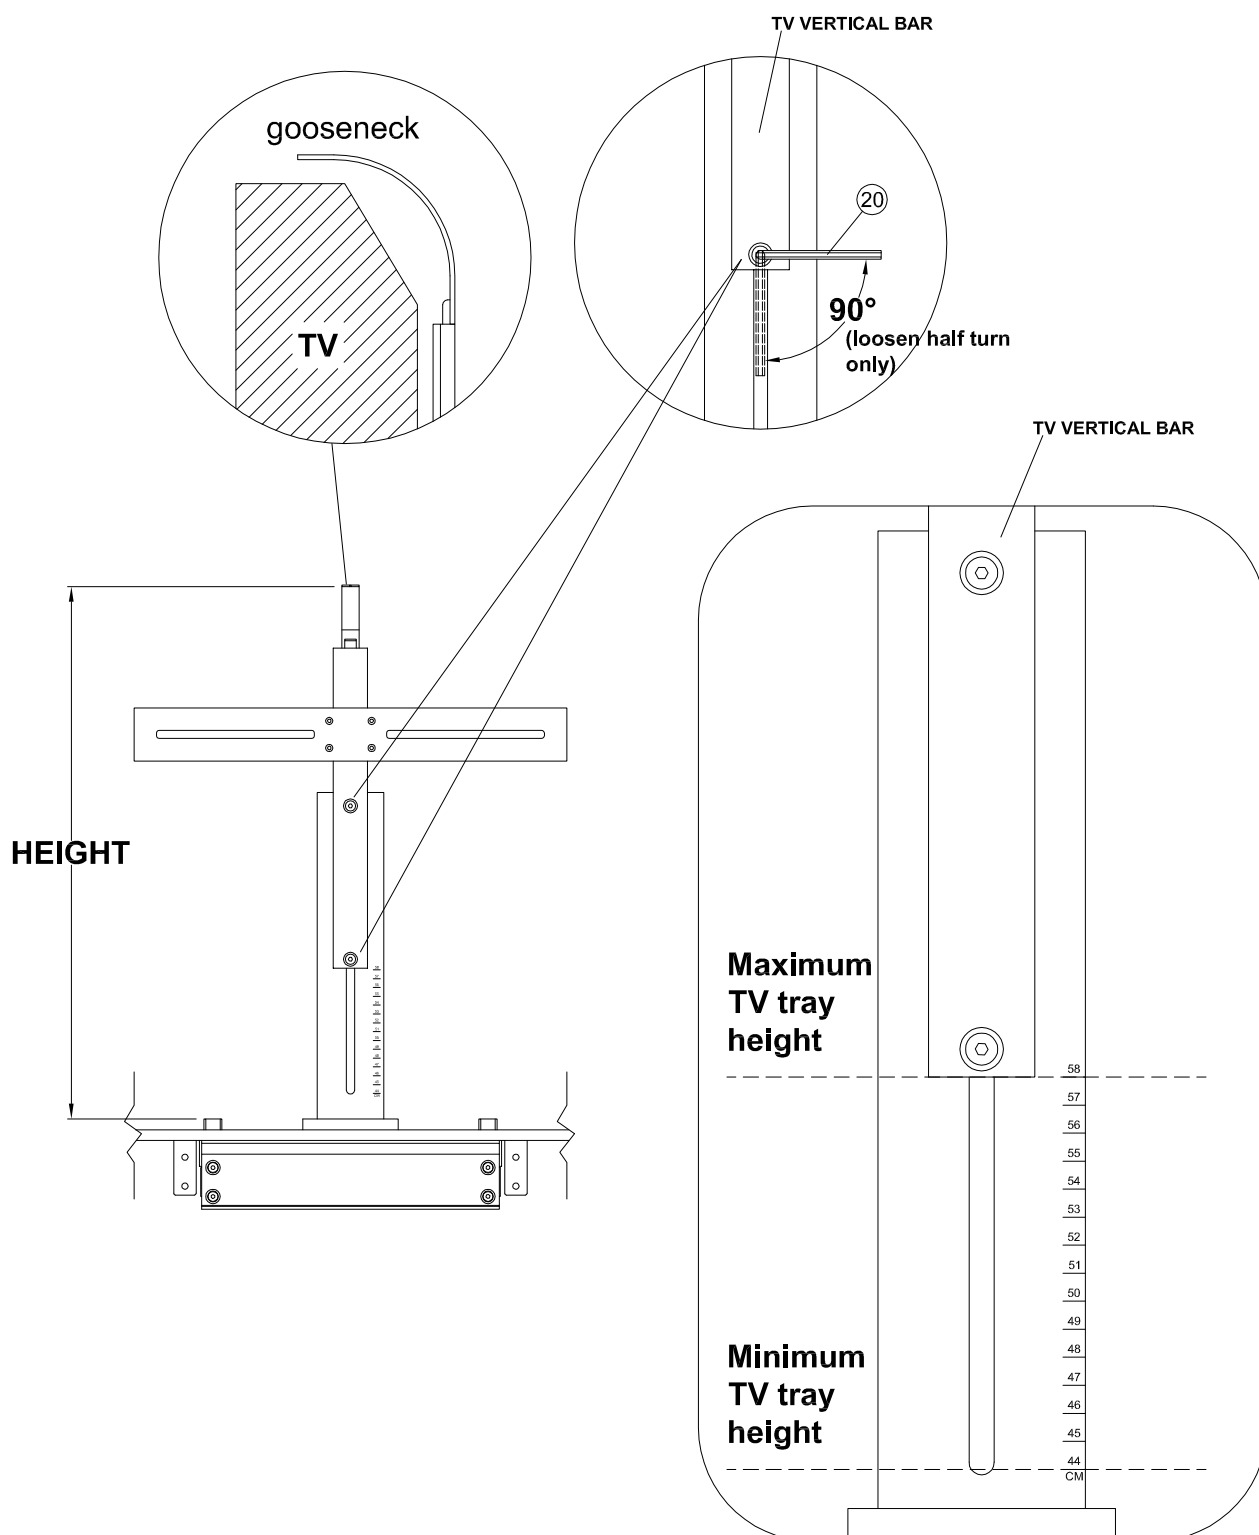



## Step 10

- You are now ready to install your TV.
- Raise the mechanism to it's highest position.
- While standing behind your television (on the outside end of the footboard). - 'Facing the headboard'
- Carefully place the TV on top of the two rubber TV mounting pedestals - ensuring the Gooseneck arm is perfectly inline with the 'centre' of the TV.


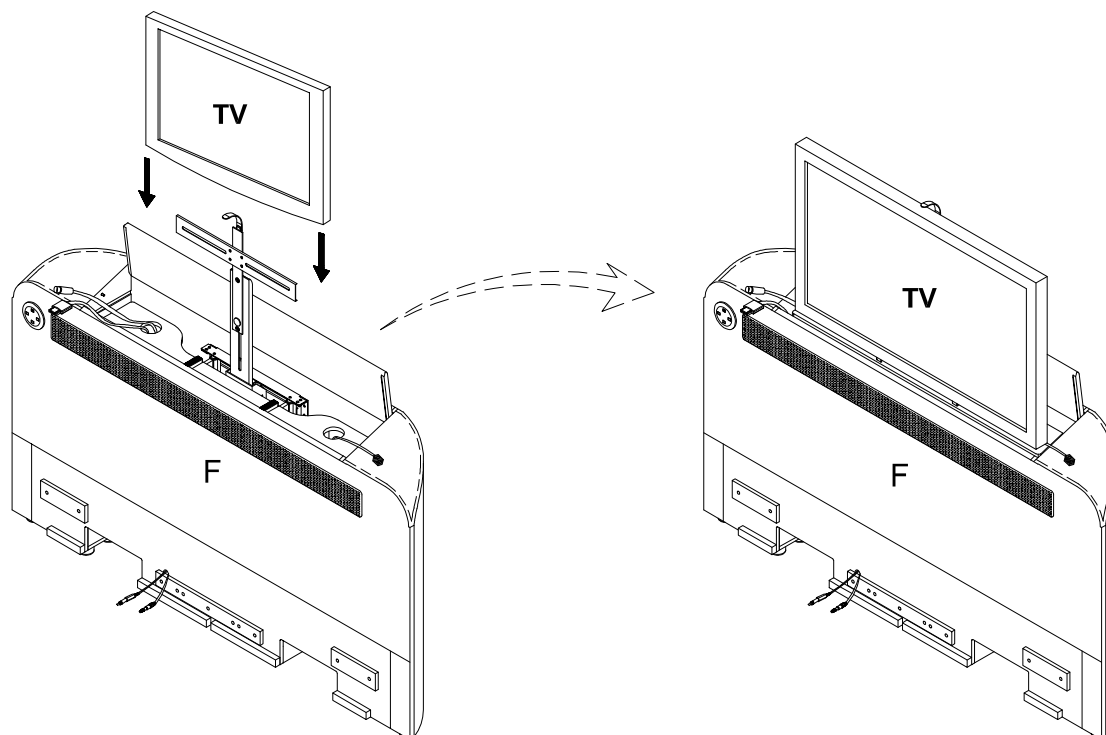


## Step 11


- TV Flat Bracket (vesa bracket).

Please note : Item (21), (22), (23), (24), (29), (30), (31) or (32) TV fixing screws are compatible with most TV models. However sizes may differ depending on the TV model. If smaller or larger size screws are required these should be sourced from your local hardware store or TV specialist.

Washers may also be required. Your retailer may also supply alternative fixings depending on the TV model supplied at the time.

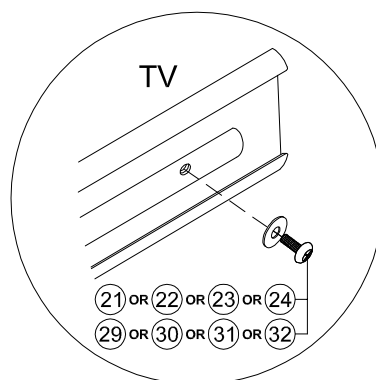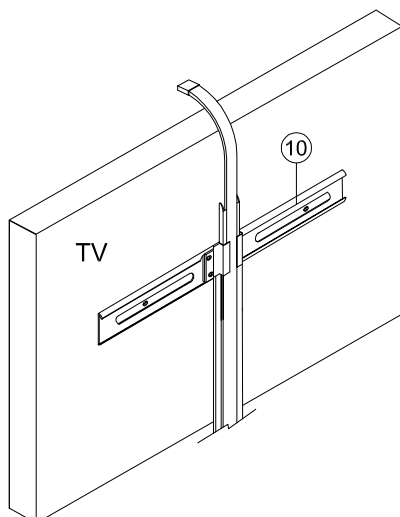

BOLT	(21)	(22)	(23)	(24)
BOLT	(29)	(30)	(31)	(32)
WITH				
WASHER	(25)	(25)	(26)	(27)

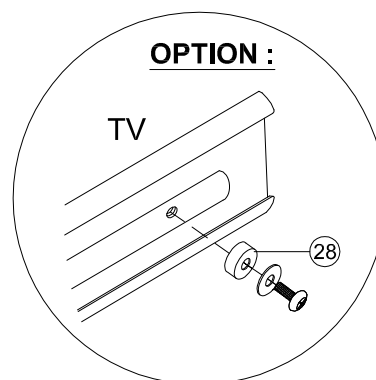


### OPTION :


In the event you find the screws are too long for the TV with bracket please use Plastic collar (28) if required.

## Step 12

- Connect all relevant cables to the TV.

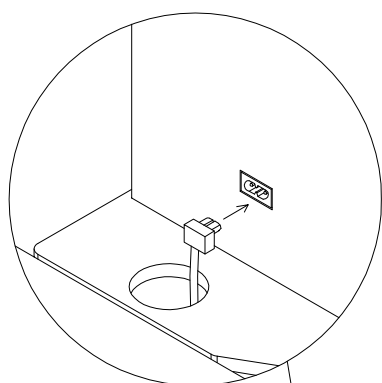


**Note: For illustration purposes only, TV cables may vary.**

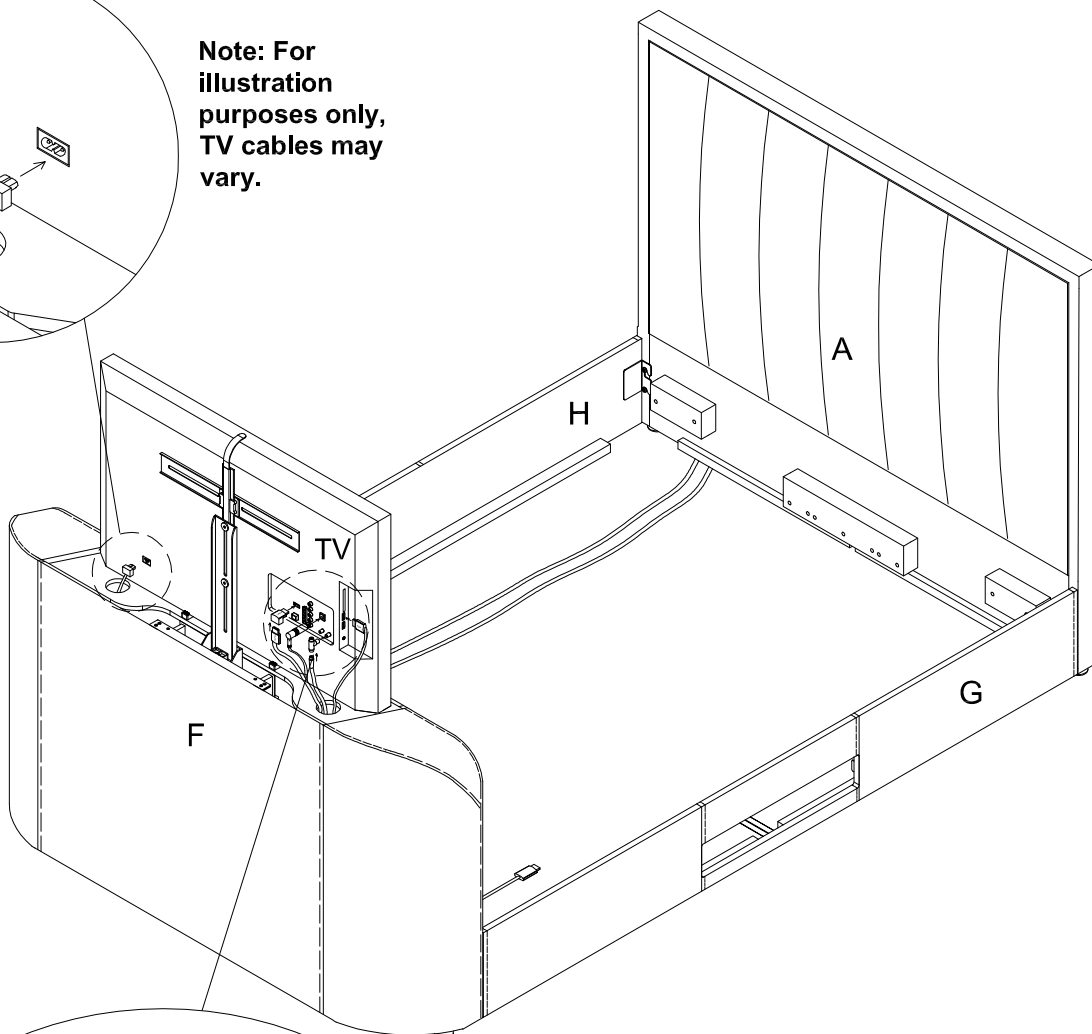

**Note: For illustration purposes only, TV cables may vary.**

**YOUR TELEVISION REAR VIEW  
HDMI CABLE PLUG POSITION POSSIBLE SCNARIO'S**

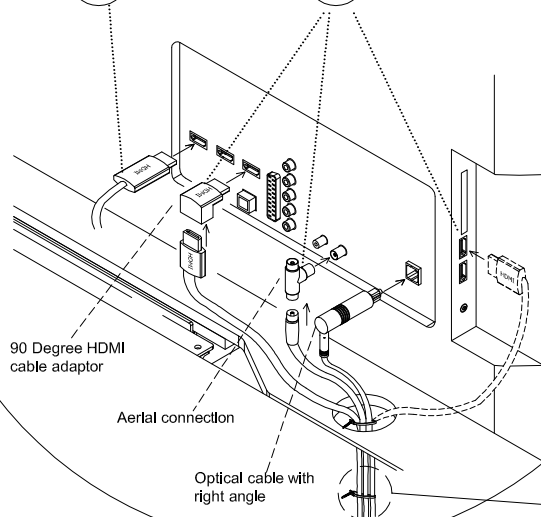

**Attention Please Note : Connecting Your HDMI or Aerial Cable as shown in diagram (X) can seriously Damage Your TV sockets.**

To reduce this possibility, we have supplied 90 degree adaptors for both HDMI and Aerial connections.



This will reduce the cable protrusion and lessen the possibility of the cable colliding with the bed frame.

**These can be found in the bed frame hardware pack located in Box B (foot end).** Please refer to the above diagram for the correct fitting of cables. More detailed information can also be found on above diagram of your assembly instructions.

**The manufacturer or retailer will not accept responsibility for any damages arising from incorrect installation.**




**17 Cable Tie(17)**  
Use if / as required

**NOTE: The cable ports for televisions, DVD, TV aerial, Optical etc may not be the same as shown above and may vary depending on TV models.**

## Step 13

- Detail connection plan.

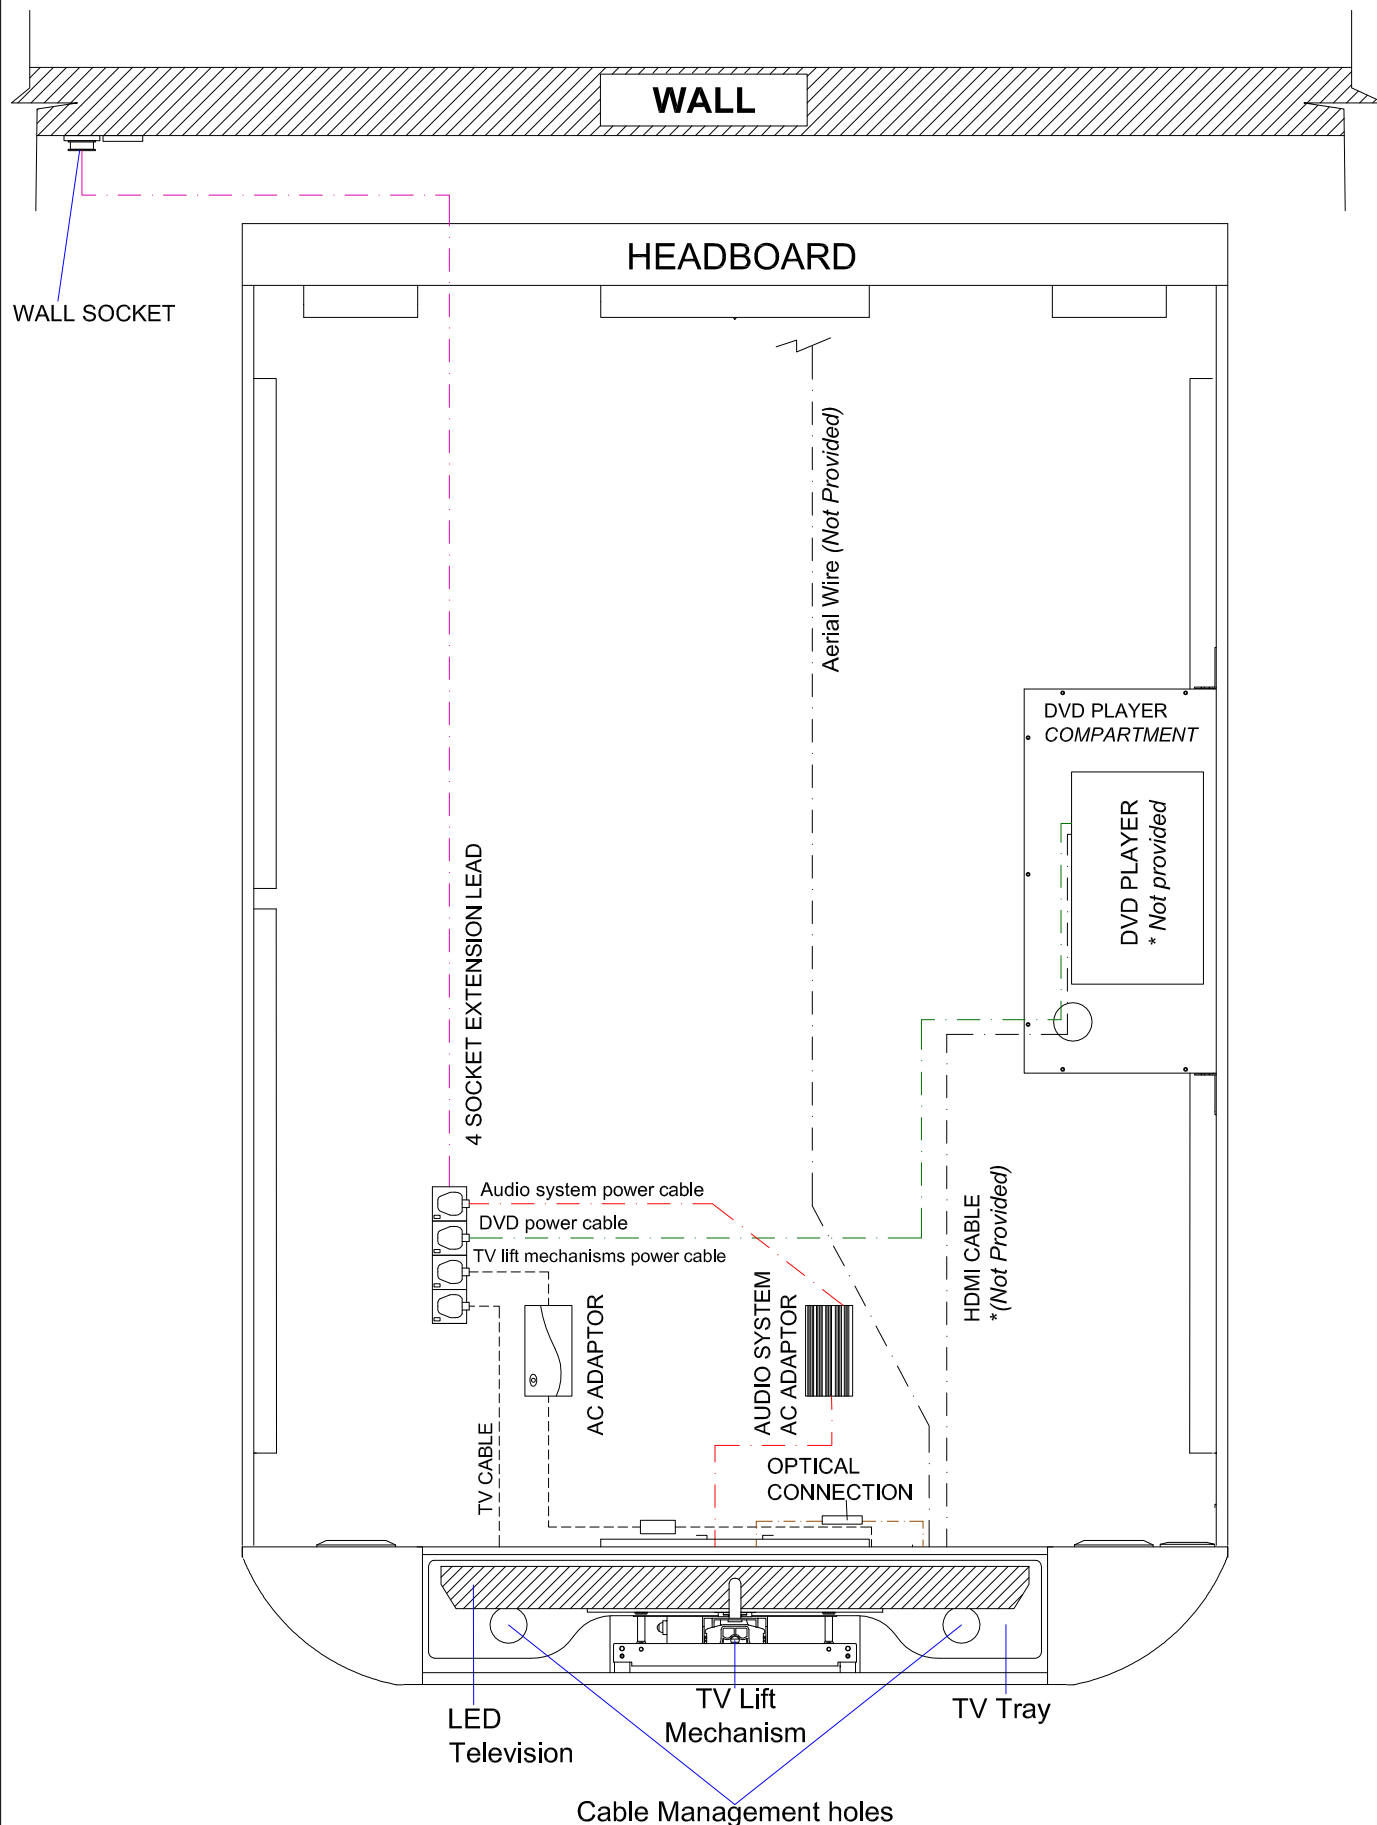

Note: Please ensure you thread the relevant TV connection cables through the provided holes in the TV Tray - please avoid crossing cables across the rear of the TV lift mechanism area.

## Step 14

### USING THE TOUCHPAD

- Audio touchpad control panel detail.
- The touchpad power/standby light will automatically go out after 15 seconds. (This feature is in place to avoid light disturbance, when trying to sleep.)

#### **OPTICAL MODE INDICATOR LIGHT (ORANGE)**


\*To select optical mode - use finger touch on the control panel area.

\*Alternatively - use audio system wireless remote control buttons.

#### **ON / OFF SWITCH INDICATOR LIGHT (RED)**

\*To select power on/ standby - use finger touch on the control panel.

\*Alternatively - use audio system wireless remote control buttons.

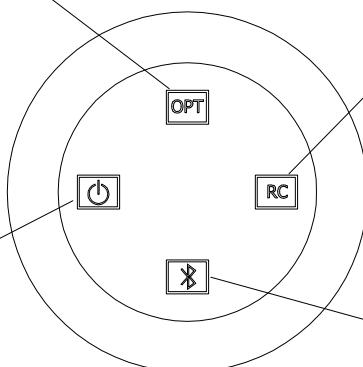

#### **RECEIVER INDICATOR LIGHT (RED)**

Flashes when audio system wireless remote control buttons are pressed

#### **BLUETOOTH MODE INDICATOR LIGHT (BLUE)**


\*To select bluetooth mode - use finger touch on the control panel area.

\*Alternatively - use audio system wireless remote control buttons.

## Step 15

### USING THE REMOTE CONTROL

- Audio system wireless remote control detail.

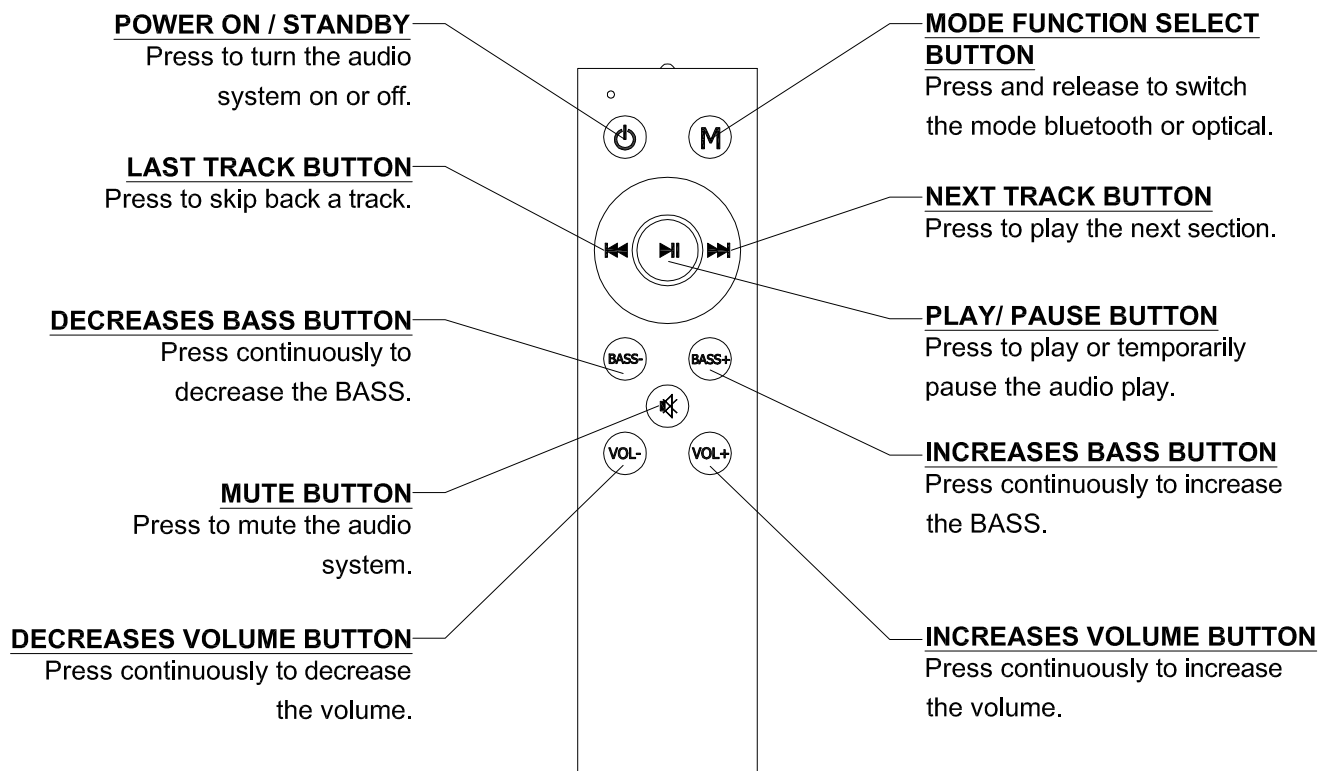

## Step 16

### PLAYING SOUND THROUGH THE TV - (OPTICAL MODE)

- Ensure the optical cable is correctly connected to both the television and bed speaker connectors (see page 13 - step 10 & page 17 - step 15 of your assembly instructions).
- Ensure the speaker system is powered on.
- Ensure the Television is powered on and playing a picture with sound.
- Using the remote control - press 'M' until the 'OPT' light is illuminated on the touchpad or - using the touchpad - press OPT.
- Adjust the volume/base/according to your sound preferences, on the remote control.

### TROUBLE SHOOTING

- In the event all the 'above' steps have been followed and there is no optical sound coming from the speaker system - please check the following:
- The OPT light is illuminated on the touchpad.
- YES: Check the Television Optical Setting Instruction, on the Television user manual and ensure its instructions are carefully followed.
- NO: If all power and cable connections are correct, as per the bed system user manual - please call the product support line 01462 600 064 (PLEASE ENSURE YOU HAVE YOUR PURCHASE INFORMATION TO HAND AND YOU ARE IN CLOSE PROXIMITY TO THE PRODUCT BEFORE CALLING!!) 9am - 5pm.

## Step 17

### PLAYING SOUND THROUGH BLUETOOTH CONNECTION - (BLUETOOTH MODE)

- Using the remote control - press 'M' until the 'BT' light is illuminated on the touchpad or - using the touchpad - press BT button.
- On your audio player device - look for 'Inv Spk' under BT Connection Settings.
- Select 'Inv Spk'.
- The BT connection should automatically take place with a connected audio bleep notification - no connection code is required!
- Adjust the volume/ base/ according to your sound preferences, on the remote control.

**PLEASE NOTE: IN ORDER TO CONNECT AN ALTERNATIVE DEVICE, YOU WILL NEED TO DISCONNECT THE CONNECTED DEVICE FIRST!!**


### TROUBLE SHOOTING

- In the event all the 'above' steps have been followed and there is no BT sound coming from the speaker system - please check the following:
- The BT light is illuminated on the touchpad.
- YES: Power OFF - then ON, both the speaker system and device. Repeat above connection processes.
- NO: If all power and cable connections are correct, as per the bed system user manual - please call the product support line 01462 600 064 (PLEASE ENSURE YOU HAVE YOUR PURCHASE INFORMATION TO HAND AND YOU ARE IN CLOSE PROXIMITY TO THE PRODUCT BEFORE CALLING!!) 9am - 5pm.


## HOLES DETAIL FOR FIXING LIFT UP MECHANISM

### DOUBLE BED

LEFT SIDE LIFT UP  
FOR DOUBLE BED  
(VIEW ON HEAD END)

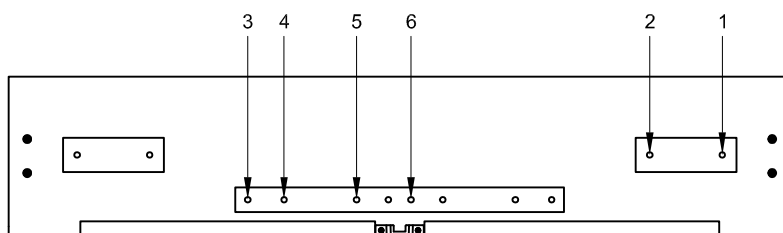


RIGHT SIDE LIFT UP  
FOR DOUBLE BED  
(VIEW ON HEAD END)

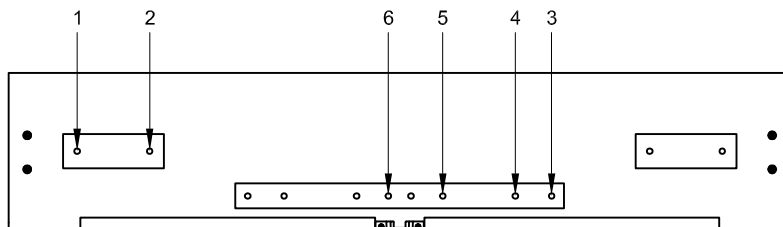


### KING BED

LEFT SIDE LIFT UP  
FOR KING BED  
(VIEW ON HEAD END)

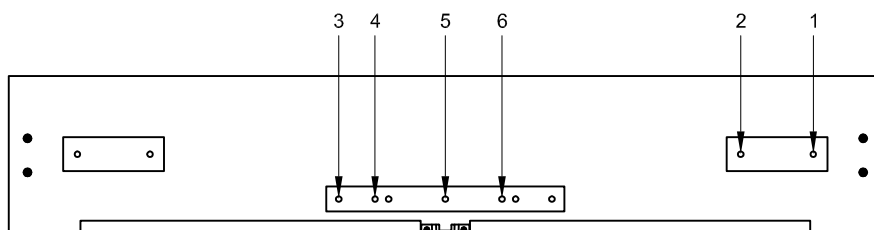


RIGHT SIDE LIFT UP  
FOR KING BED  
(VIEW ON HEAD END)

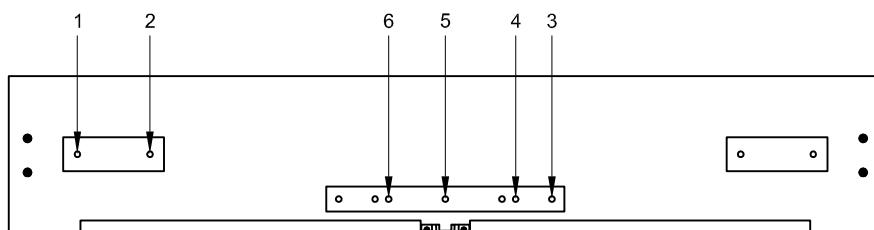


### SUPER KING BED

LEFT SIDE LIFT UP  
FOR SUPER KING BED  
(VIEW ON HEAD END)

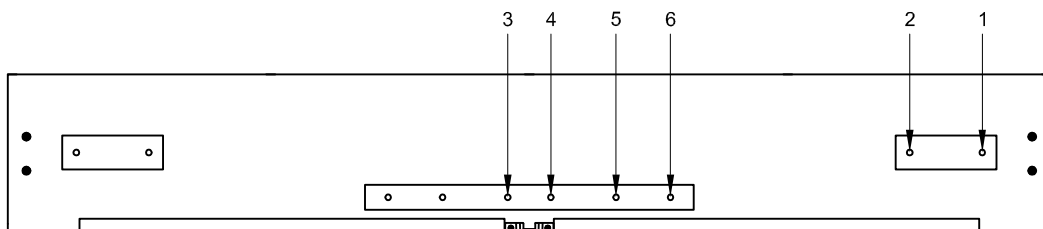


RIGHT SIDE LIFT UP  
FOR SUPER KING BED  
(VIEW ON HEAD END)

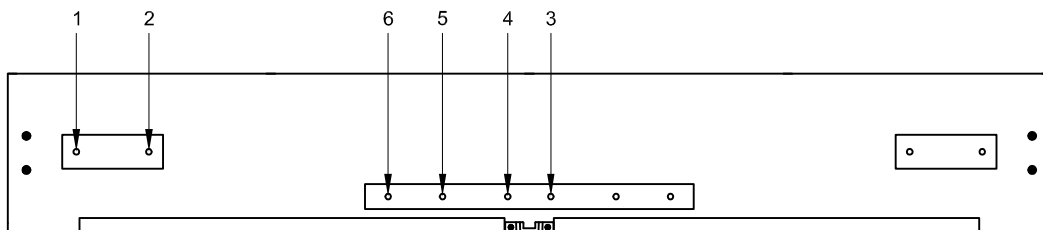

## Step 18







- Take out the bolt and washer from head and foot ends.
- Attach the lift up mechanism using the bolt and washer.

**CAUTION:** At this point is important to know that the speakers are vulnerable to damage if caution is not observed.

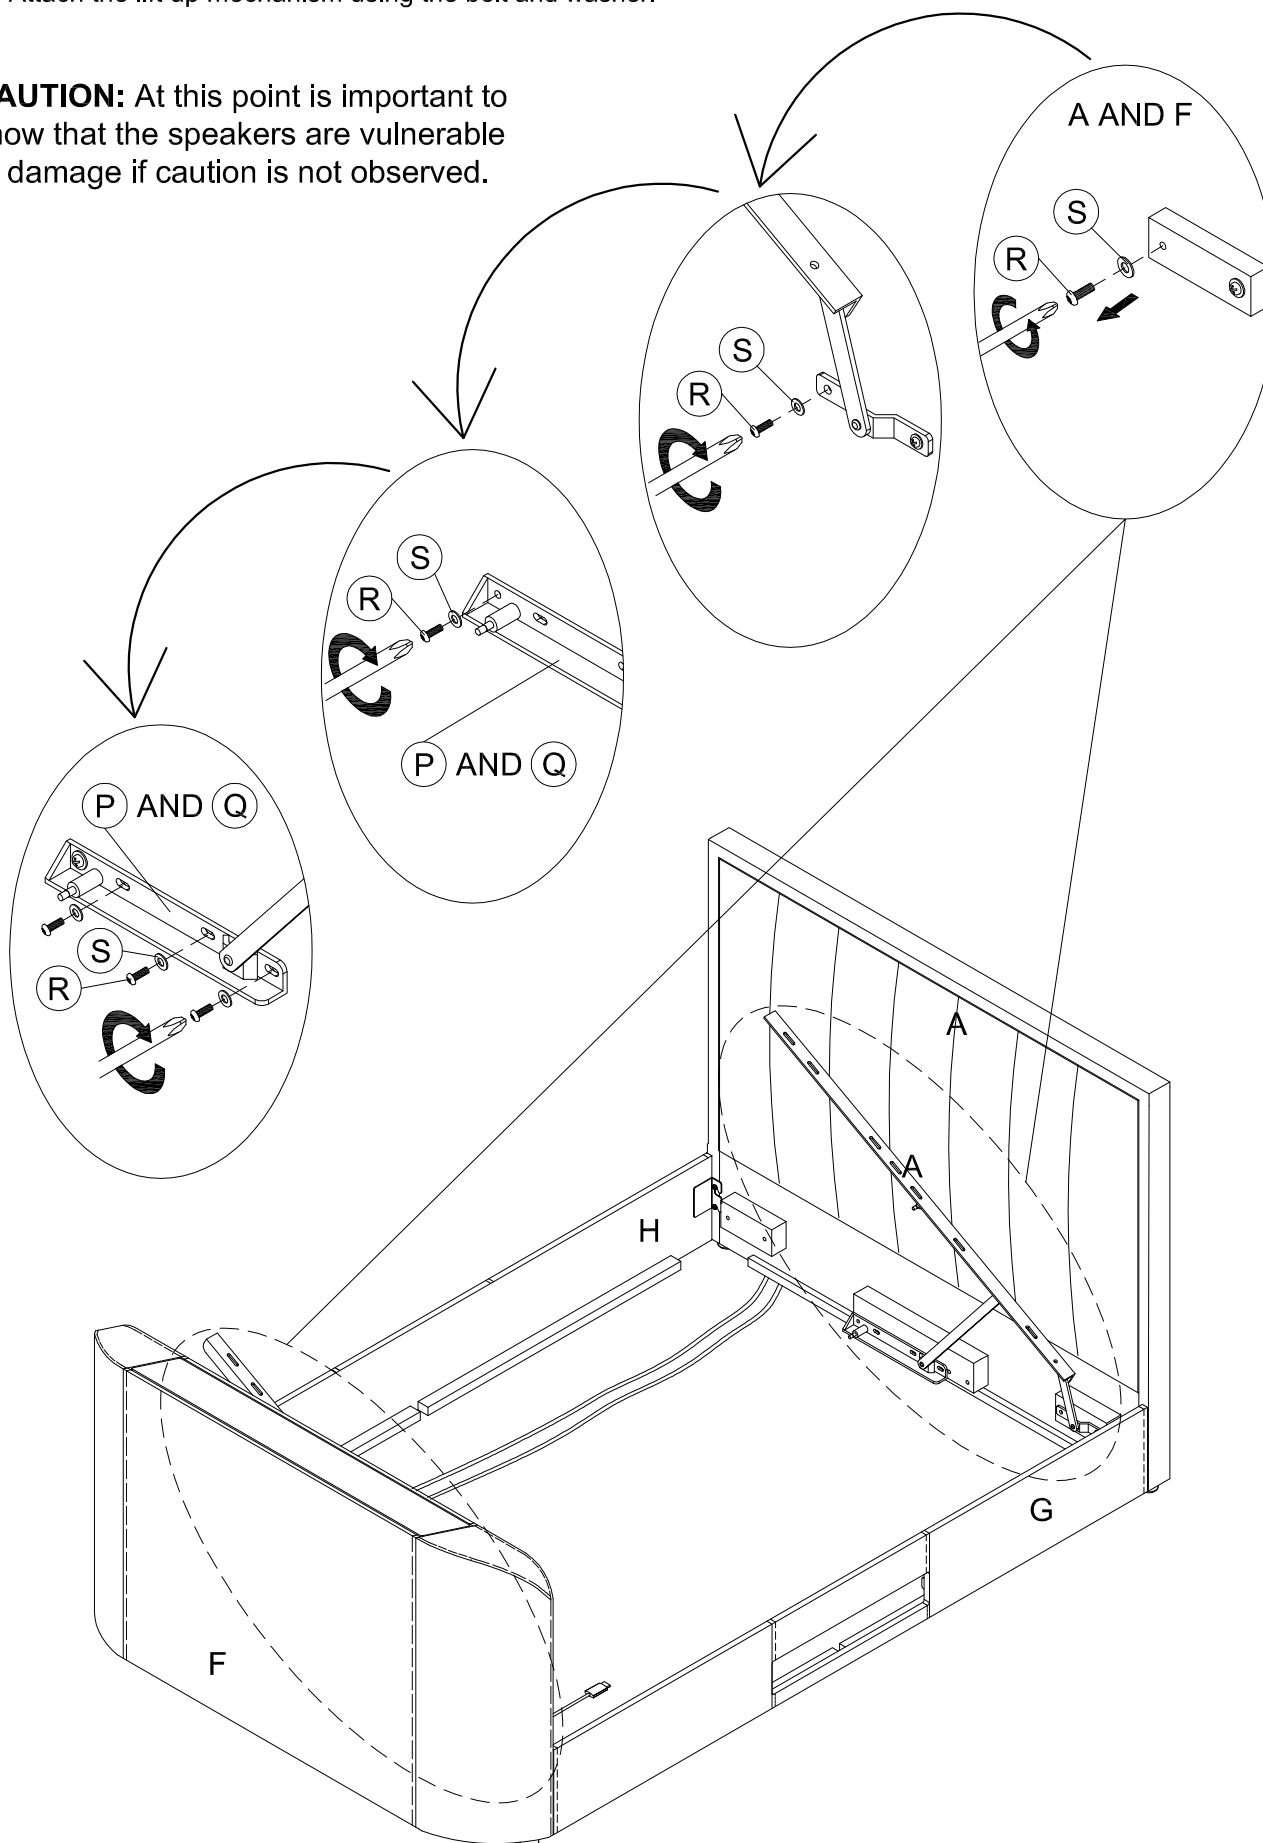

## Step 19

- Attach the gas spring to the lift up mechanism using the nylon nut.

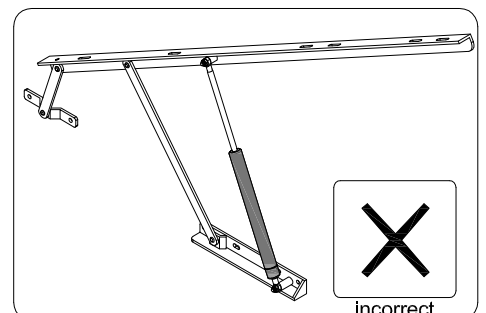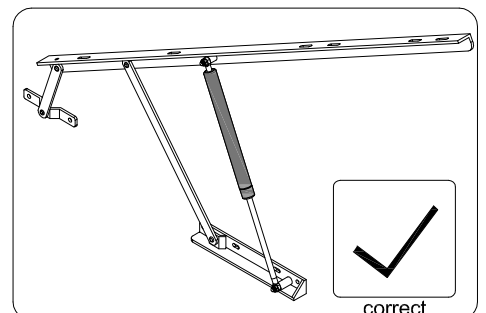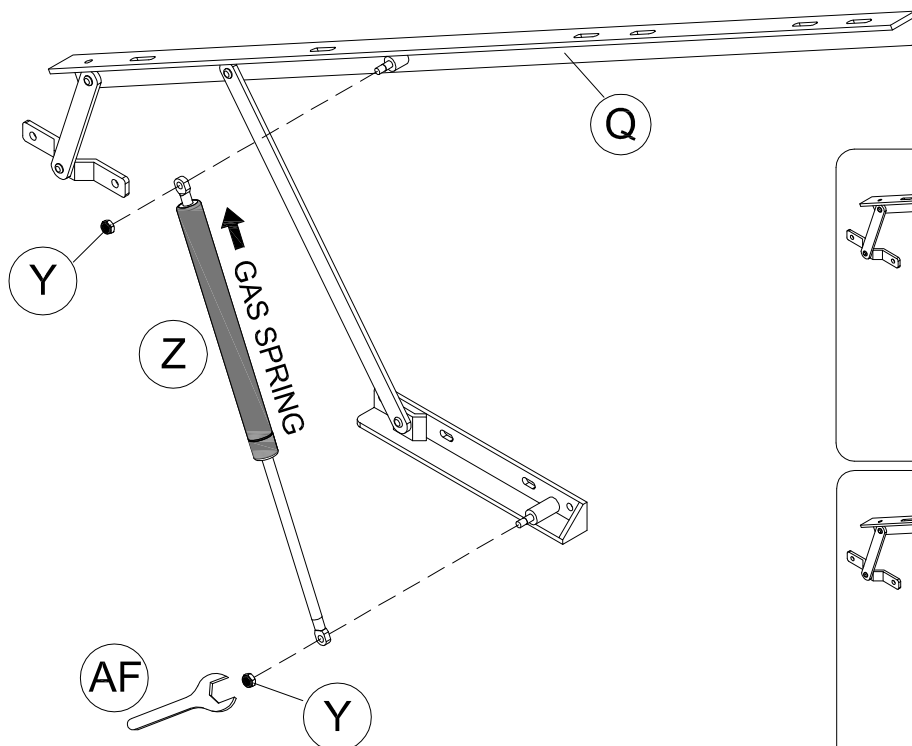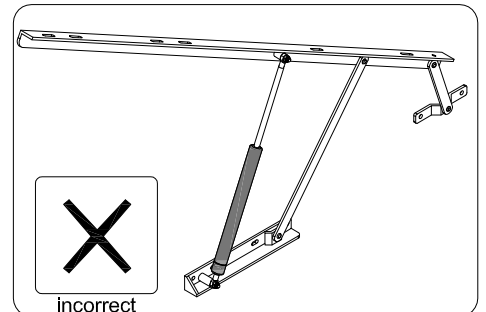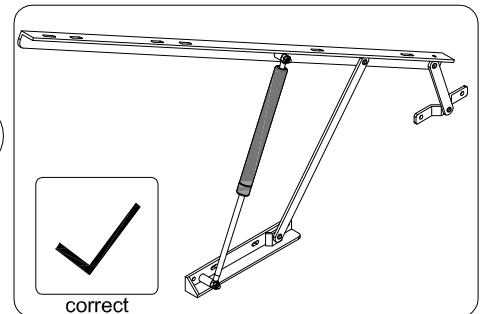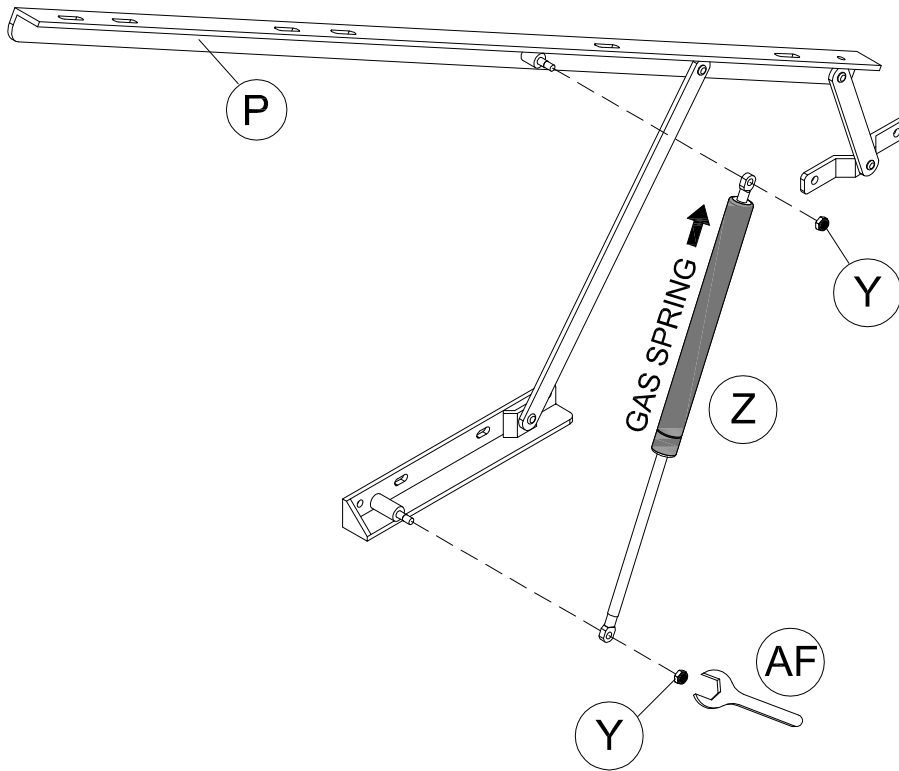


**FULLY TIGHTEN ALL NUTS AFTER ATTACHING THE PISTONS.**




## Step 20

- Take out the all the screw and washer from lift base (N) and lift base (O) as shown.
- Assemble the stud bolt 'AG' to the first hole for back lift base 'O'.

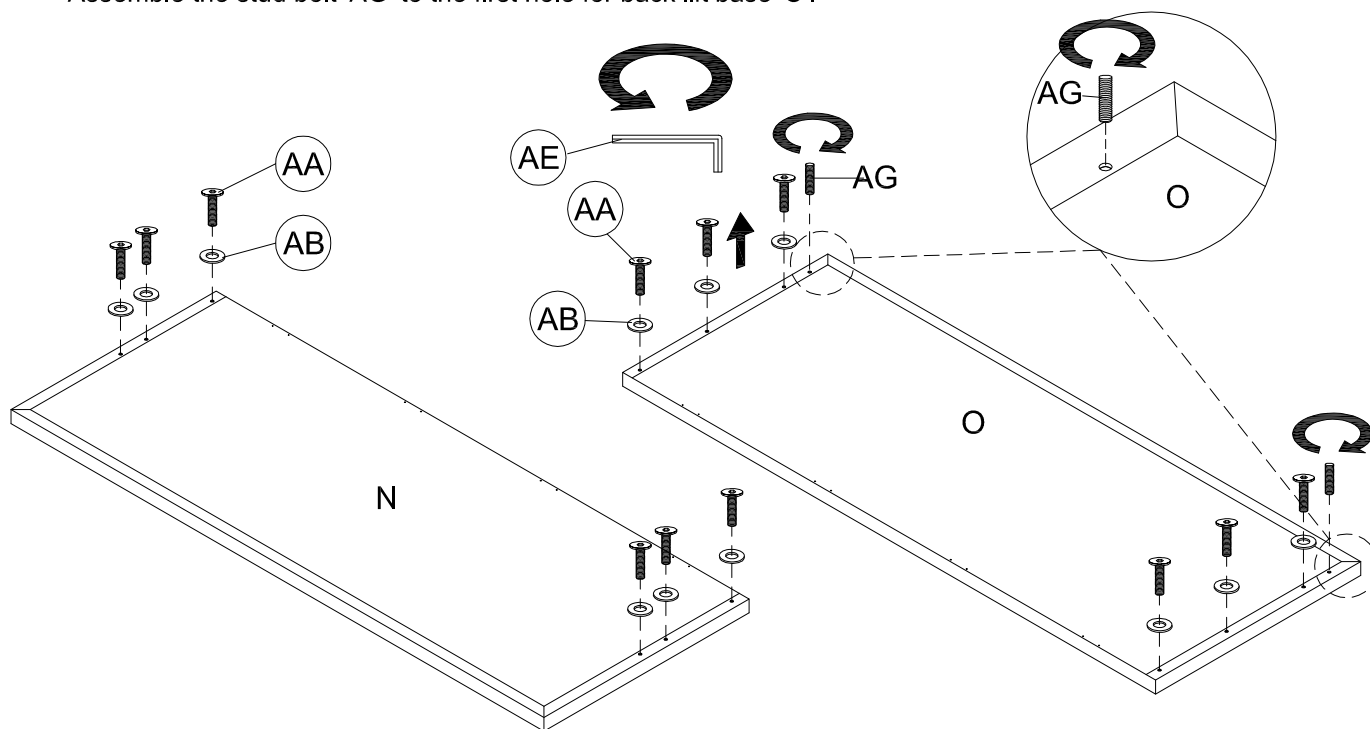



## Step 21

- Attach the handle to lift base (N) with screw (AA) and washer (AB).
- Attach the mattress stopper (AC) to list base (O) .

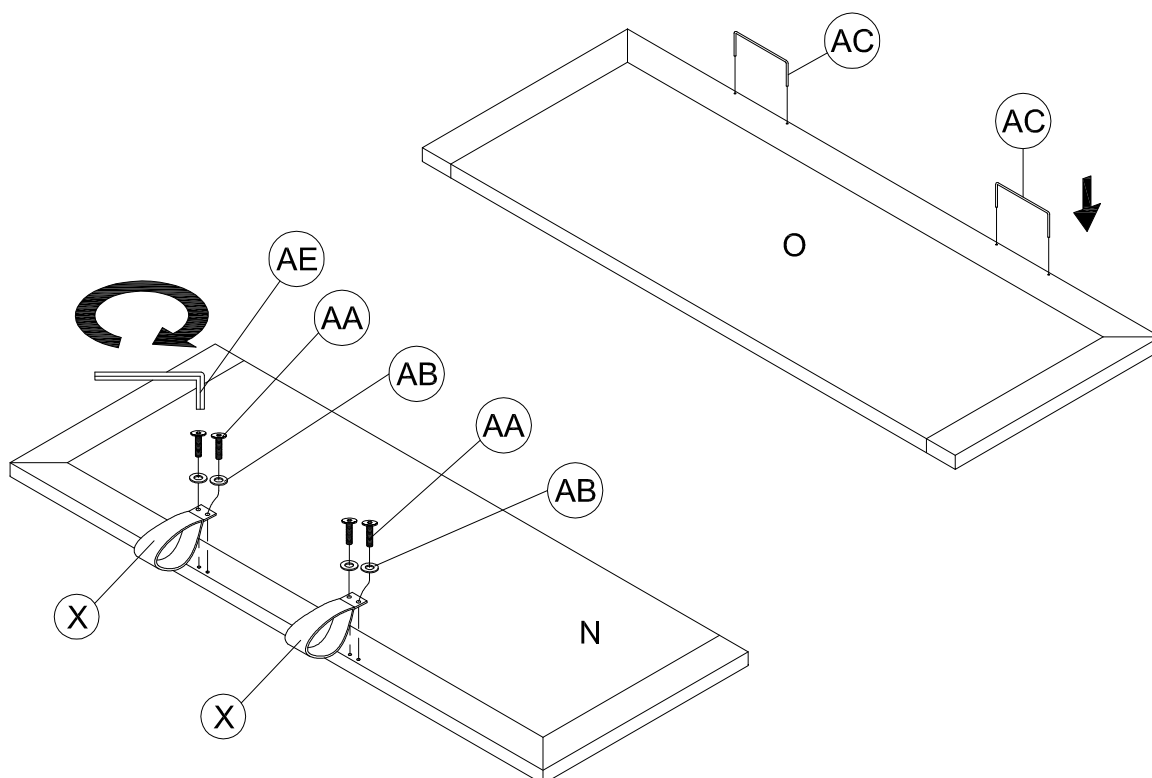


## Step 22

- First put the back lift base 'O' on top of lift up mechanism 'P' and 'Q' with the provided stud bolts (AG) as per step 23 to the first hole for safety and to prevent the lift base from dropping down.
- Then affix all the screws and washers to the underside of lift base (O), using the allen key to tighten all the screws as shown.

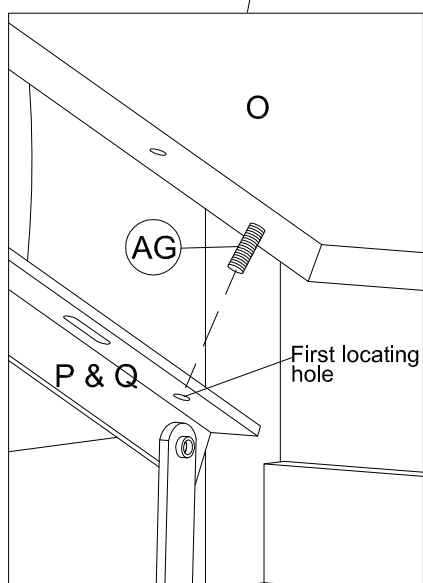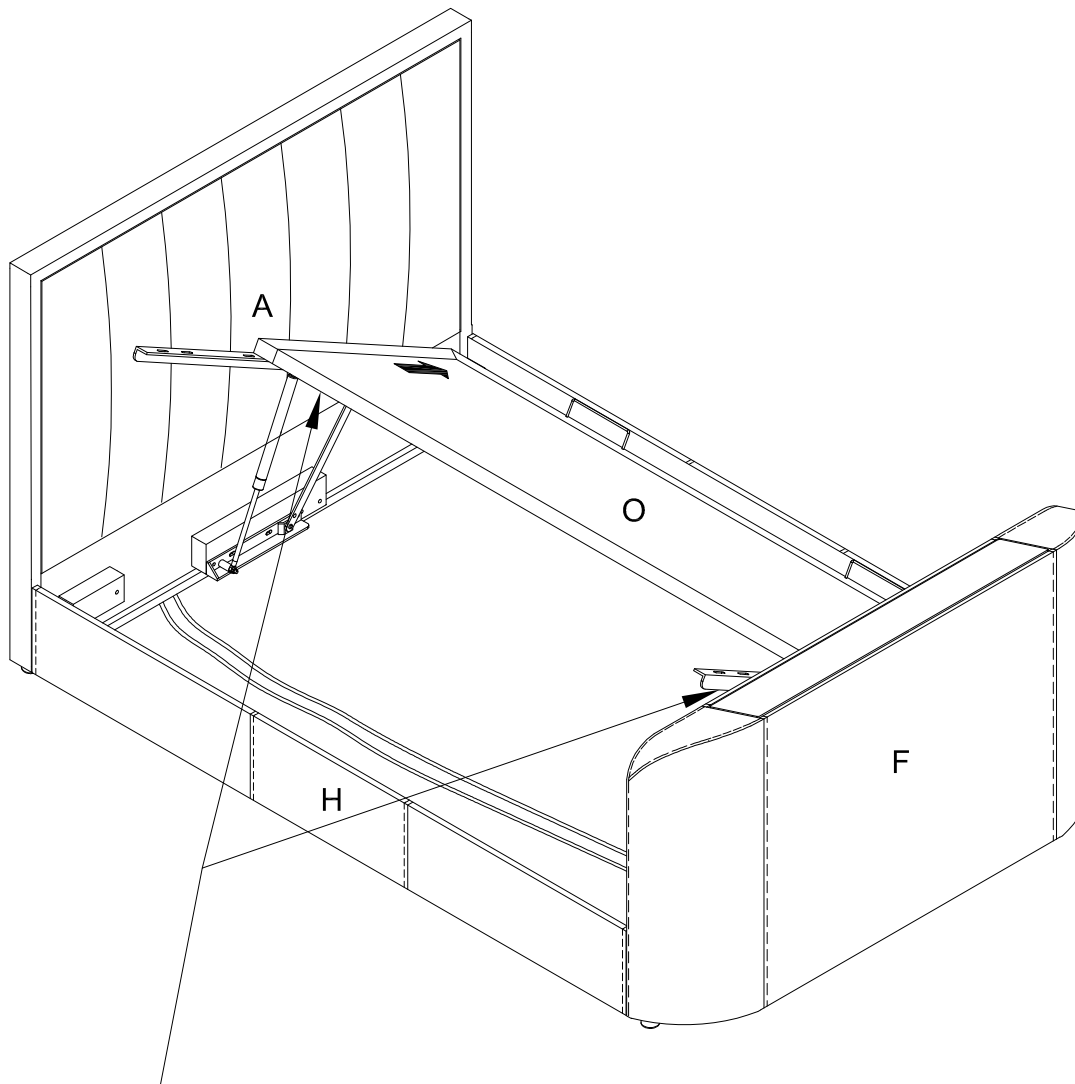


UNDERNEATH  
VIEW

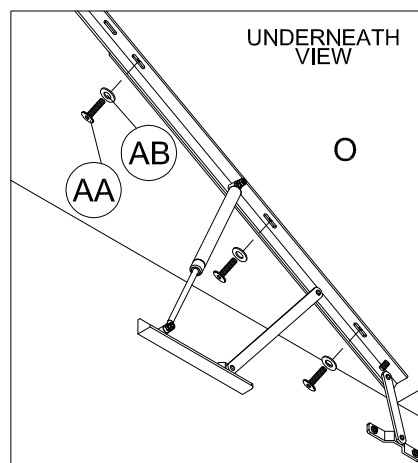

UNDERNEATH  
VIEW

## Step 23


- Attach the bottom cross rail (long) (I) & bottom cross rail (short) (J) to the headboard, footboard and side rail as shown. Being carefull not to catch the fabric.
- Attach the bottom cross rail (long) (I) to the side rail (H) & (G) and the bottom cross rail (short) X2 pcs (J) to the headboard (A) and footboard (F) as shown (STEP 25.1),(STEP 25.2) & (STEP 25.3).

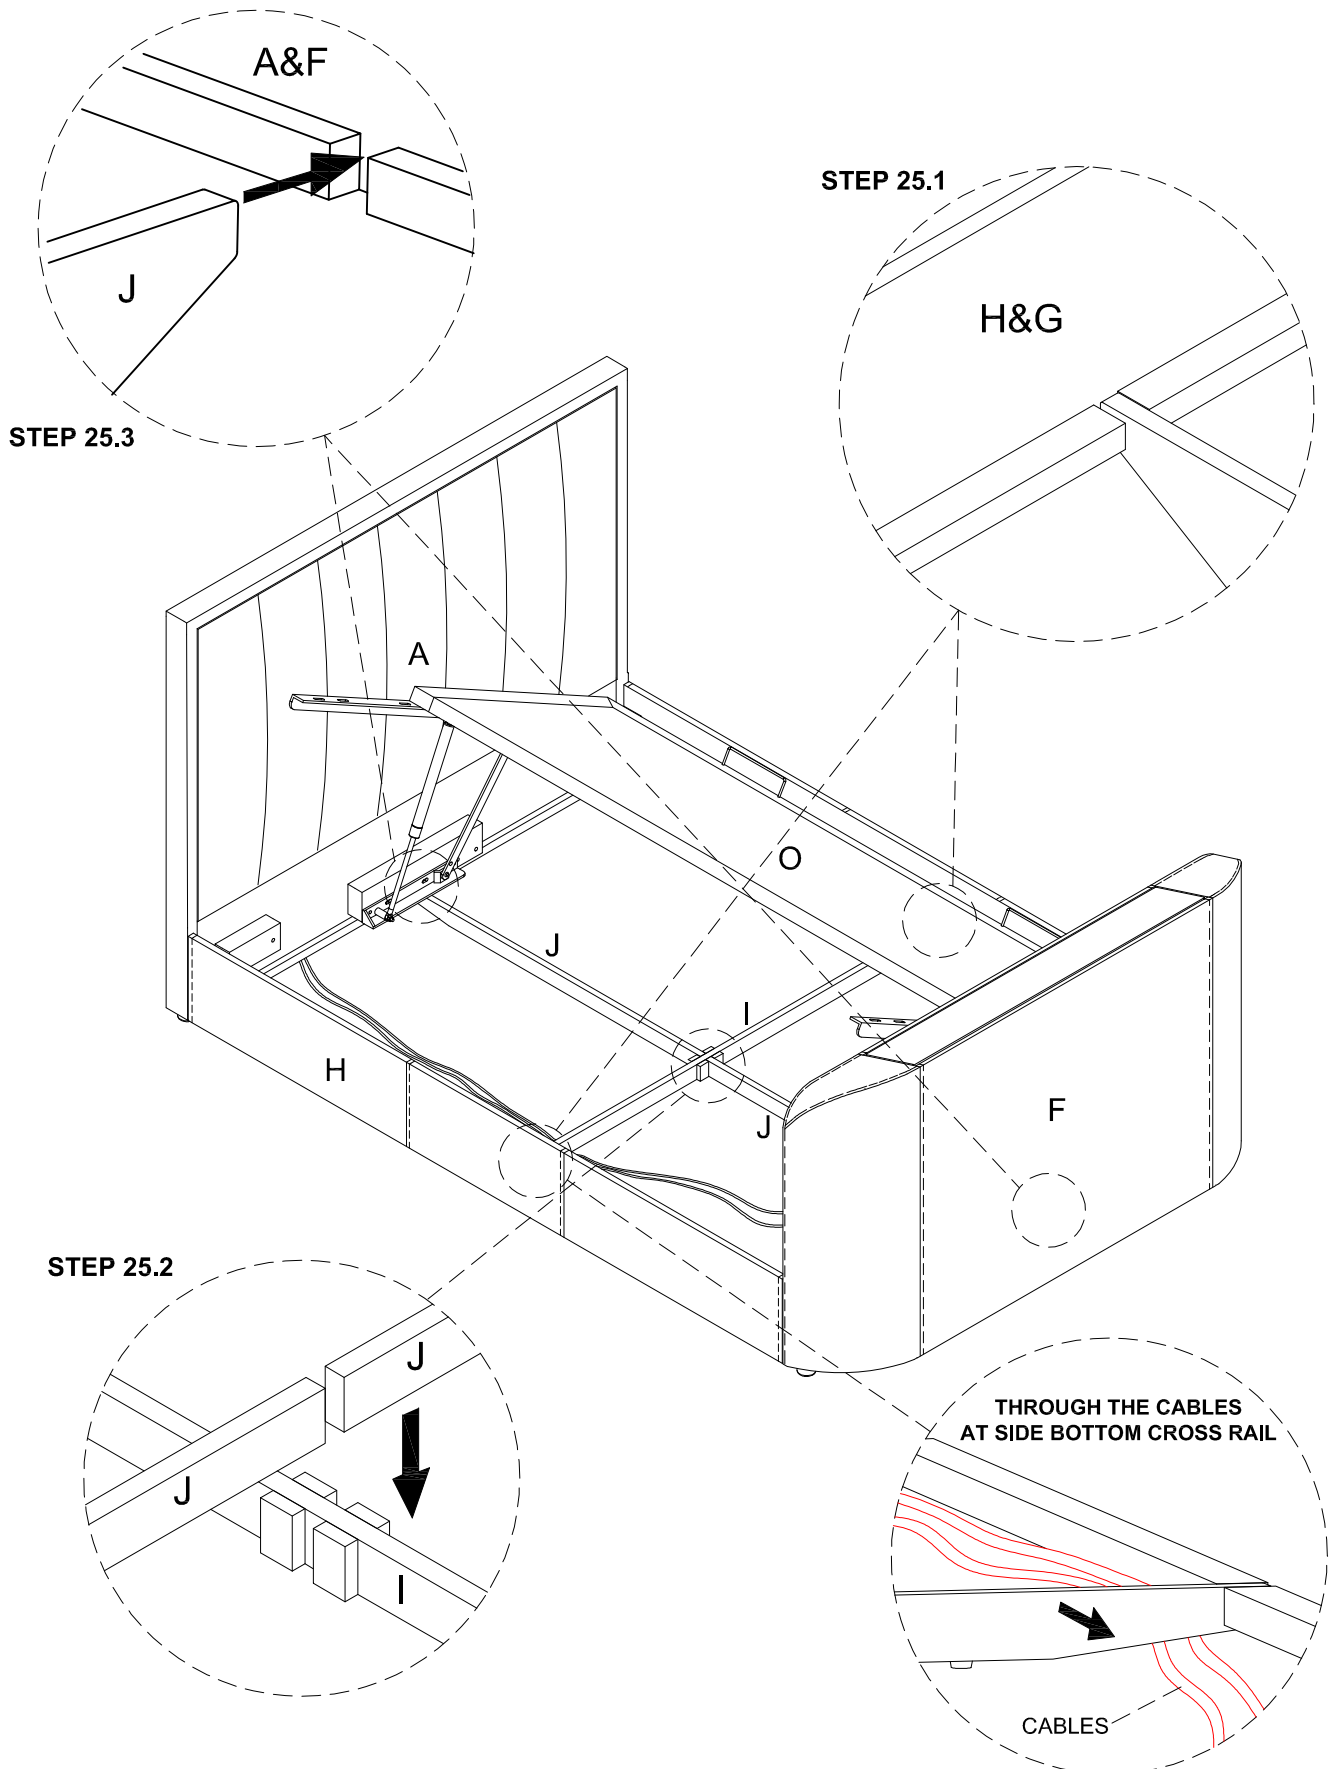


## Step 24

- Place the base panel (L) & base panel (K) on top of the bottom cross rail.
- Then carefully slide the base panel to fit the location.

All TV, HDMI, Aerial, optical cables MUST go through this cable hole before the base panel fit the location.

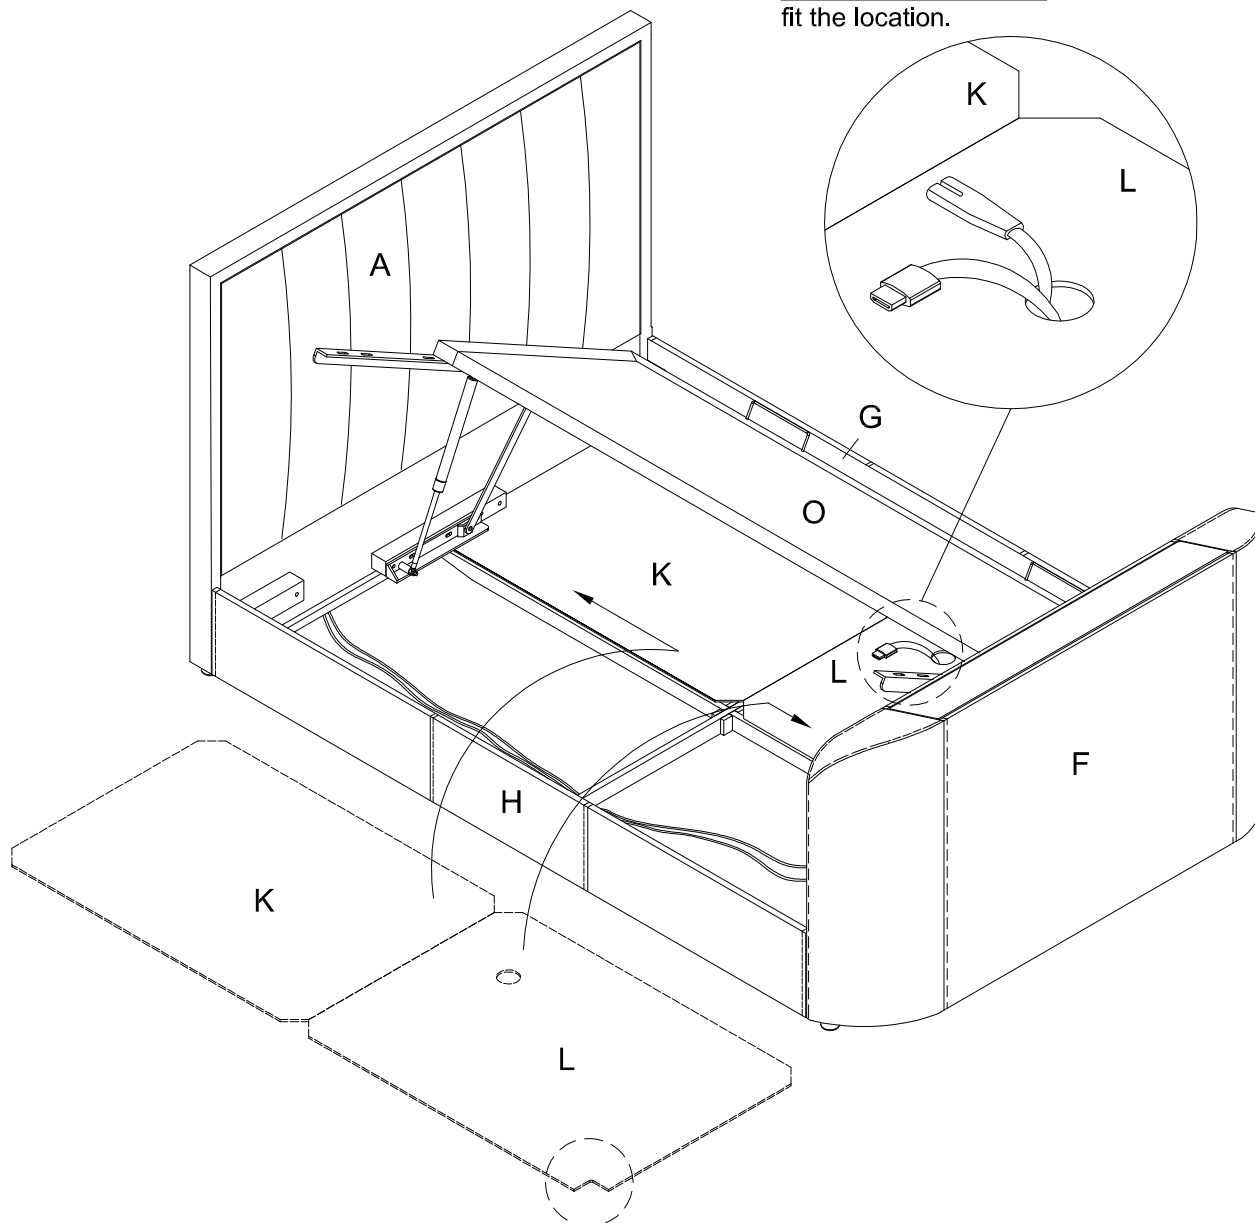


- **Optional-Right side lift up**

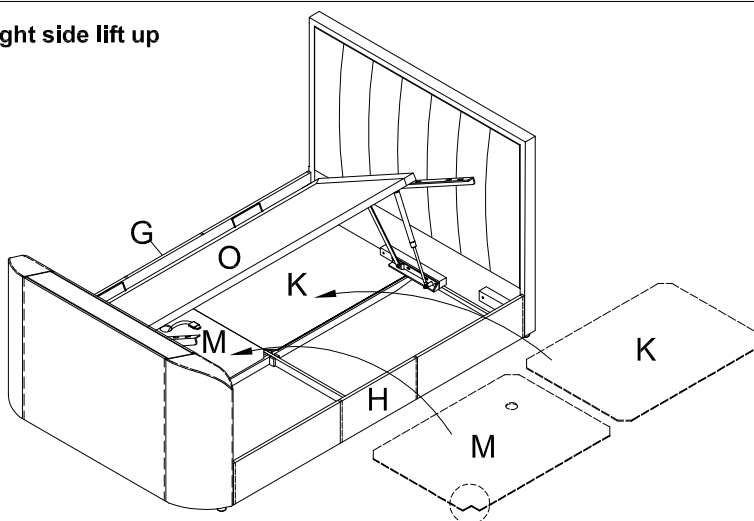


## Step 25

- You can now setup your media devices near the opening side.

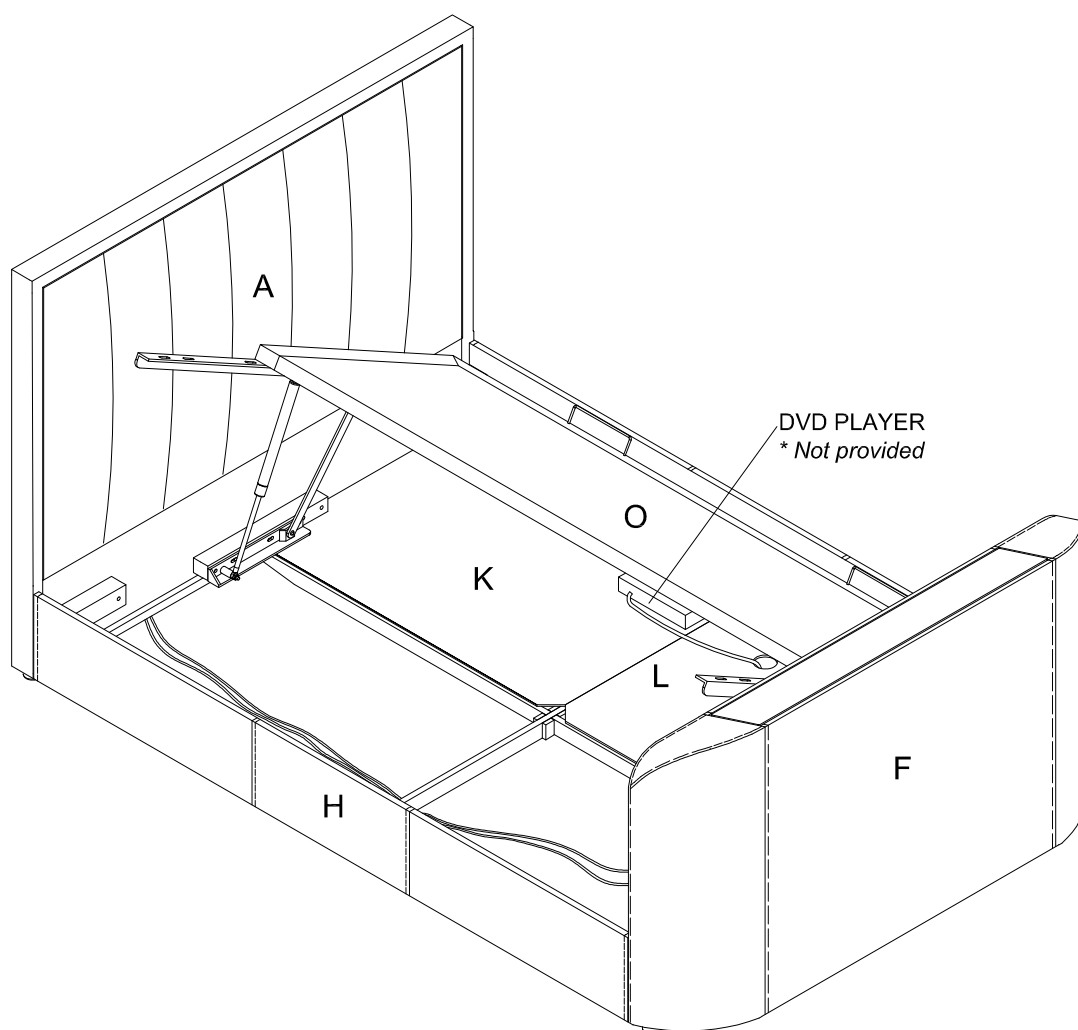


## Step 26

- Attach the lift base (N) on lift up mechanism using screw and washer as shown.

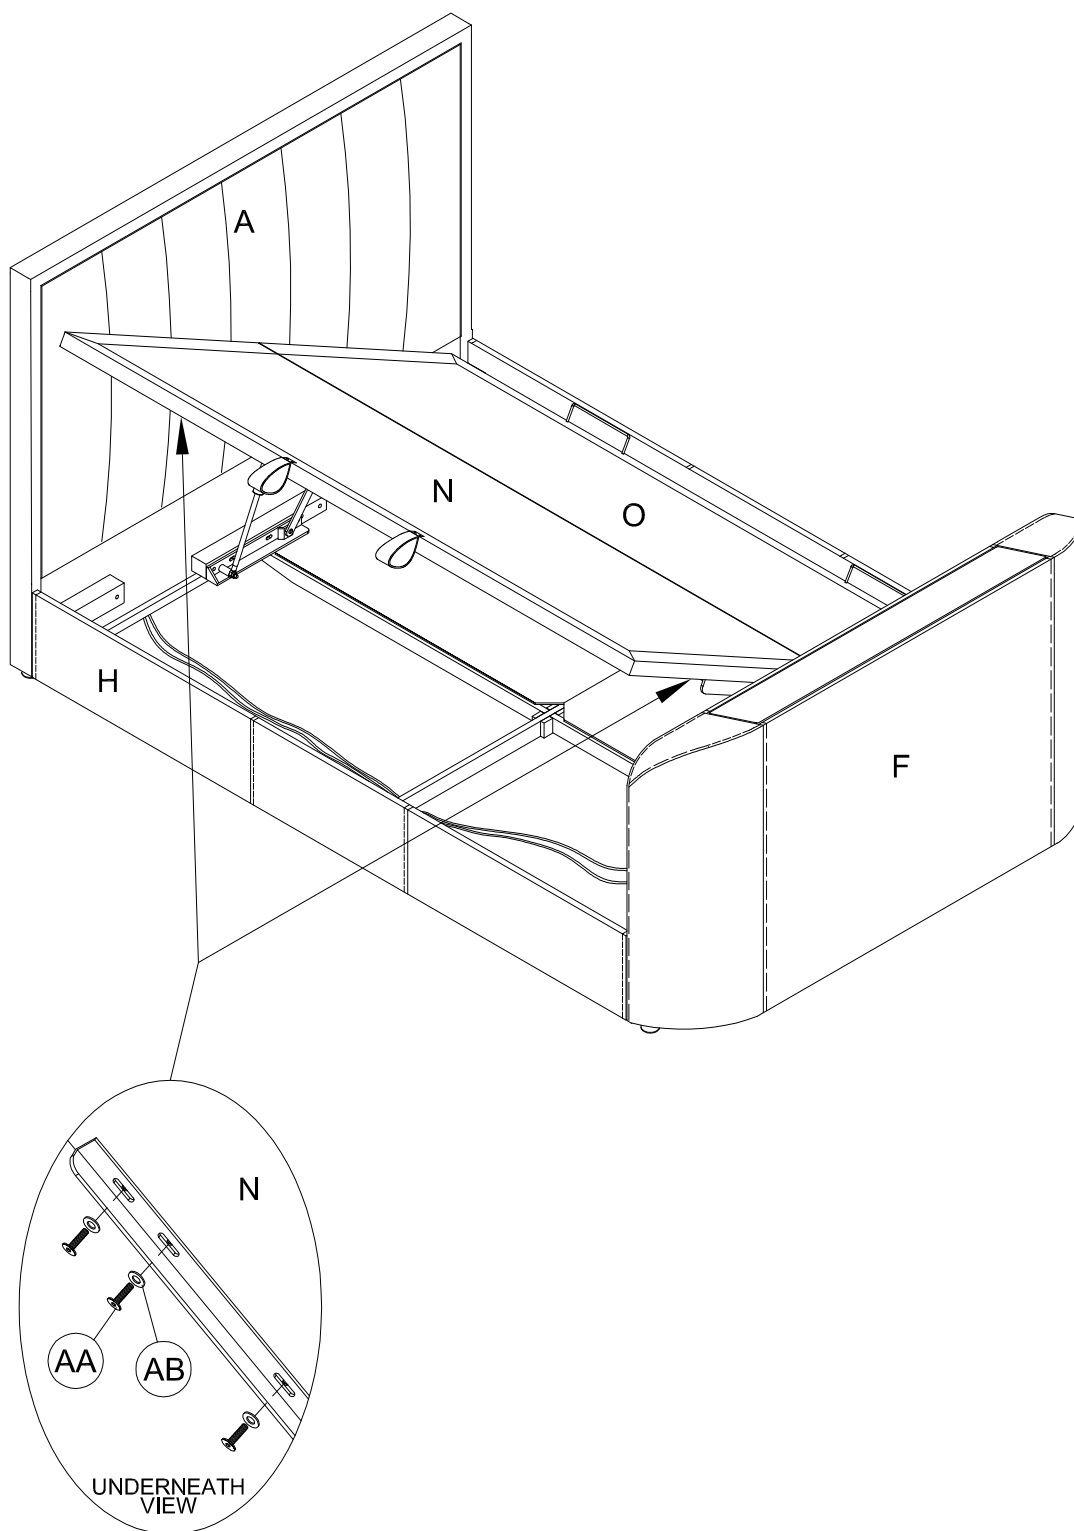


## Step 27

- Attach the metal plate (W) to the bottom of lift base (N) & (O) with screw (V) as shown.

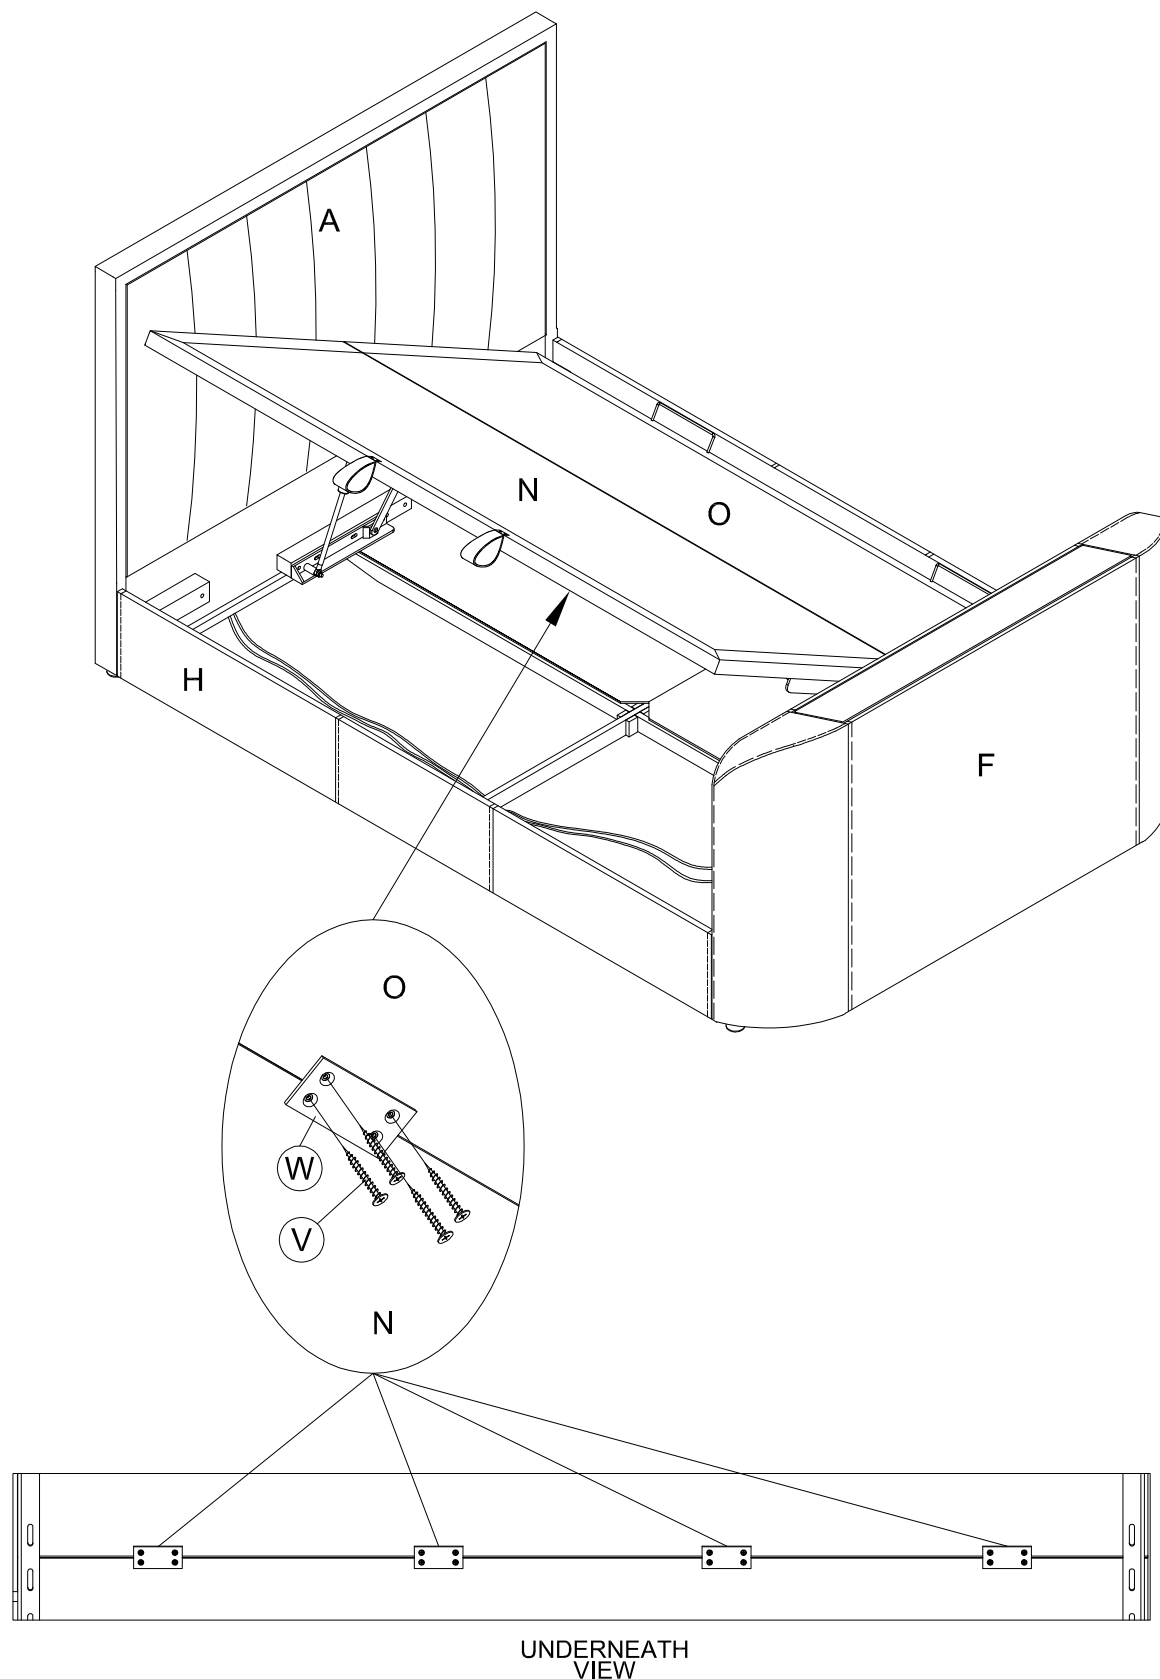


## Step 28

- Place the base panel (K) & base panel (M) on top of the bottom cross rail.
- Then carefully slide the base panel to fit the location.

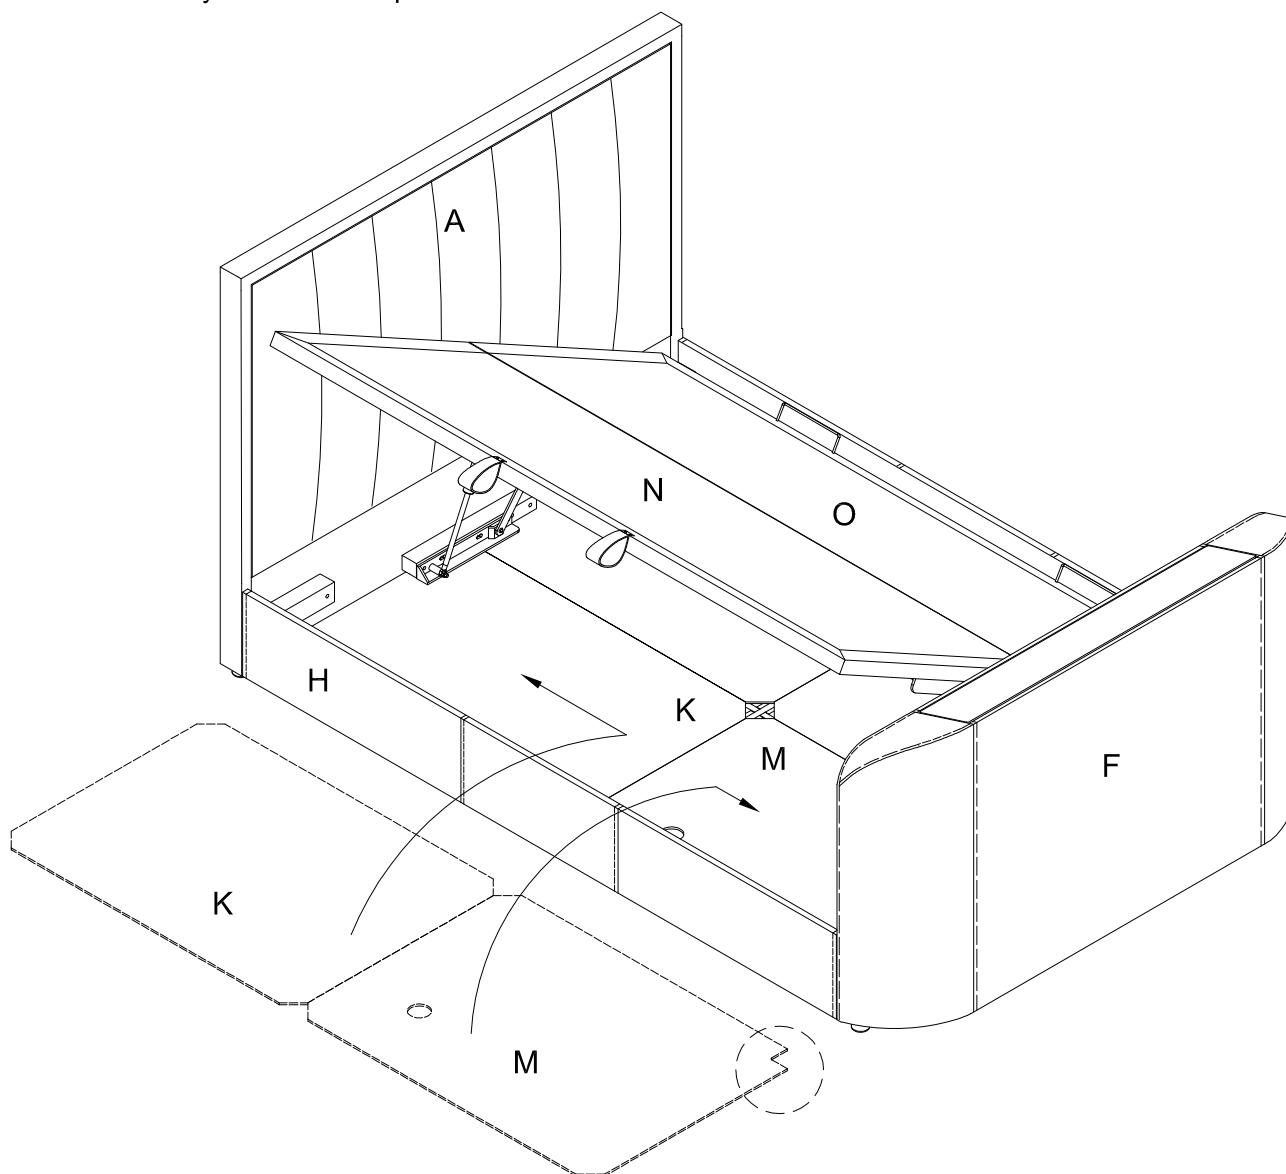


- **Optional-Right side lift up**

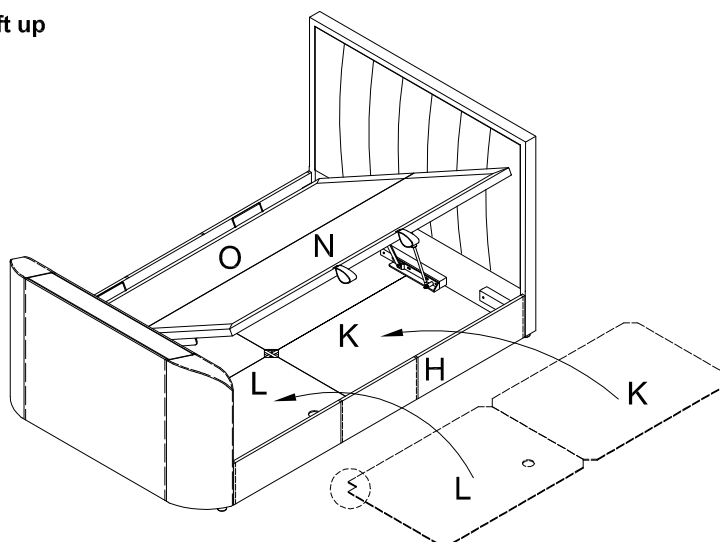




## Step 29

- Attach "DVD / Media Compartment" side and back panels to "DVD / Media Compartment" top panel as shown.

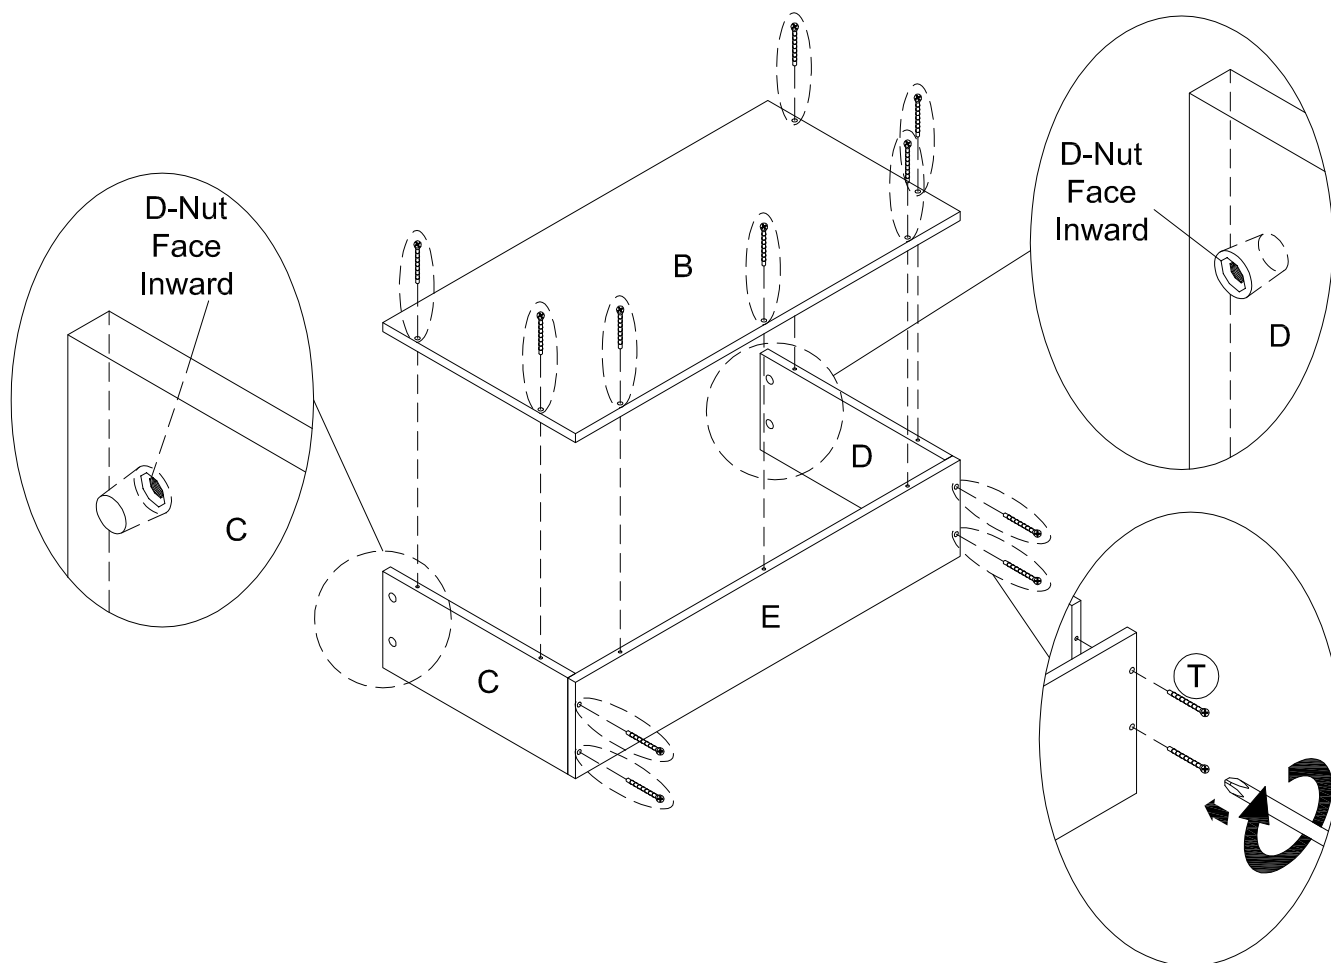


## Step 30

- Attach the bolts (U) to the outside of "DVD / Media Compartment" side panels as shown.

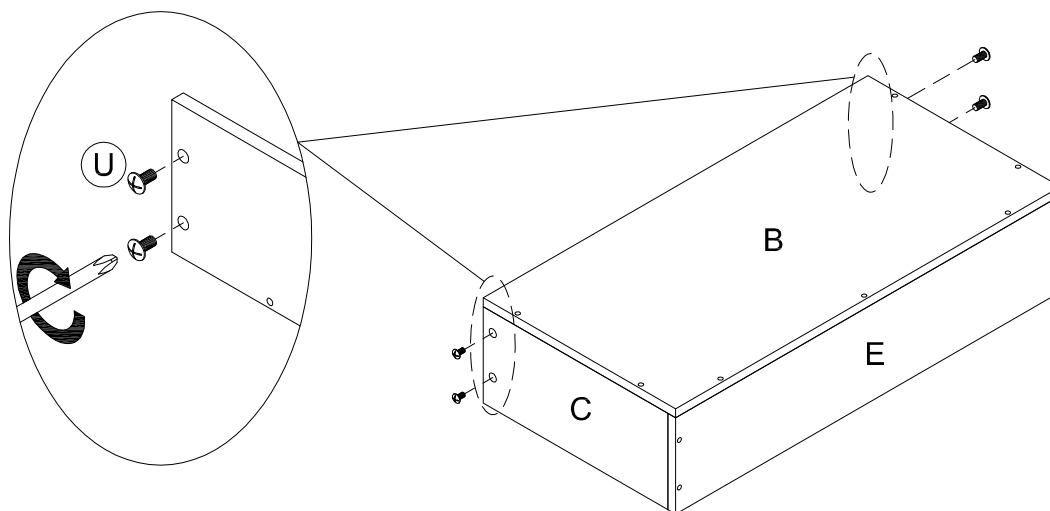



## Step 31

- Attach the "DVD / Media Compartment" to the side rail and fully tighten bolts (U) as shown.

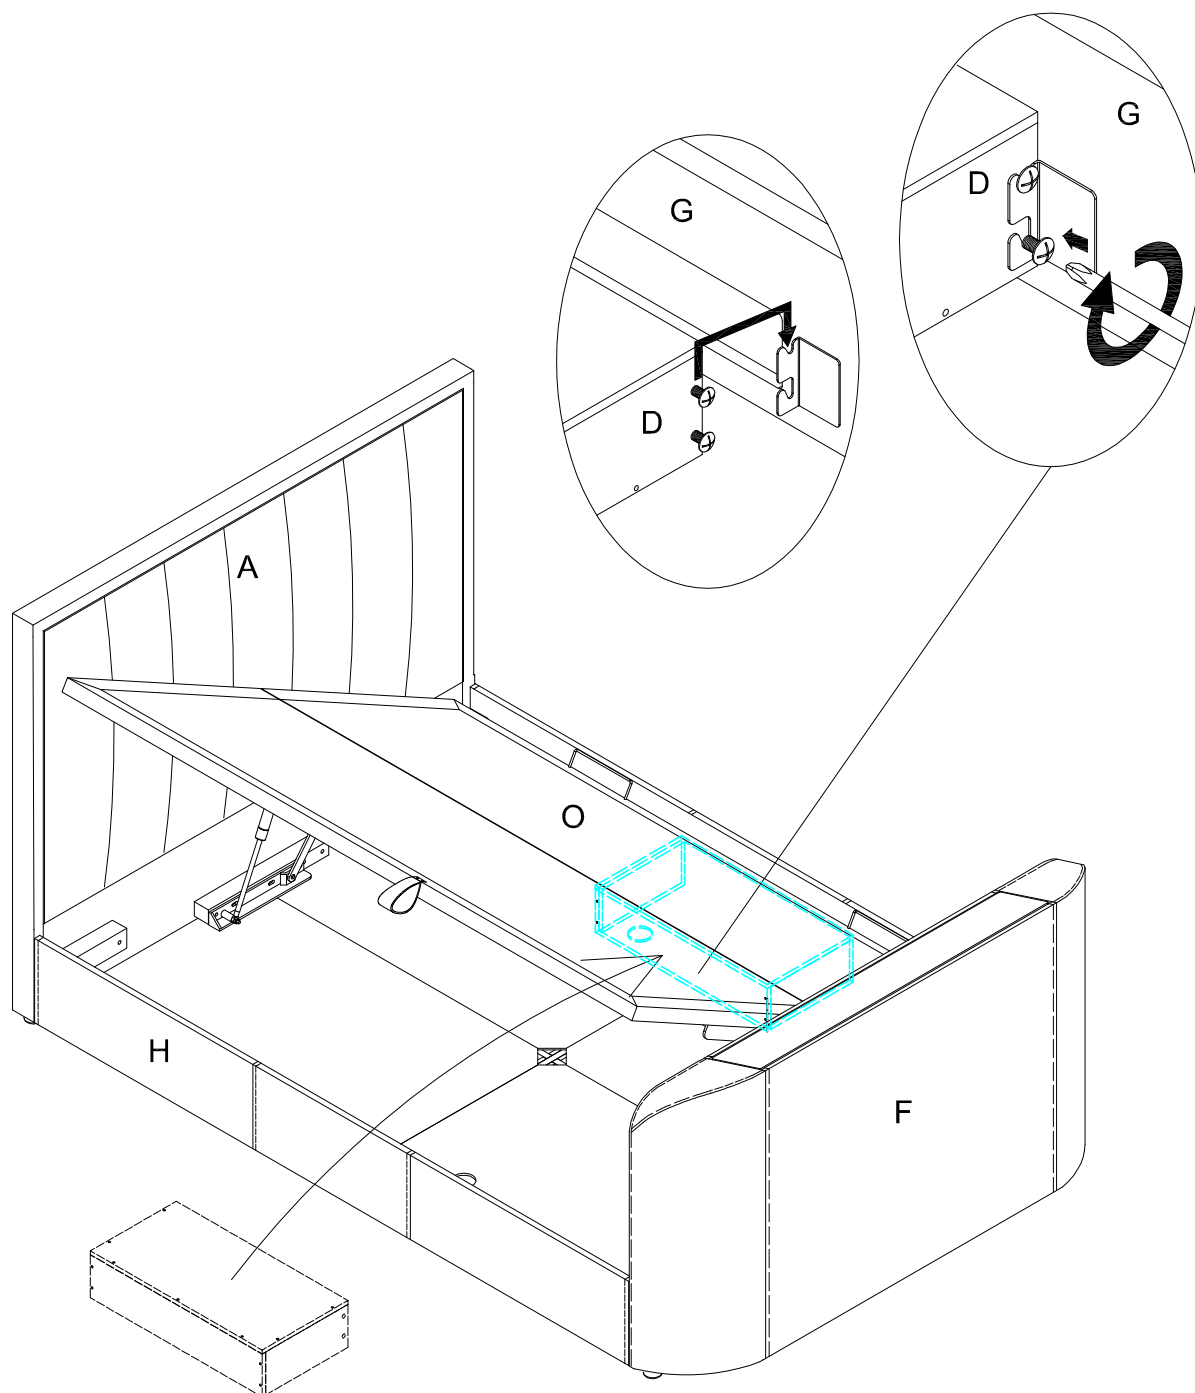


## Step 32

- Attach the remote control pocket to the left or the right side rail as preferred.

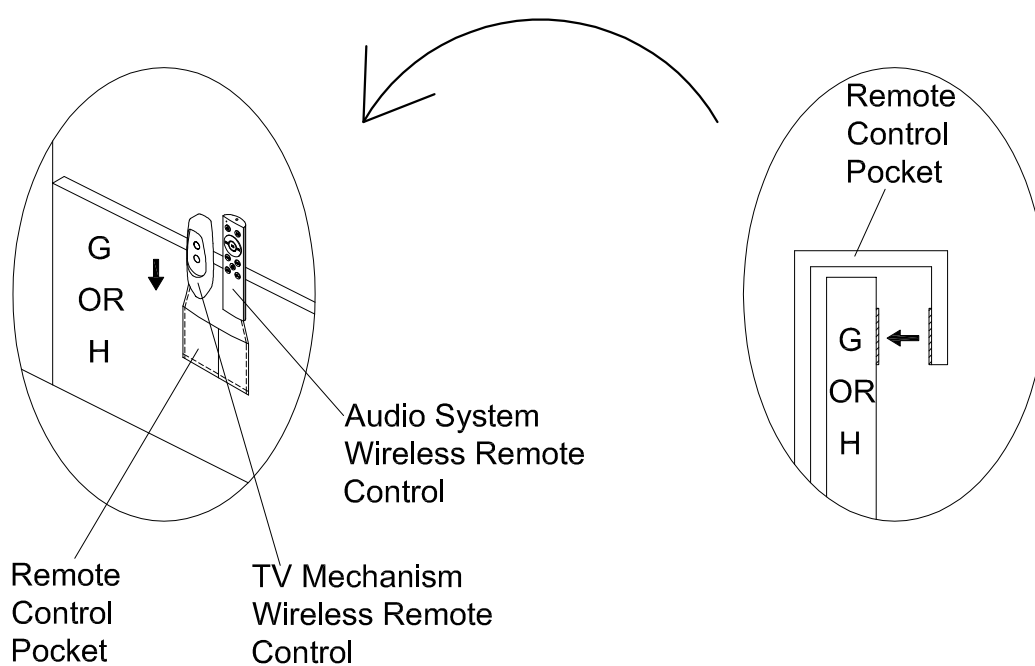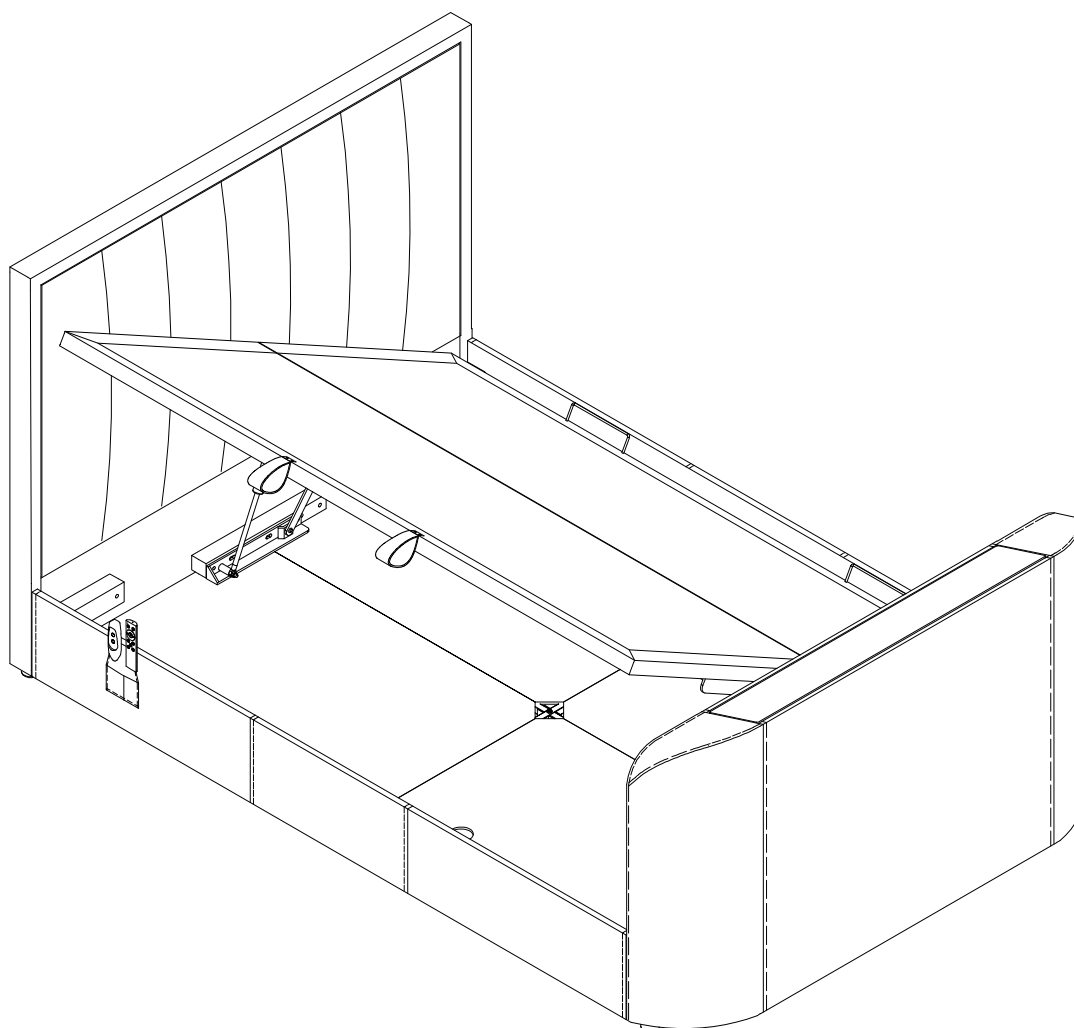

### Step 33

- Attach the mattress before operating the lift base.

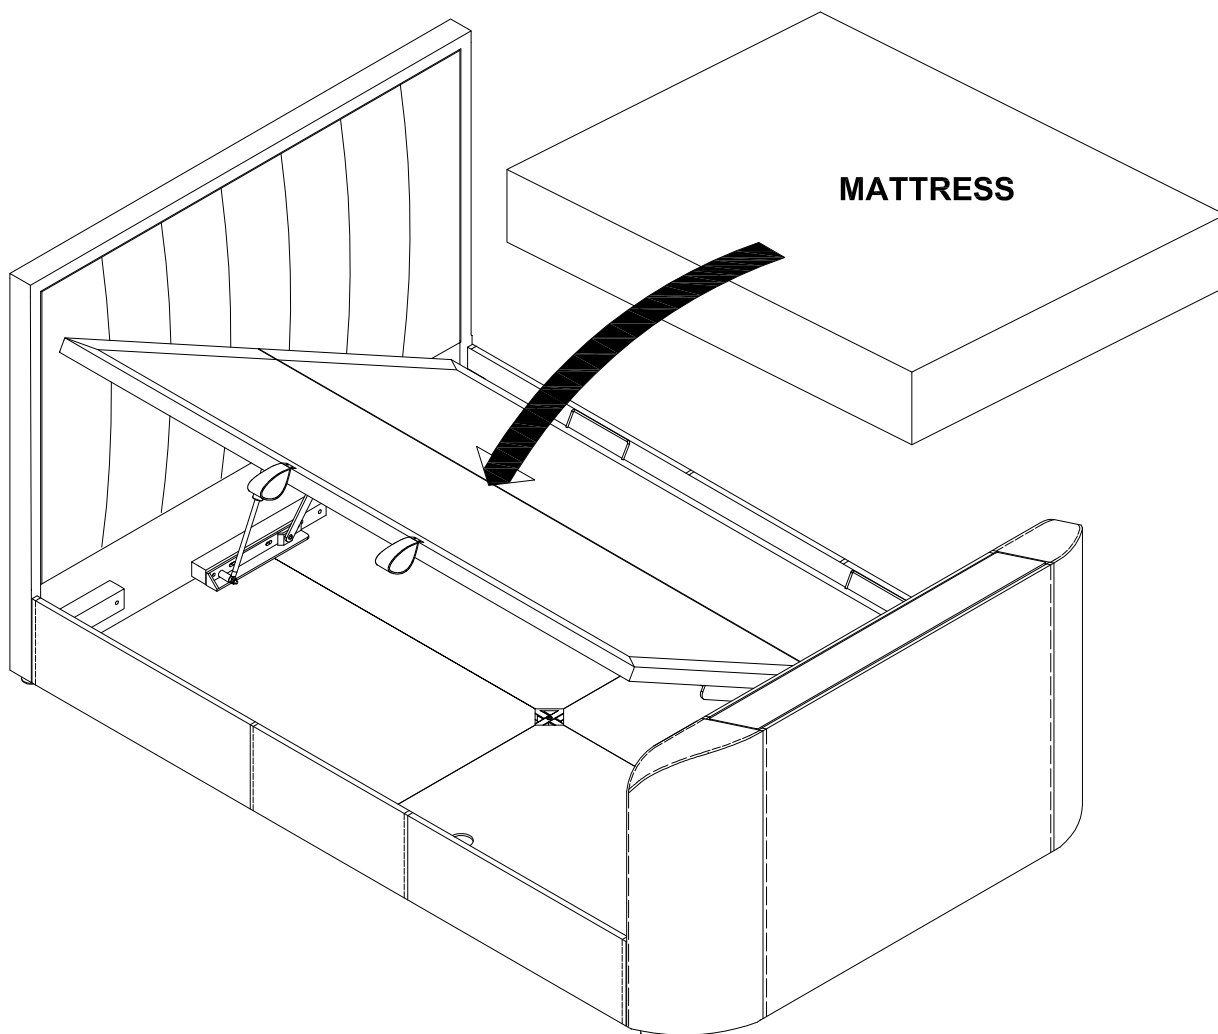


- A. This Lift Mechanism provides assistance with the lift of the mattress fitted to the base - it does not lift the mattress for you. The system has been designed to effectively lift the base system fitted with a variety of mattress weights and combinations of depth. The combination of mattress weight and depth determines the degree of assistance provided by the mechanism.
- B. Following installation of the mechanism **lift / pull** the base up and down a few times to free off the system - the gas cylinders fitted to the system may be stiff when first used or if the system has not been operated for a period of time .The mattress must be fitted to the base.
- C. Use the strap handle to lift up the mattress base using two hands - **Pull** the mattress base down using two hands equally spaced from the centre of the mattress base. **DO NOT** pull down on one side of the base only as this is likely to damage the base system with potential failure of the mattress base system and lift mechanism. **Do not operate the lift up mechanism without the mattress fitted to the base.**

#### CAUTION :

Do not allow children to operate the lift Mechanism.  
Do not allow children near the lift base when operating the Mechanism.  
Do not allow children in the area of the internal storage base.  
Keep hands clear of the mechanism when operating the base system.  
Do not stand inside the bed / on the internal storage base.  
Do not overload the internal storage base.



### Step 34

- Make sure the bed frame 4 side angles are at 90 degrees before you closing the lift base.

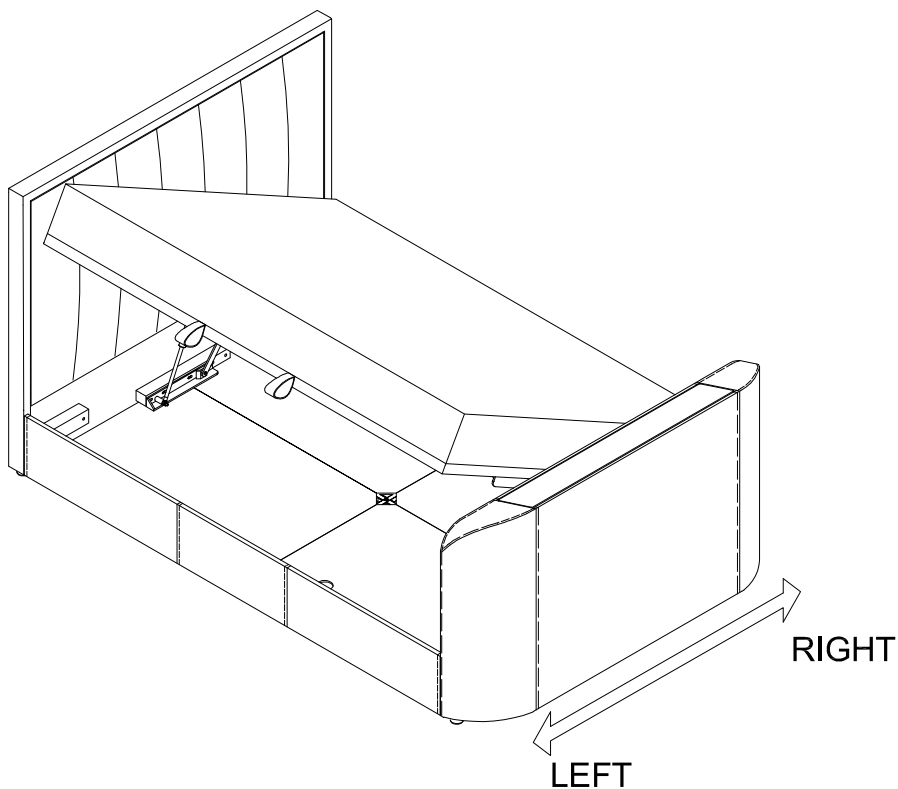


### Step 35

- The mattress must be fitted on the lift base. (Do not operate the lift up mechanism without the mattress fitted on the lift base.)
- Lift the frame with the mattress, up and down at least 20 times before use.

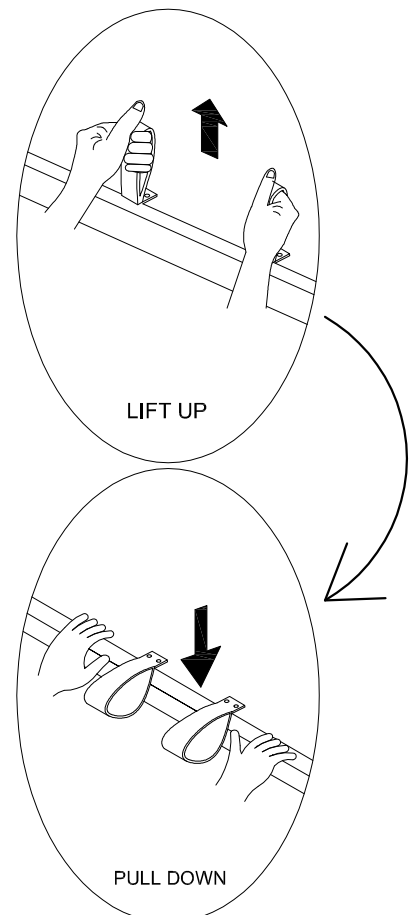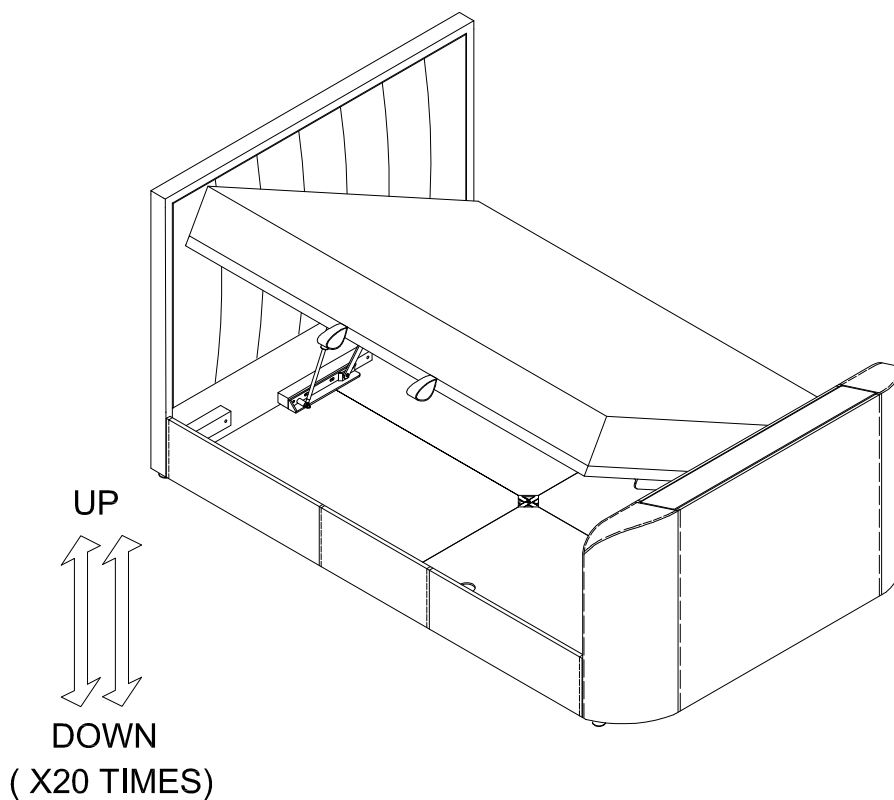


# TROUBLE SHOOTING

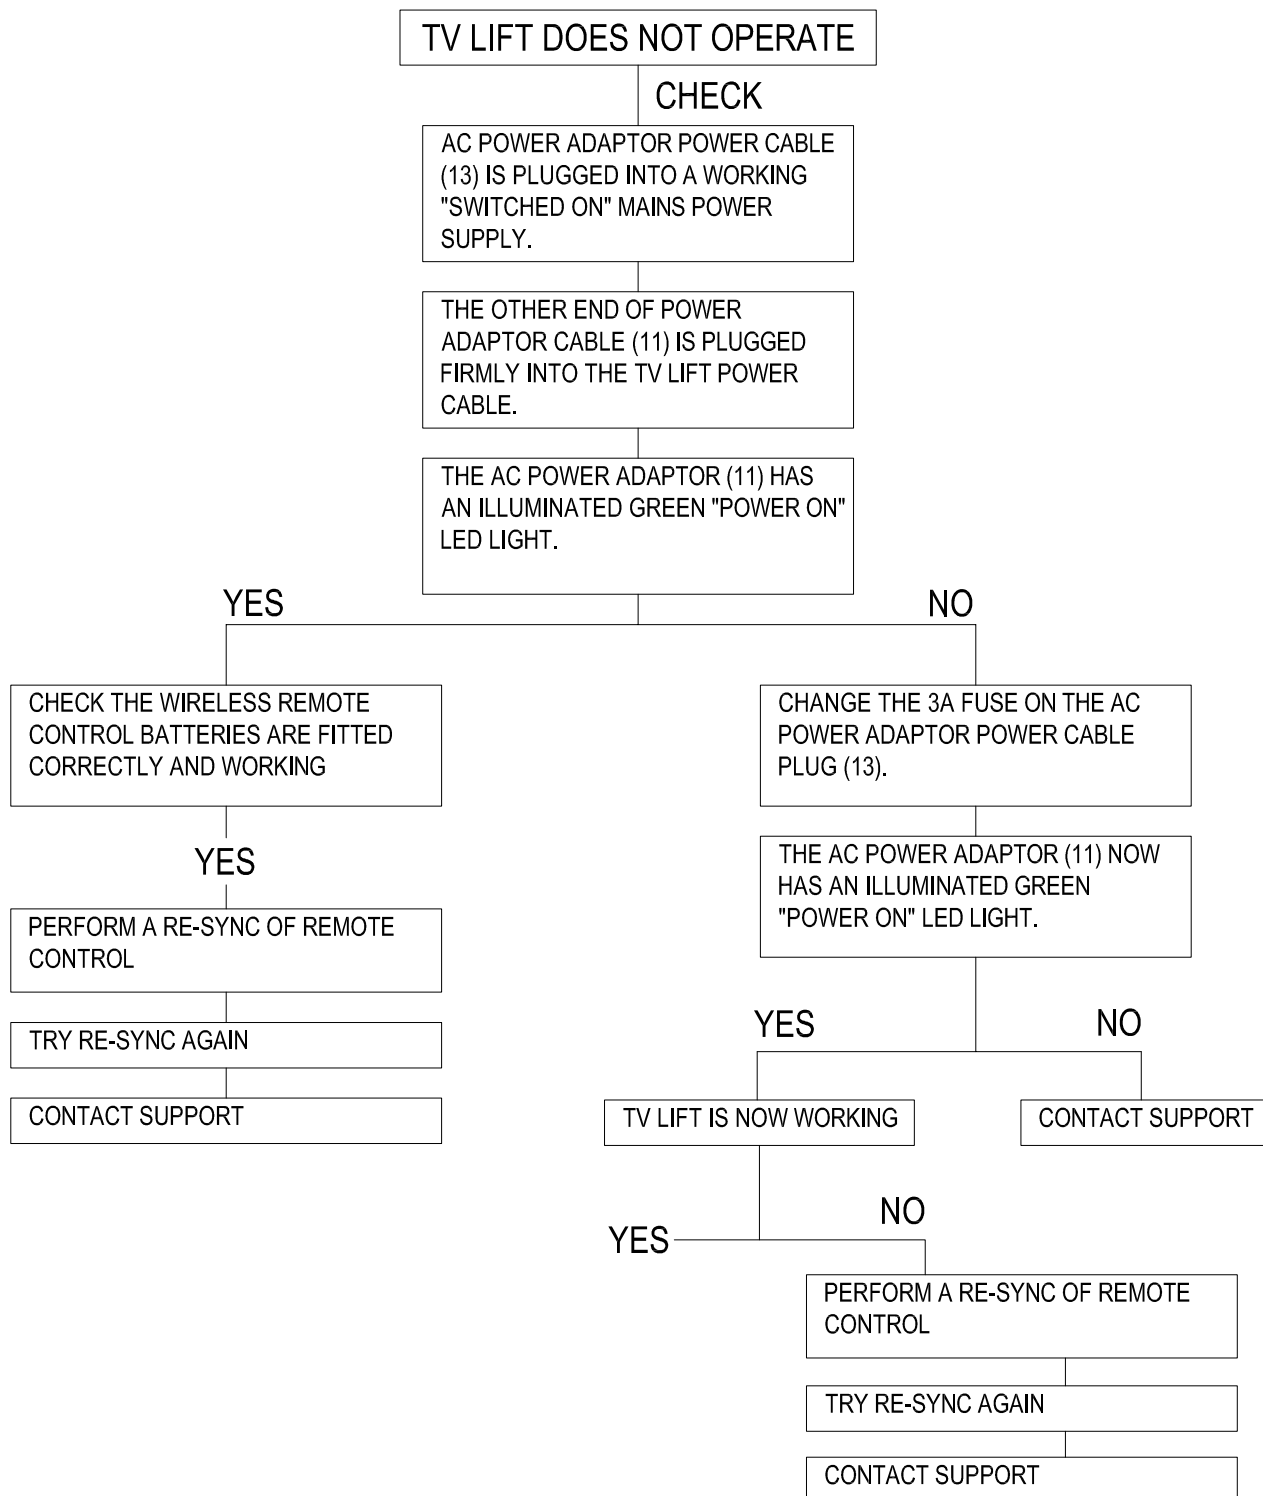

## SPECIFICATION-TV MECHANISM


FEATURE	Wireless Remote Control-TV LIFT MECHANISM
INPUT	100V-240V~ 50/60Hz 1500mA
OUTPUT	29V ---- 2A
DUTY CYCLE	MAX 10% ; MAX 2 min / 18 min
BATTERY (WIRELESS REMOTE CONTROL)	Size: AAA - Ø10.5 X T44.5mm - Spec.: 1.5V

## G4.02 TV LIFT MECHANISM- OPTI-SERVE SPARE PARTS LIST

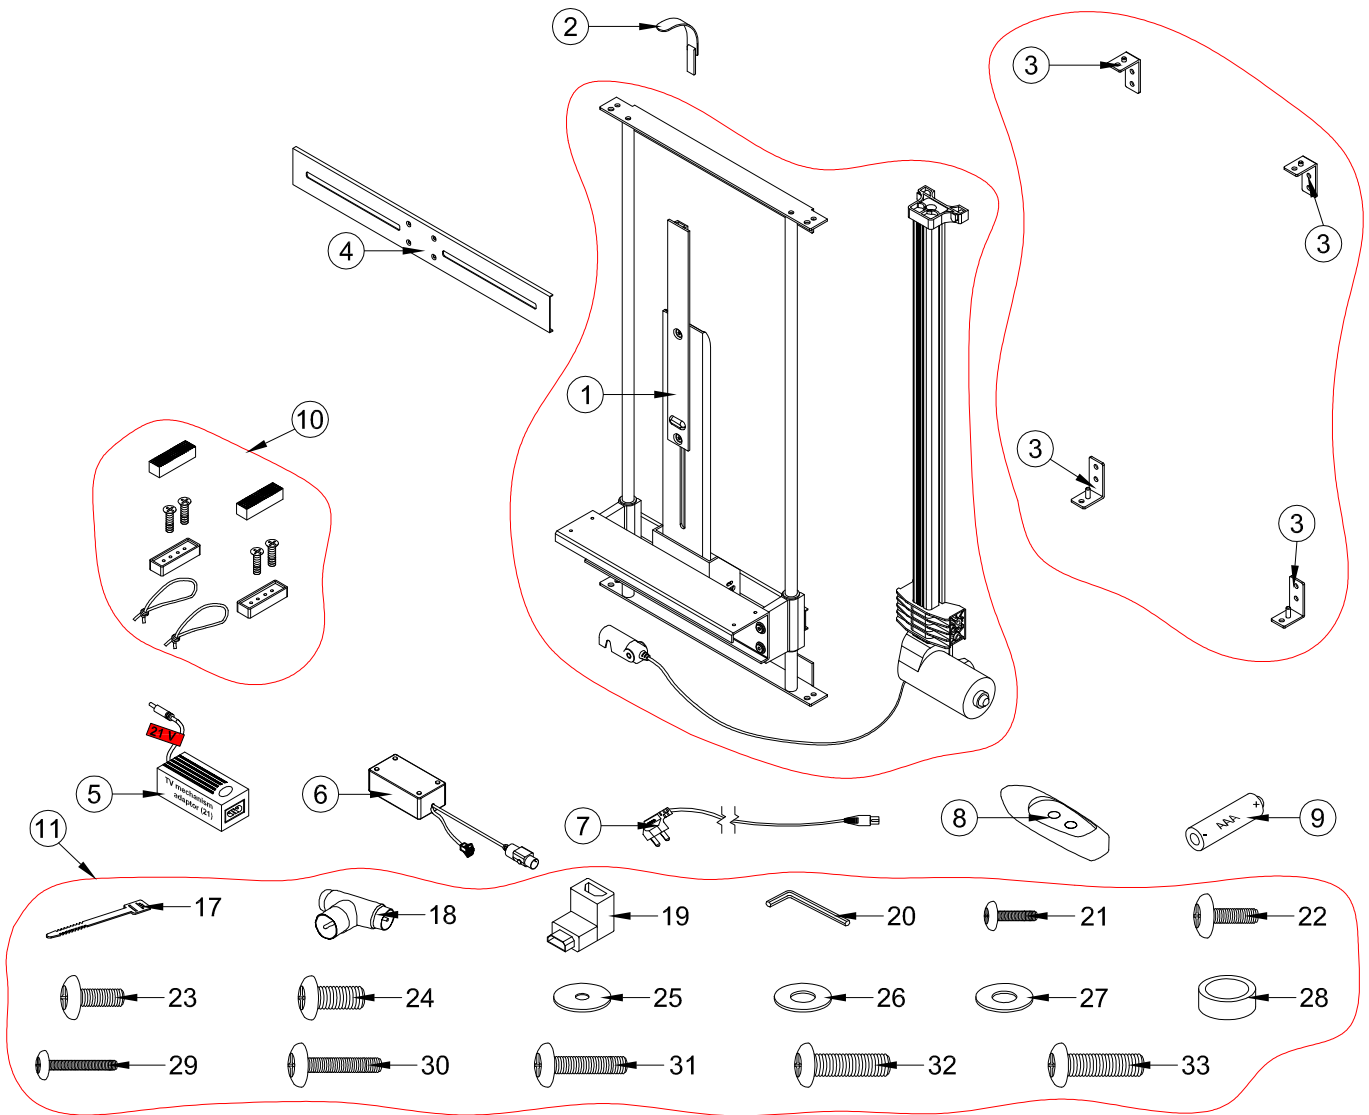

ITEM NO.	PART DESCRIPTION	IV CODES
1	Main TV-lift up mechanism (pre- assemble)	IV001802
	TV-linear actuator G4 (pre-fixed)	
	Actuator mounting top spacer (2pcs) (pre-fixed)	
	Cross recessed countersunk flat head wood screw- Top mounting M6 x 30mm (2pcs) (pre-fixed)	
	Cross recessed countersunk flat head wood screw- Top mounting M6 x 20mm (2pcs) (pre-fixed)	
	Actuator mounting bolt- screw M6 x 20mm (4pcs) (pre-fixed)	
2	Gooseneck (pre-fixed)	IV001289
3	Top hanging bracket (2pcs) (pre-fixed)	IV001636
	Bottom hanging bracket (2pcs) (pre-fixed)	
4	TV- flat bracket (Vesa Bracket) (pre-fixed)	IV001290
5	TV-lift up mechanism AC/ DC adapter	IV001806
6	APP TV lift-up mechanism control box (pre-fixed)	IV001970
7	TV-lift up mechanism AC/ power-cable power plug	IV001295
8	Wireless remote control	IV001804
9	Battery (2pcs)	IV001634
10	TV block (2pcs), screw M4 x 35mm (4pcs), block rubber cover (2pcs), cable management bungee cable (2pcs) (pre-fixed)	IV001635
11	(17) Cable clip (2pcs)-use to fix wire	IV001634
	(18) Aerial connection (1pc)	
	(19) 90 degree HDMI adaptor (1pc)	
	(20) Allen key (M4) (1pc)	
	(21) Pan head screw M4 x 20mm (2pcs)	
	(22) Pan head screw M5 x 20mm (2pcs)	
	(23) Pan head screw M6 x 20mm (2pcs)	
	(24) Pan head screw M8 x 20mm (2pcs)	
	(25) M5 washer (2pcs)	
	(26) M6 washer (2pcs)	
	(27) M8 washer (2pcs)	
	(28) Plastic collar (6pcs)	
	(29) Pan head screw M4 x 40mm (2pcs)	
	(30) Pan head screw M5 x 40mm (2pcs)	
	(31) Pan head screw M6 x 40mm (2pcs)	
	(32) Pan head screw M8 x 40mm (2pcs)	
	(33) Pan head screw M8 x 30mm (2pcs)	

## RM-3.4 AUDIO- OPTI-SERVE SPARE PARTS LIST

 
[illegible]




## Napp by Dreams - Application



- This Osaka Ottoman TV bed has a built in application called **Napp by Dreams**.
- This NAPP App is available to download in "Playstore" for Android users and "App Store" for Apple users.
- Please follow the steps below for more detail.
- Search for Napp by Dreams at "Playstore" or "App Store" and it will appear as per below. Click "**install**" or "**get**" then open the apps.

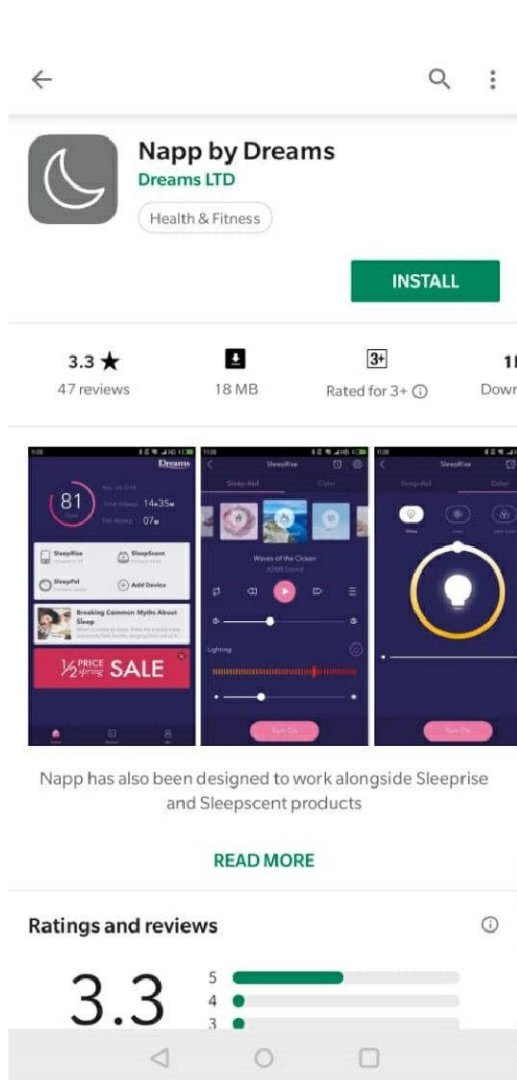



Playstore for android user

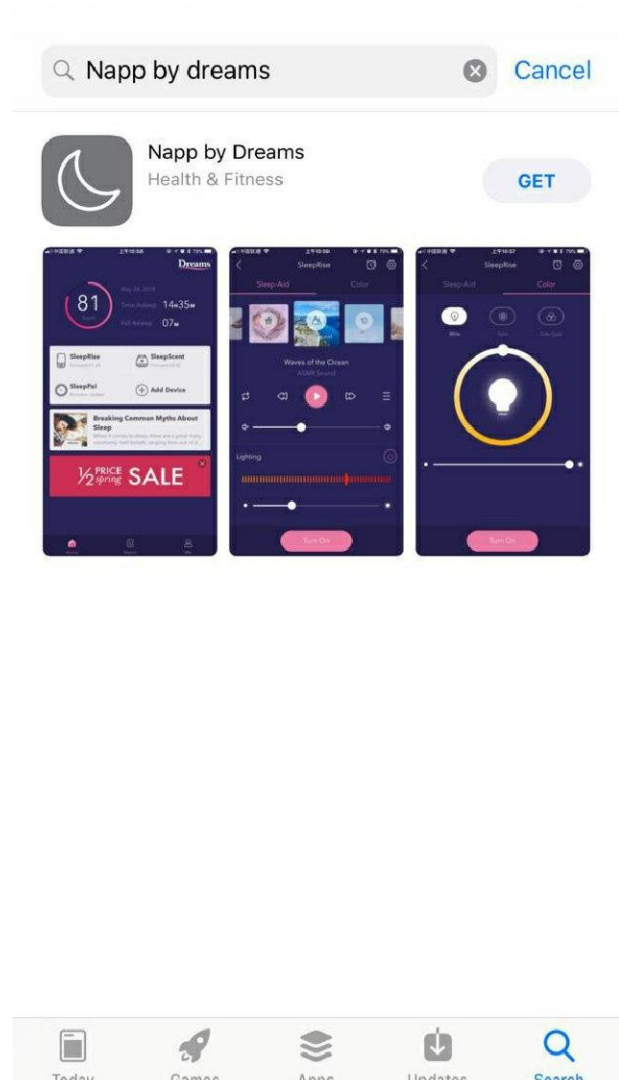

App Store for Apple user

## Step 1

- Make sure the bed is plugged in and there is power to the bed.
- Touch the On / Off switch on the beds Touchpad. The Bluetooth indicator light will illuminate.
- Turn on Bluetooth on your media device.
- Your device will show up "OSAKA 0001~9999" - press connect.
- You will hear the audio notification bleep - this confirms the Bluetooth is enabled and ready to use.

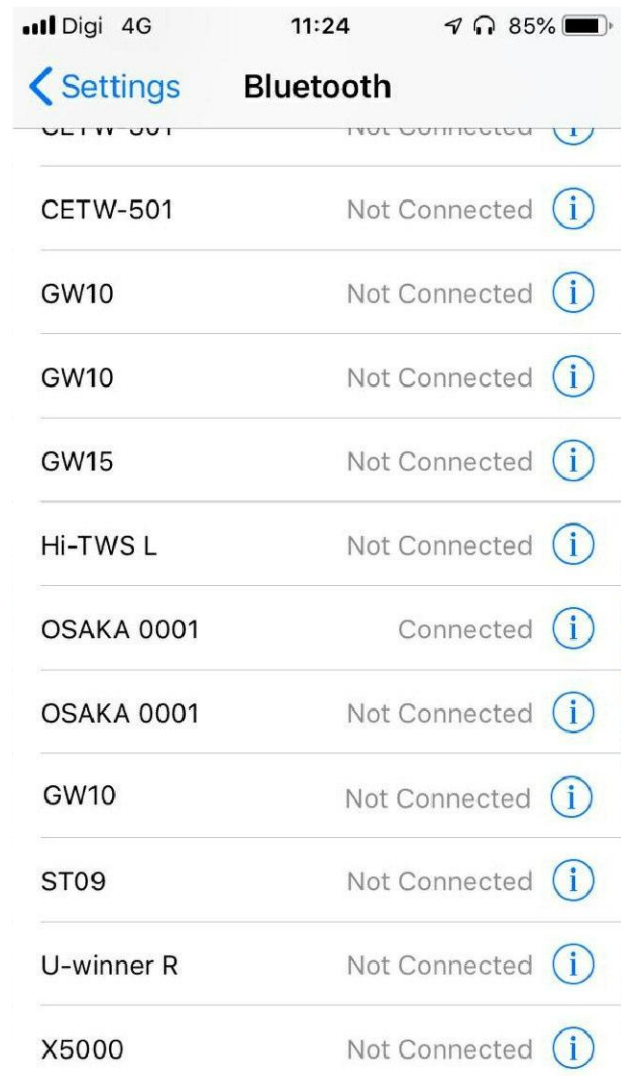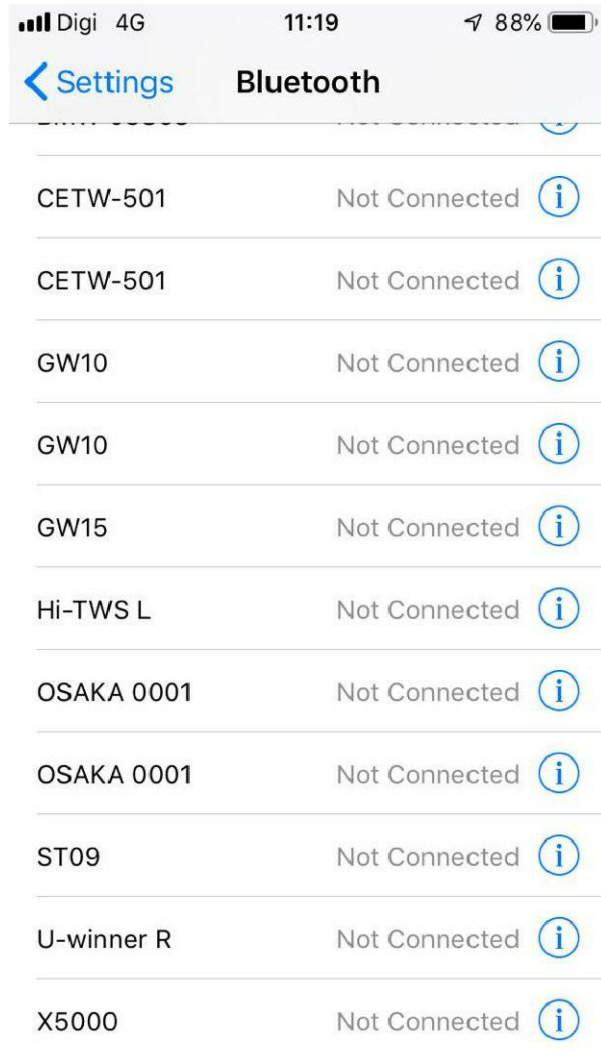

## Step 2

- Open the app and your device will appear as per figure 2.1. Then you need to "Log in" your email and password to get through to the next step (figure 2.2).
- If you didn't have the account, click "Create an Account" (figure 2.2) then follow the next step.

Figure 2.1


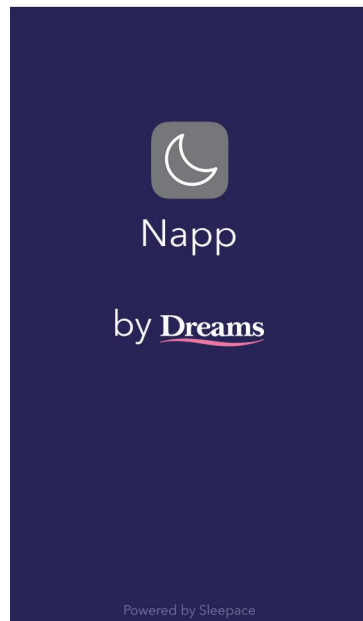


Figure 2.2

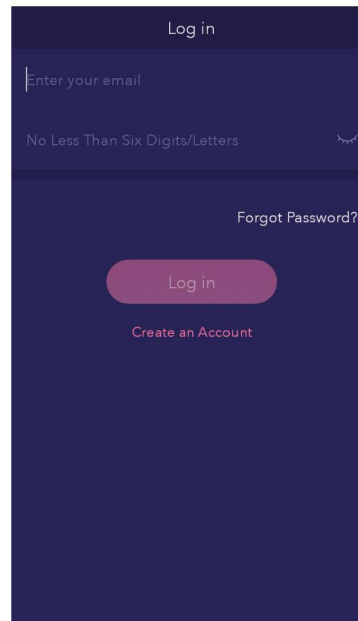

## Step 3

- Please sign up your valid email address and password. Check the box (*I agree with the Dreams Napp License Agreement*) then click "**Sign Up**".
- Follow the instruction and click "**Done**".

Figure 3.1


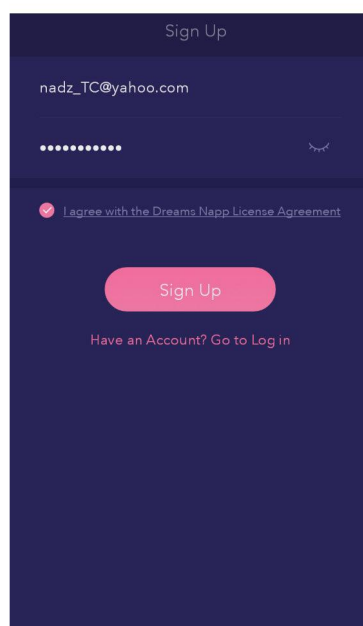


Figure 3.2

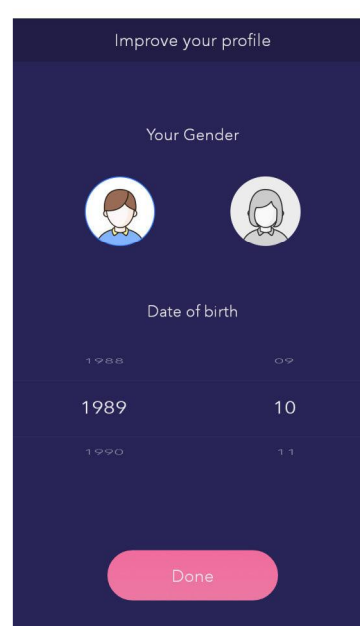

## Step 4

- Then click "I Want to Add Device".
- Next click at "Add Device".
- After that, scroll down - at the Tech Beds features click "Osaka TV Bed".
- It will show "Install Osaka TV Bed". Make sure your bed is plugged in and switch on the power.
- Then click "Continue".

Figure 4.1

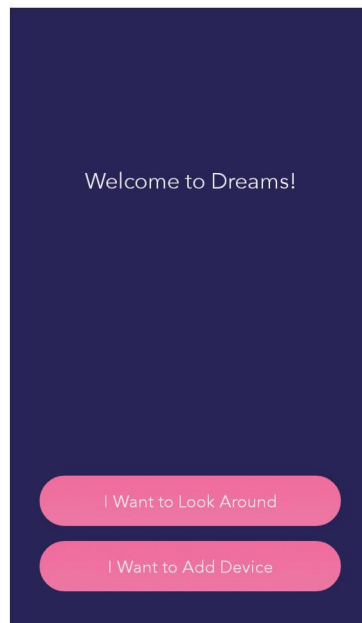


Figure 4.2

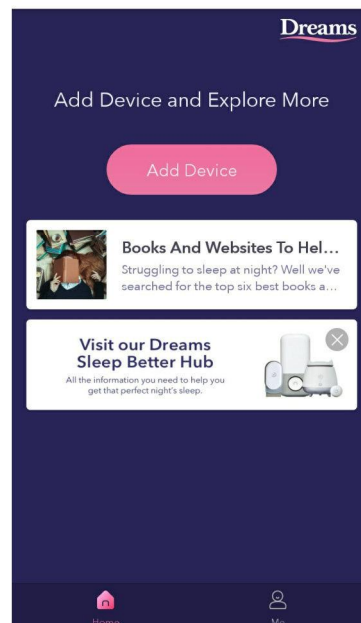


Figure 4.3


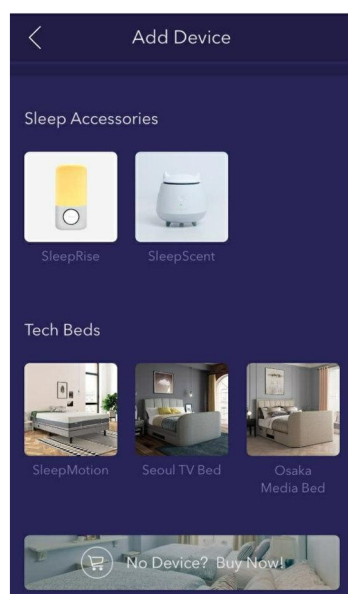


Figure 4.4

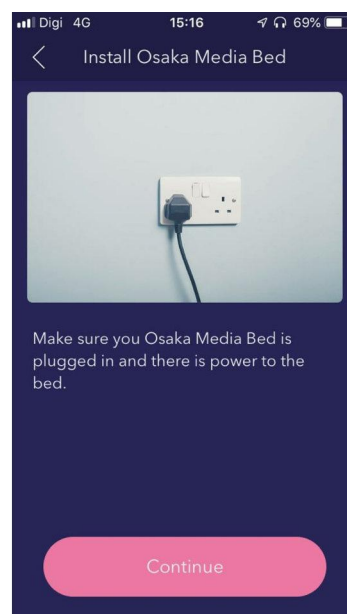

## Step 5

- Once your device is added successfully, click "Start Navigating". (figure 5.1)
- Control interface will appear (figure 5.2) and start connecting. Then it will automatically connect with your media. (figure 5.3)
- To make sure your device is connected to the media, click on Setting ⚙️ and it will show "Device ID" "OSAKA\_BLE 0001~9999". (figure 5.4)

Figure 5.1

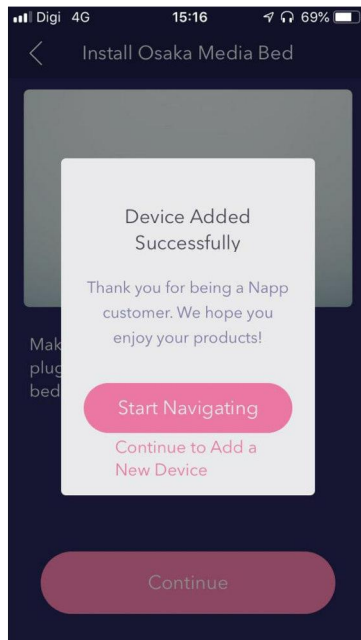


Figure 5.2

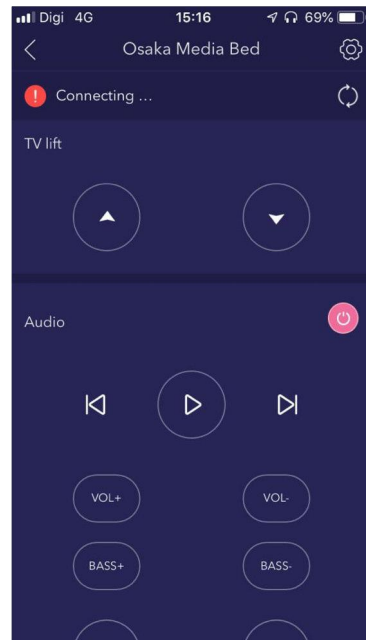


Figure 5.3



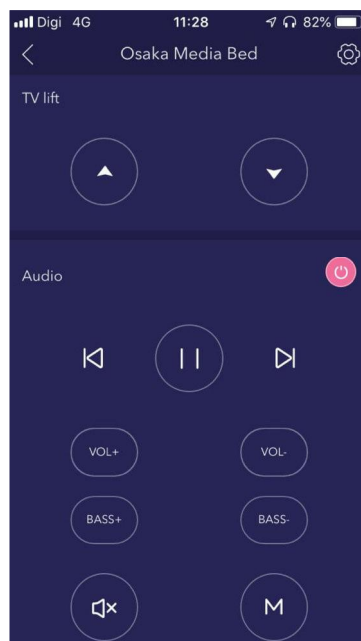


Figure 5.4

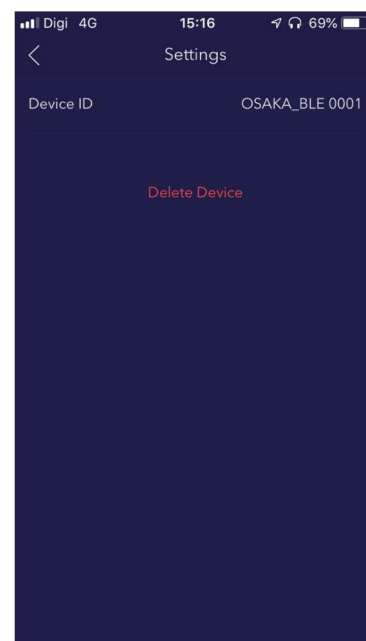


## Step 6

- Now you can simply use your devices music player to play audio files - **ENJOY**.

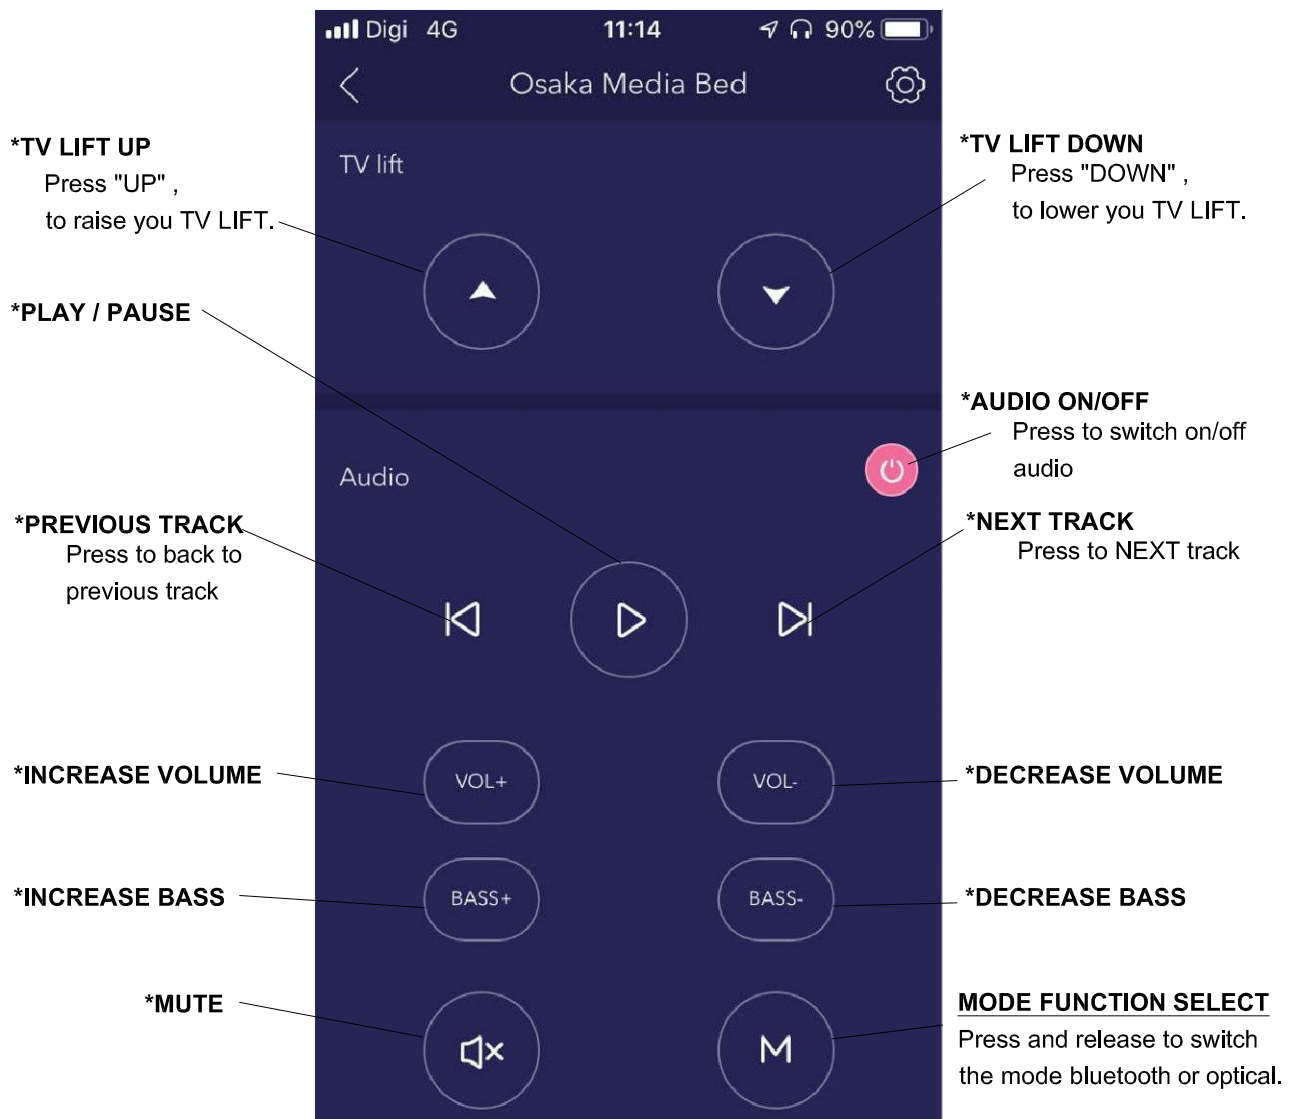

## Step 7

- Once you Log Out the application and you want to connect back again, it is not necessary to add your device again.
- Just click at "Osaka Media Bed" and it will show the control interface. Refer figure 5.3.

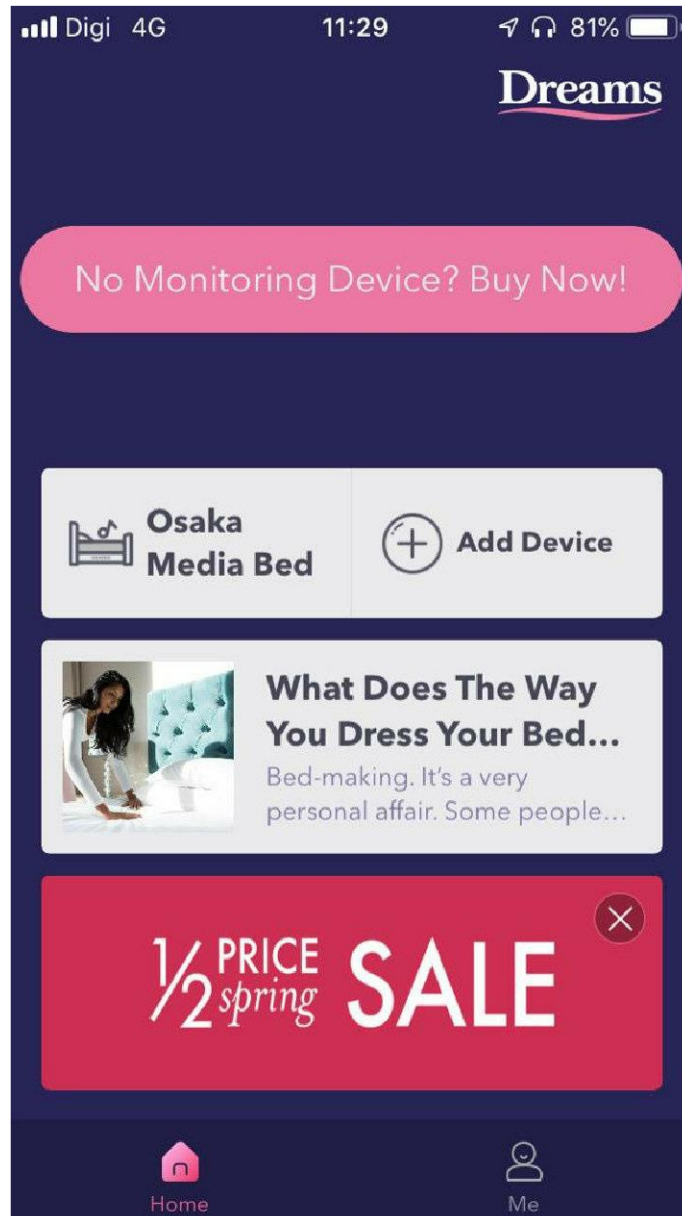

# EU Declaration of Conformity

Product model: OSAKA OTTOMAN TV BED

1. Product destination : Dreams-UK


2. Name and address of the manufacturer or his authorised representative:

BSSB FURNITURE (M) SDN BHD  
LOT NO.8962, JALAN UDANG GALAH,  
TELOK GONG, 42000 PORT KLANG,  
SELANGOR DARUL EHSAN, MALAYSIA.  
TEL : 603 3134 1278  
E-mail : Admin@bssbfurniture innovation.com

3. This declaration of conformity is issued under the sole responsibility of the manufacturer.

4. Object of the declaration:

Equipment: TV MEDIA & STORAGE BED  
Brand Name: BSSB FURNITURE  
Model / type: OSAKA OTTOMAN TV BED

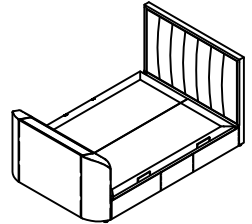

5. The object of the declaration described above is in conformity with the relevant Union harmonisation legislation:

<b>LVD 2014/35/EU via MD clause 1.5.1</b>	BS EN 60335-1 Household and similar electrical appliances. Safety. General requirements
<b>EMC 2014/30/EU</b>	BS EN 55014-1 Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Emission BS EN 55014-2 Electromagnetic compatibility. Requirements for household appliances, electric tools and similar apparatus. Immunity
<b>RoHS 2011/65/EU</b>	BS EN 50581 Technical documentation for the assessment of electrical and electronic product with respect to the restriction of hazardous substances.
<b>MD 2006/42/EC</b>	There is no dedicated Standard related to this type of product, therefore within the hierarchy of compliance this product must comply with all the clauses within the Machinery Directive. The following Standards will support compliance with the clauses in Annex I and can be referred to in the Technical File to further justify compliance. BS EN 1725 Domestic furniture. Beds and mattresses. Safety requirements and test methods BS EN ISO 12100 Safety of machinery. General principles for design. Risk assessment and risk reduction BS EN 349 Safety of machinery - Minimum gaps to avoid crushing of parts of the human body

6. References to the relevant harmonised standards used of references to the other technical specifications in relation to which conformity is declared:

Product code: TV-G4.02(WK), Product name: Mechanism

**EMF(LVD+EMC) for mechanism:**

EN 55014-2; EN 55014-1; EN 61000-3-3; EN 61000-3-2; EN 60335-1; IEC 62321-3-1

**MD for mechanism:**

EN ISO12100

Product code: EM-G1/2.1-APP, Product name: Audio System

**LVD+EMC:**

EN 60065; EN 55032; EN 55035; EN 61000-3-2; EN 61000-3-3

**RED (LVD+EMC+RADIO) for 2.4GHz controller:**

EN 301489-17; EN 300328; EN 62479; EN 301489-1;

7. Signed for and on behalf of:

BARRY JOHNSON

MANUFACTURER  
BSSB Furniture (M) SDN BHD



## Care of your Dreams Furniture

Your new bed from Dreams is more than a beautiful piece of furniture. It's an investment in your health and wellbeing. Care for it well and you'll enjoy a great night's sleep for many years to come.

Should you have any issues with your product please contact our customer service team on 0344 292 0000

---

## On Delivery

Once your new bed is in place and all the packaging is removed, let it air for approximately 1 hour before putting on your mattress, mattress protector and bed linen.

Don't worry if your bed feels a little strange at first. It takes time for your body to adjust to a new level of support and comfort. You'll soon be enjoying a more relaxed sleep.

Please consider the surface your bed will be stood on. If your bed frame is to be stood on an uncarpeted surface please ensure that you use rubber backed mat under the legs to avoid slipping.

---

## Day to day Care

Check all bolts, screws and legs regularly to make sure they haven't loosened and tighten all joins of your furniture or bedstead after 6 months. Please keep these instructions in a safe place for further use.

Storage Drawers in Bedsteads are designed to carry lightweight items such as Pillows, duvets and linen. Please try to avoid storing heavier items such as books or toys.

---

## Returns

If you have bought a large item such as a bed or mattress which is damaged or faulty and would like to return it, we will be able to arrive at your home and take your item away. All we ask is that your item is in perfect condition and in its original packaging (you can open the packaging to inspect your item). Items will not be able to be returned if they are not in their original packaging.

For online and telesales orders, you can only return an item within 7 days from the date of your delivery.



[www.dreams.co.uk](http://www.dreams.co.uk)

---

Thank you for purchasing from

**Dreams**



Need assistance?  
Call: 0344 292 0000

Dreams reserve the right to modify products, dimensions, parts and fixings without notification.