 


SAPPORO AUDIO TV BED

LIFESTYLE SLEEPMOTION 200i

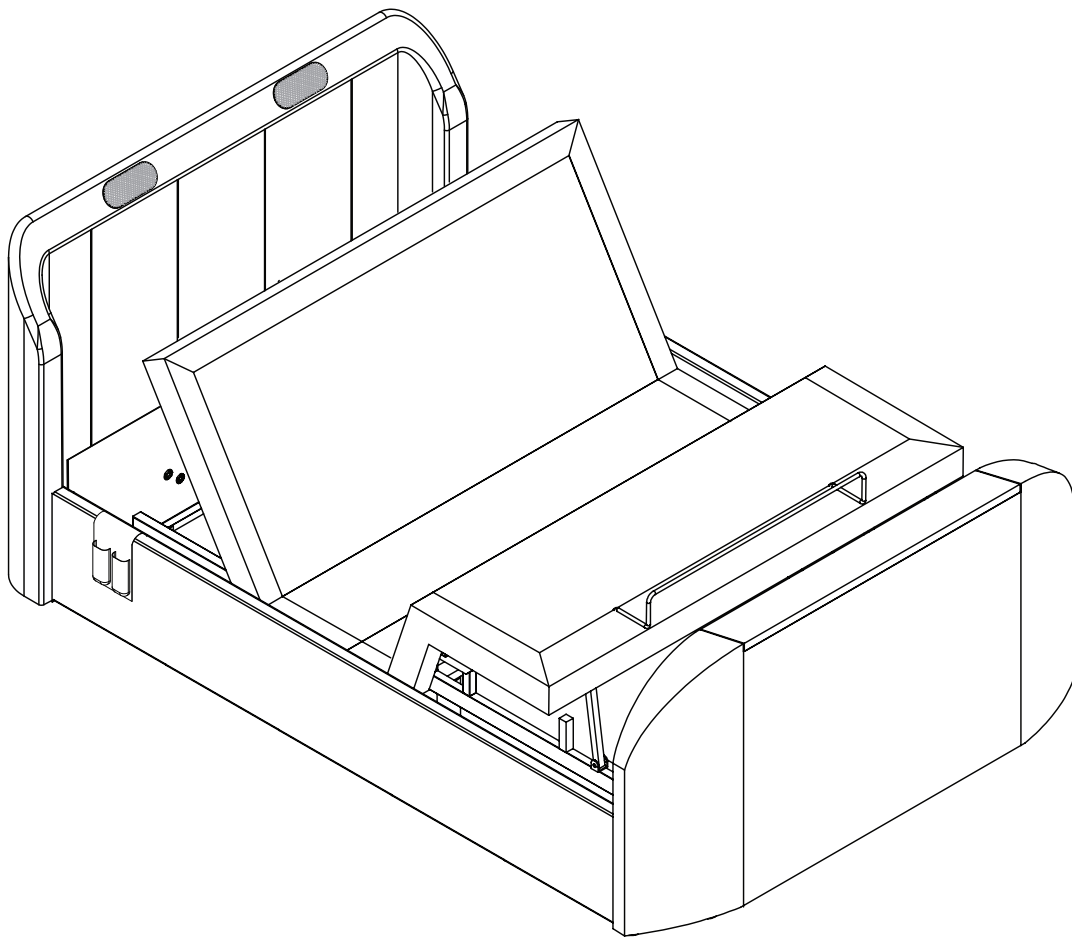

1.5 hour approx
assembly time



Two person
assembly

Dreams

Thank you

Hello, thanks for choosing to purchase your bed from Dreams - you're now on your way to your best ever night's sleep. Before you begin building your bed, please take a moment to read through the instructions and make sure that you've got all the relevant parts listed on the following pages.



Assembly tips

Before you begin, it's best to identify all parts and fittings to build your bed. We advise laying these out on the floor to check you have everything, and familiarising yourself before building.



Top tip

We recommend that you build your new bed in the room you'd like it to be located - this will help prevent any risk of damage to your newly built bed whilst moving it.



Safety and care

It's really important to ensure children and animals are kept away from the assembly area, as there are small components used in this bed which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation. To keep your little ones busy, there is a colouring page inside the back cover.



Help and support

At Dreams, it's our mission to give the whole nation a great night's sleep - this means that the quality of our products is of utmost importance to us. If there are any issues with your product or any missing parts, please contact our Help Centre on 0800 652 6750, where a member of our team will be happy to help. (For customers based in Northern Ireland, please call 028 9050 8300)



 
Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Our assembly instructions are printed on recycled paper. Please keep your assembly instructions safe to refer back to in the future.

Parts

The TV Bed you have purchased comes with a Lifestyle Sleepmotion 200i electric bed base. Follow the instructions to assemble the bed around the base after first preparing the base as in Step 2.

The footend of the bed is fitted with a real 6 channel Surround Sound amplifier that is connected to the television with the HDMI ARC cable - **DO NOT REMOVE THIS CABLE** - just connect the plug to the HDMI ARC socket on the side of the television - carefully read Step 8 before installing the television.

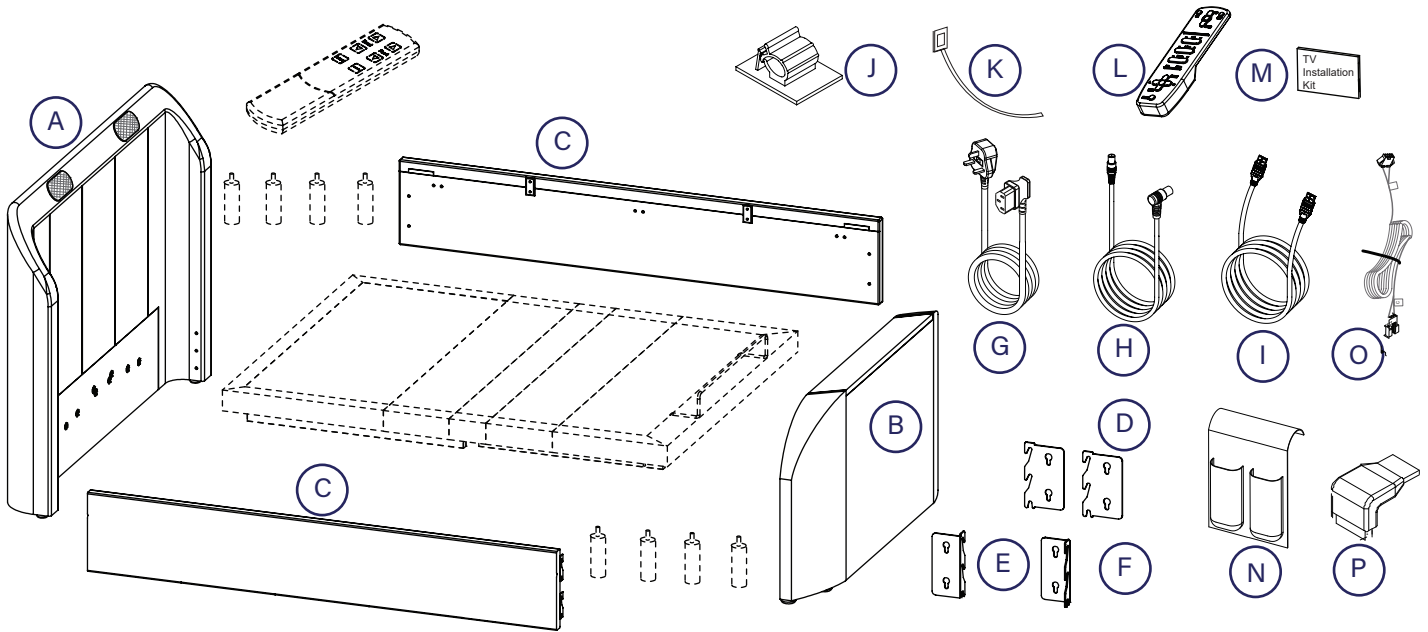

The parts shown in dotted lines above are packed in the sleepmotion electric base carton itself.

Parts list

Packed inside the accessory box, in the footboard, Pack 2



A.	Headboard	1	I.	HDMI lead - 2.8 mt	2
B.	Footboard	1	J.	Cable clips	5
C.	Side rails	2	K.	Cable ties	5
D.	Flat hook bracket - headend	2	L.	Audio/TV Lift Remote Control	1
E.	Angled hook bracket - footend LH	1	M.	TV Installation Kit	1
F.	Angled hook bracket - footend RH	1	N.	Remote Control Holster	1
G.	Mains power lead - 3.5 mt	1	O.	Speaker Connection Lead	1
H.	Aerial lead - 4 mt	1	P.	HDMI 90° Adapter	1

Fittings


Please check you have all the parts listed below with your product:

Hardware needed for fitting side rails to headboard & footboard

  Hardware pack (A) packed inside the accessory box in footboard Pack 2.

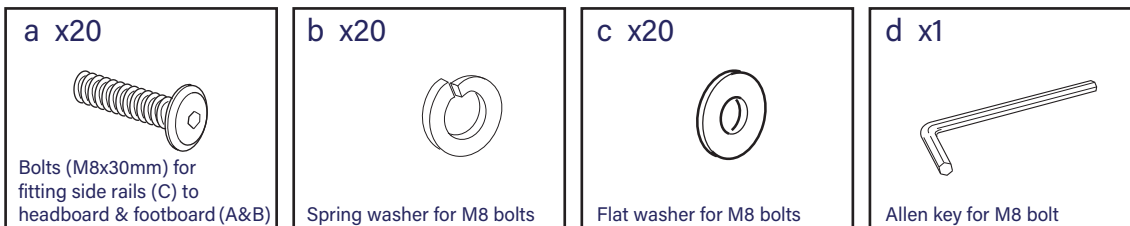

 TV Installation Kit packed inside the accessory box in the footboard, Pack 2

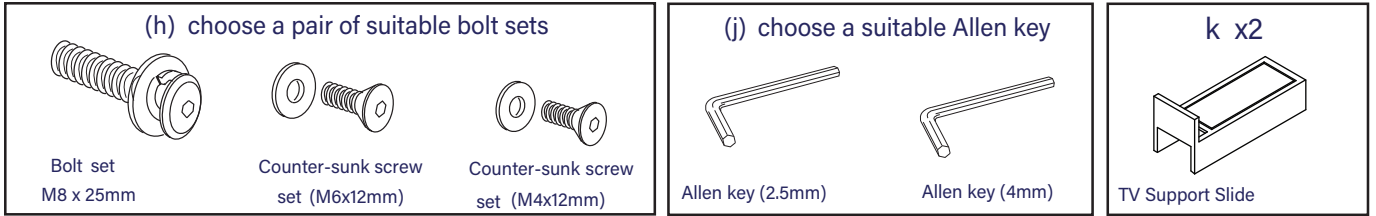


Tools required

Please check you have all these below



Tape measure

 Important:


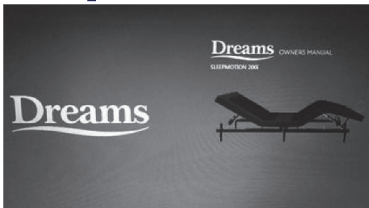


Before starting assembly please refer to the owners manual supplied with your Sleepmotion 200i bed base and follow the instructions taking note of any safety precautions or operational safety requirements of the installation.

In the room where bed is to be used, first prepare the electric bed base by fitting the eight longer 6" (15cm) legs, as in Step 2. Connect the power and check the operation then step by step follow the bed assembly instructions below, to build the bedstead around the electric bed base. Please read Step 8 carefully, before fitting the television.


1 Fitting the brackets for the side rails.

  On the headboard & footboard screw in the bolt sets (a, b & c) leaving a 10mm gap as shown then hook on the brackets (D, E & F).
Tighten all x12 bolts 90% using Allen key (d).

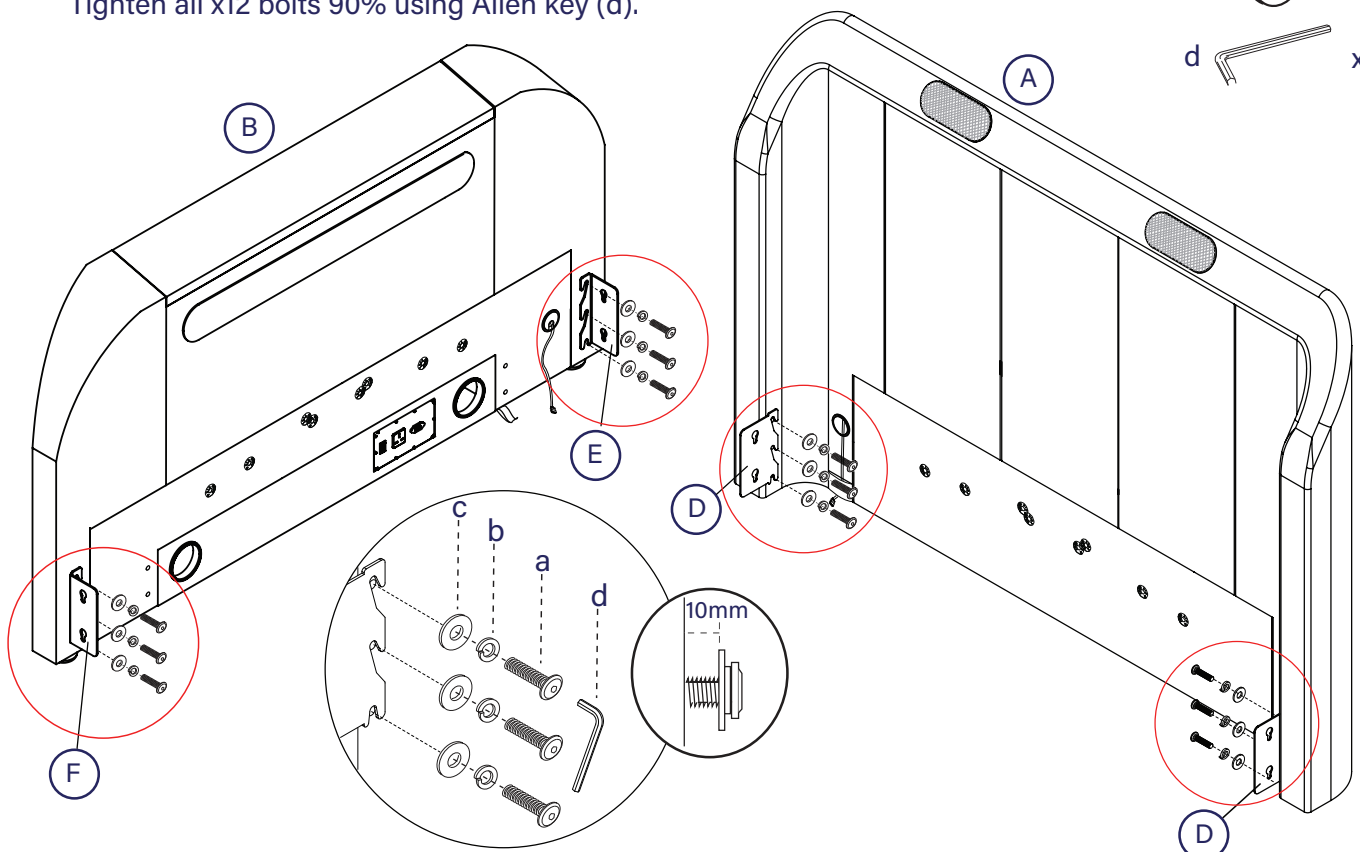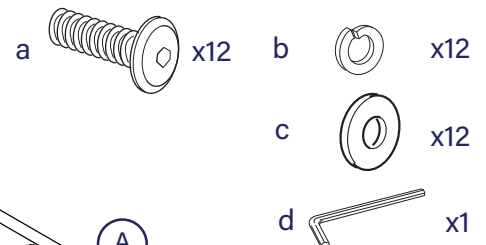

2 Prepare the electric bed base before assembling the bed frame.

 
Screw in the eight longer 6" (15cm) legs as shown.

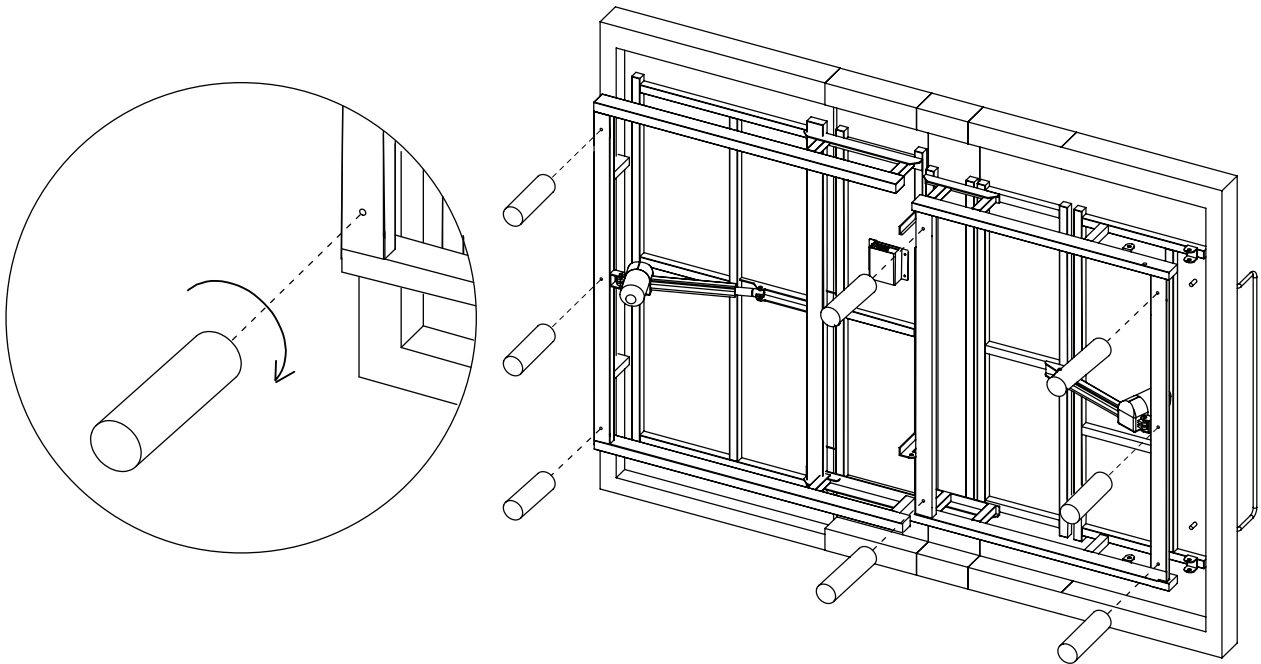

3 Positioning the electric bed base.


Place the headboard in the position in which it shall be used and attach the right hand side rail to the headboard bracket (D), using two bolt sets (a, b & c) tighten 90% with Allen key (d).

 Make sure the bed base is facing the correct way with mattress stopper at the footend then carefully lift the base and place it into the corner between headboard and side rail as shown - it is heavy so please get help.

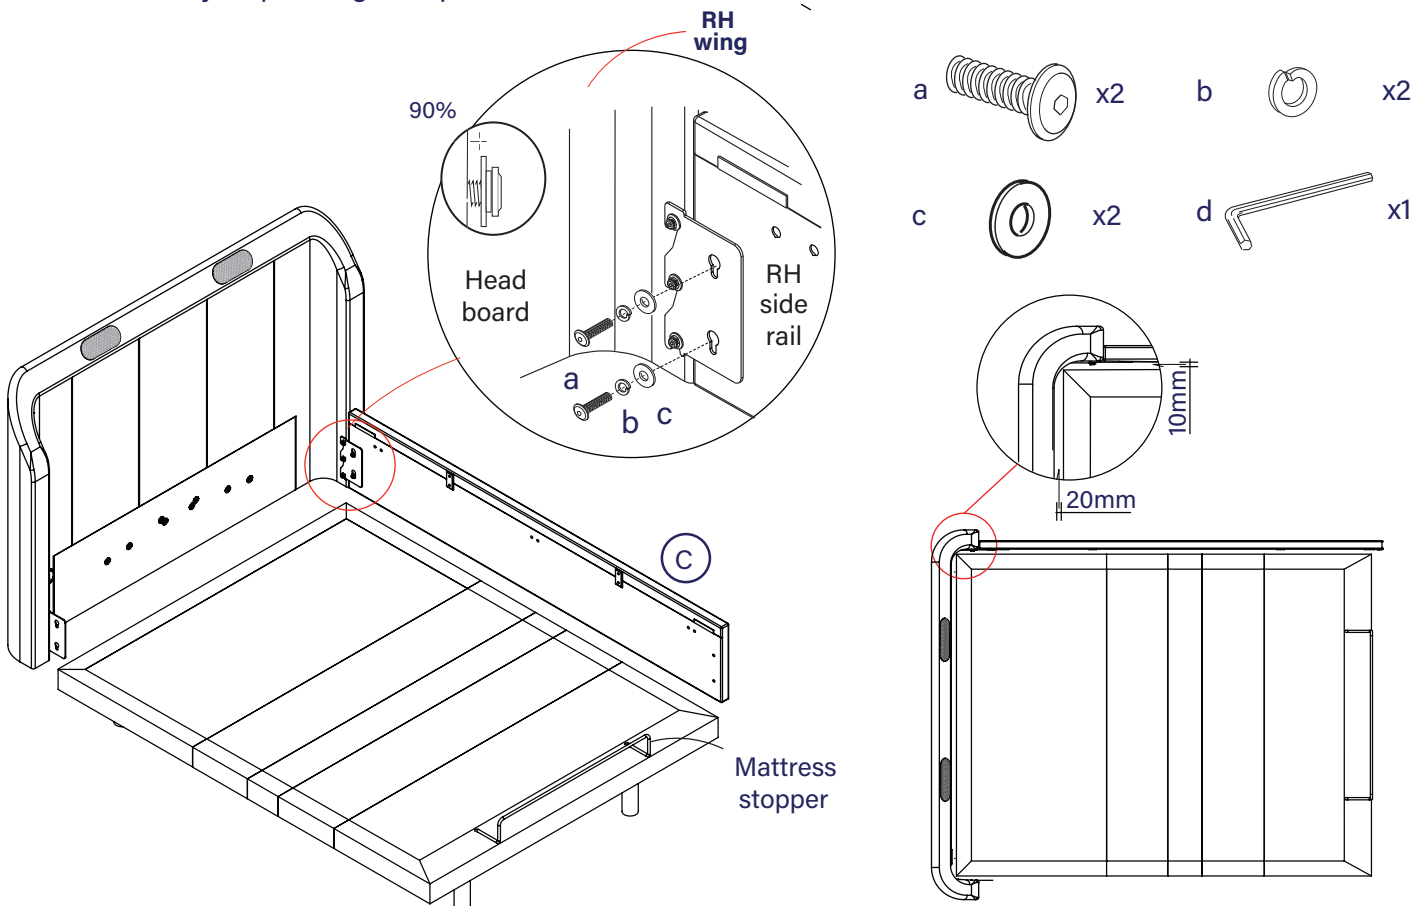



4 Connecting power to the the electric base.

 - i) Bring the power lead out from the electric base, underneath the headboard.
- ii) Connect the plug to the wall socket - for safety this must be an earthed power supply.
- iii) Raise both the head end and foot end of the bed base using the remote control.

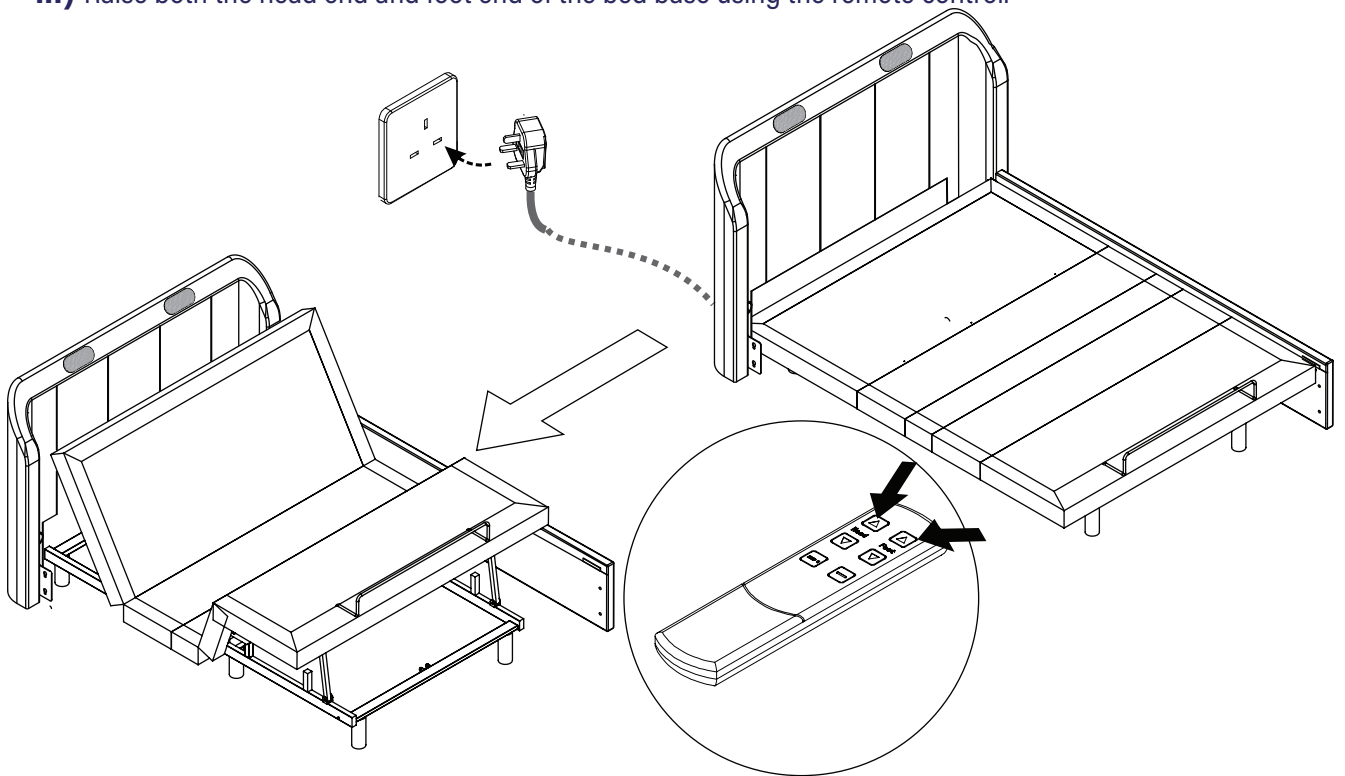


5 Place footboard in position and connect the RH side rail to it.

  Connect the right side rail to the footboard bracket (F) using another two bolt sets (a, b & c). Tighten the bolts using Allen key (d) but only tighten 90%.

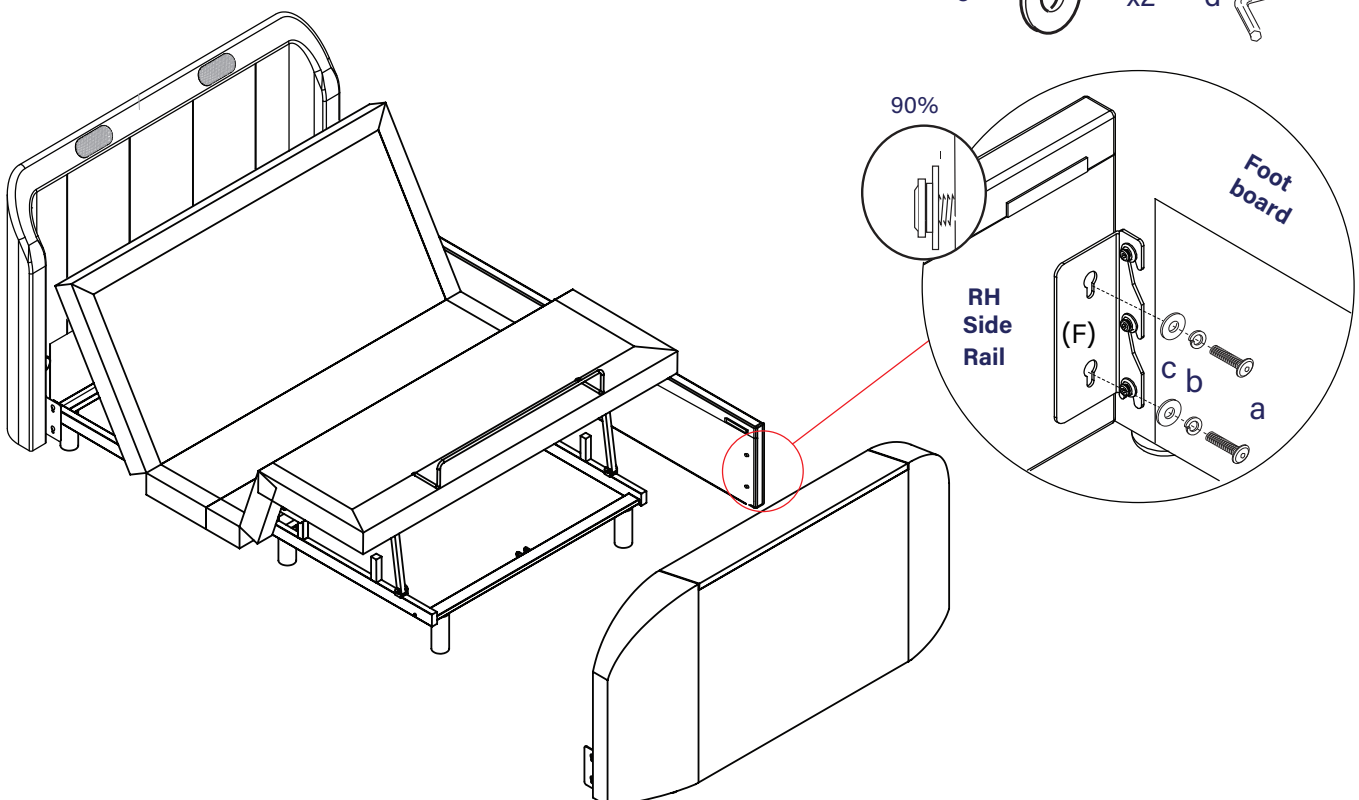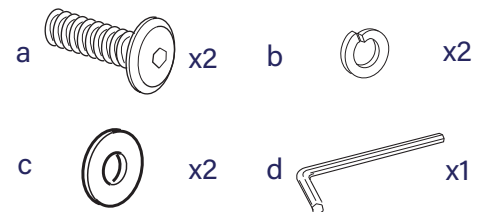


6 Electrical & Cable Connections

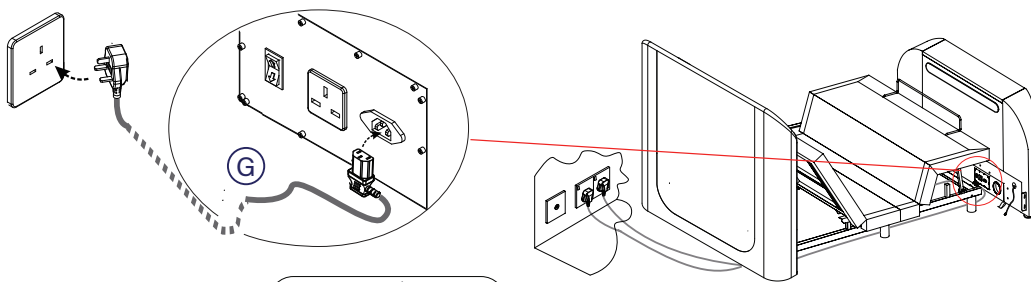 

- i) Plug the small power plug on one end of the mains power lead (G) into the socket at the bottom of the footboard. On the other end of the lead, bring the 3 pin plug out under the headboard and connect it to your wall socket - for safety this must be an earthed power supply.

 - ii) Press the "UP" button to raise the TV Lift.

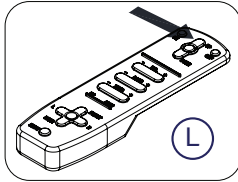


Note: This is for illustration purposes only, TV connections may vary.

- iii) If more leads, such as standard HDMI, aerial or other media connection leads need to be fitted - push them through either duct from the top choosing the best side to use depending on where the connection ports are on back of the TV - please make sure the wires are not hanging loose. If it is necessary to cross over leads from one side of the bed to the other, do this in front of the TV lift as shown in the sketch below right.


The HDMI ARC cable is positioned at the right rear side of the television ready to plug into the HDMI ARC socket on the side of the TV. If necessary it can be moved across to the opposite side, gently draw out some the cable from the duct and cross it over passing the lead under the back of the TV supports. Use cable clips (U) to keep the cable from snagging.

HDMI PLUG FOR CONNECTION TO HDMI ARC SOCKET ON THE SIDE OF THE TELEVISION MARKED: HDMI (ARC)

 If the HDMI (ARC) socket is on rear right hand side of the TV, the plug is in the correct position.

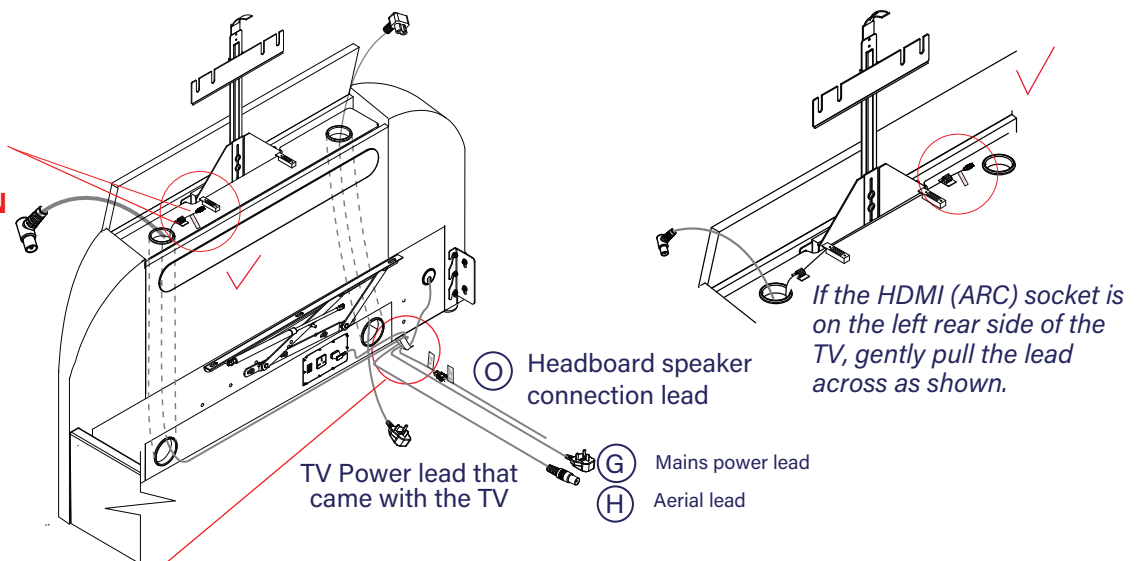


 If the HDMI (ARC) socket is on the left rear side of the TV, gently pull the lead across as shown.

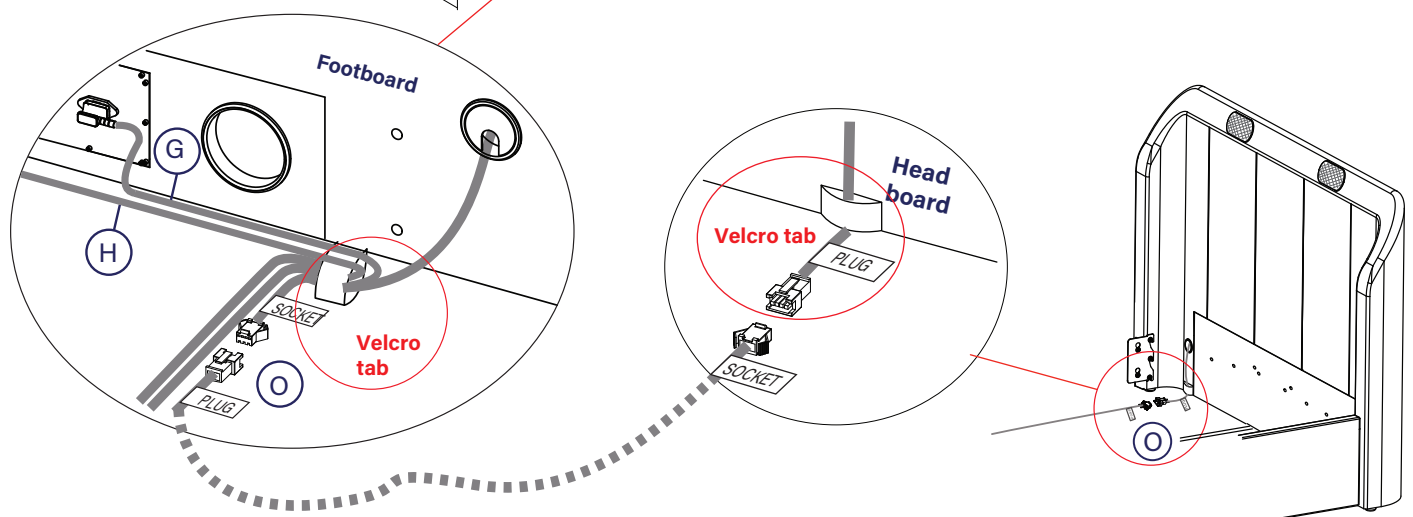

- iv) Bring all three leads (G, H & O) across from footboard to headboard in a straight line, fix to velcro tab at each end.

 - v) Bring the aerial lead (H) out under the headboard and plug it into the wall socket,

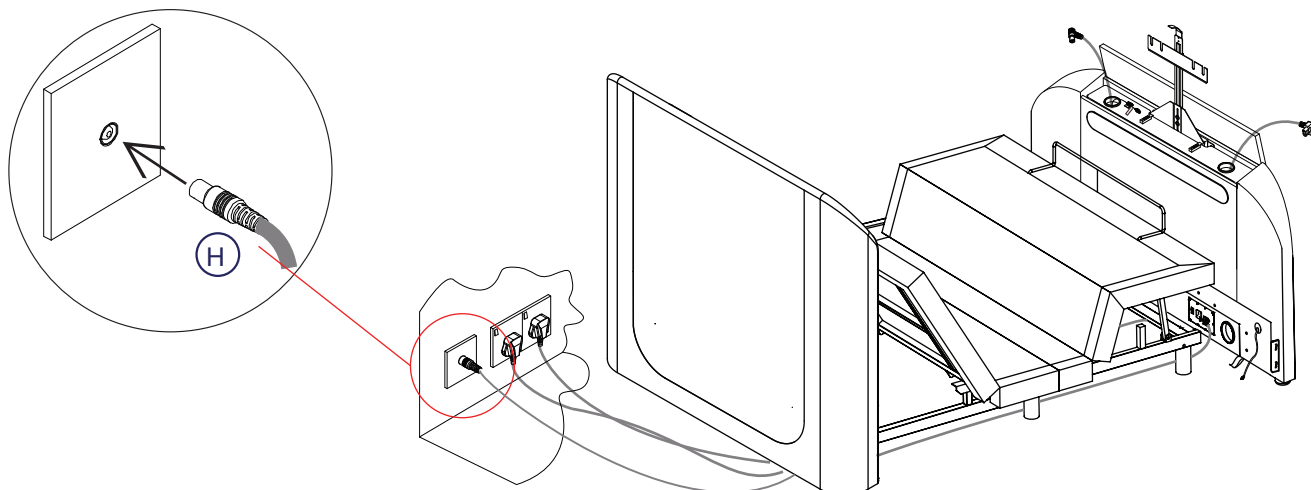

7 Before connecting the television, please read the important information below.

 
The bed is fitted with a real 5+1 six channel surround sound amplifier that should be connected to the television fitting the HDMI plug into the HDMI ARC socket on the side of the TV.

HDMI ARC connection on the TV is the OUTPUT of audio from television to the amplifier which is then processed and sent by the amplifier to the various speakers. The other HDMI sockets on the TV only accept INPUT signals from the various devices you might connect such as SKY, USB, DVD & Gaming consoles etc..

Note that the TV must be transmitting the 5.1 signals from an appropriate audio device to the TV and then each channel is routed to the correct one of the six speakers by the amplifier, this is how surround sound is created.


The amplifier will correctly decode the input signals such as 2.1 Stereo or real 5.1 surround sound as they were recorded and will automatically decode the signals appropriately, depending on the input.

To get the best audio experience when streaming multi-channel or playing a 5.1 DVD, it will help if the TV audio output is set to the right option - please read the television User Guide.

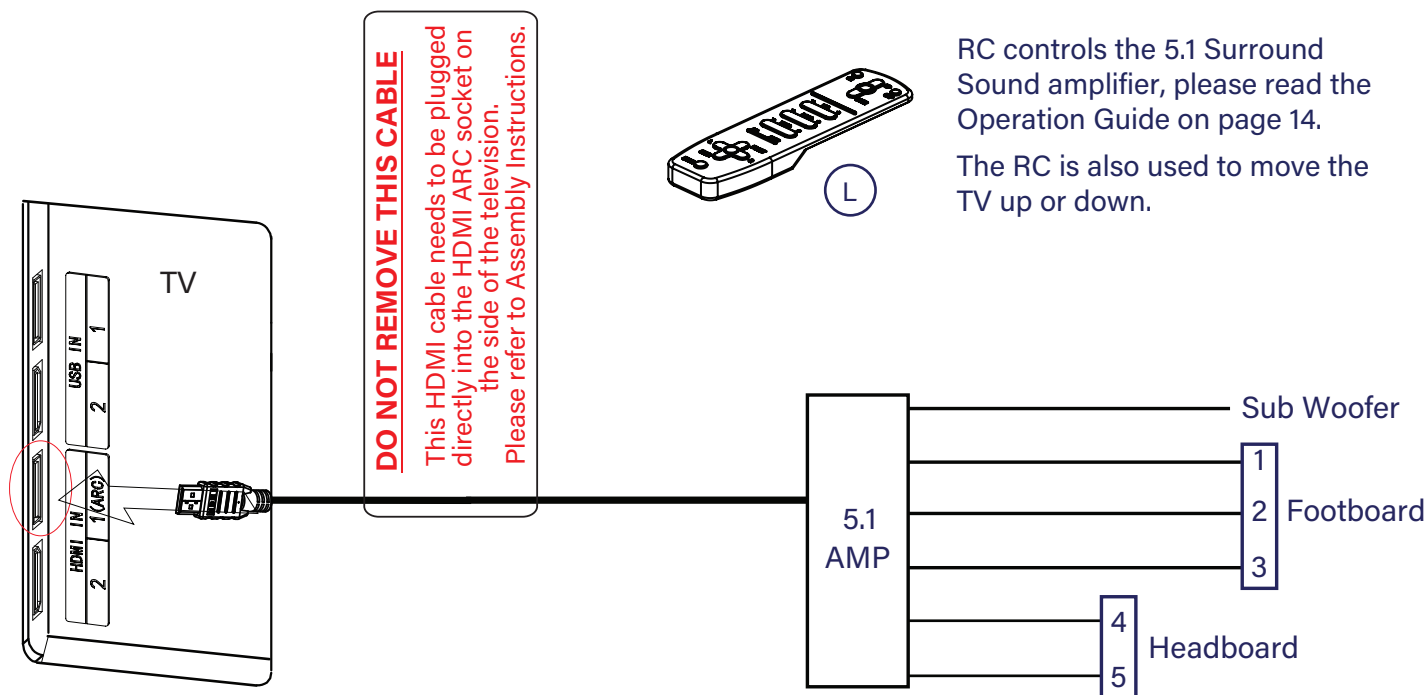


8 Height of TV is normally pre-set - follow this guide if it needs to be changed.

 i) Measure the height of the television and add 5mm to the height then adjust the column to suit.

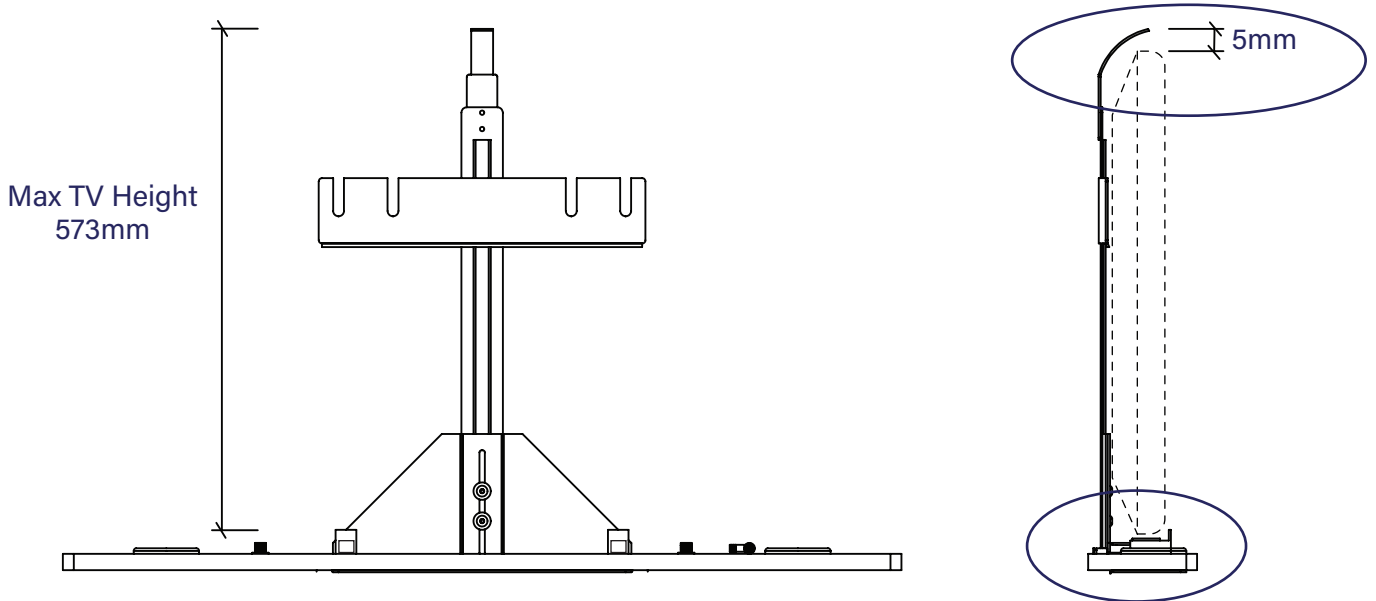

 ii) Loosen the two column adjustment bolts, slide column so the curved lid lifter is just above the TV and re-tighten the two bolts.

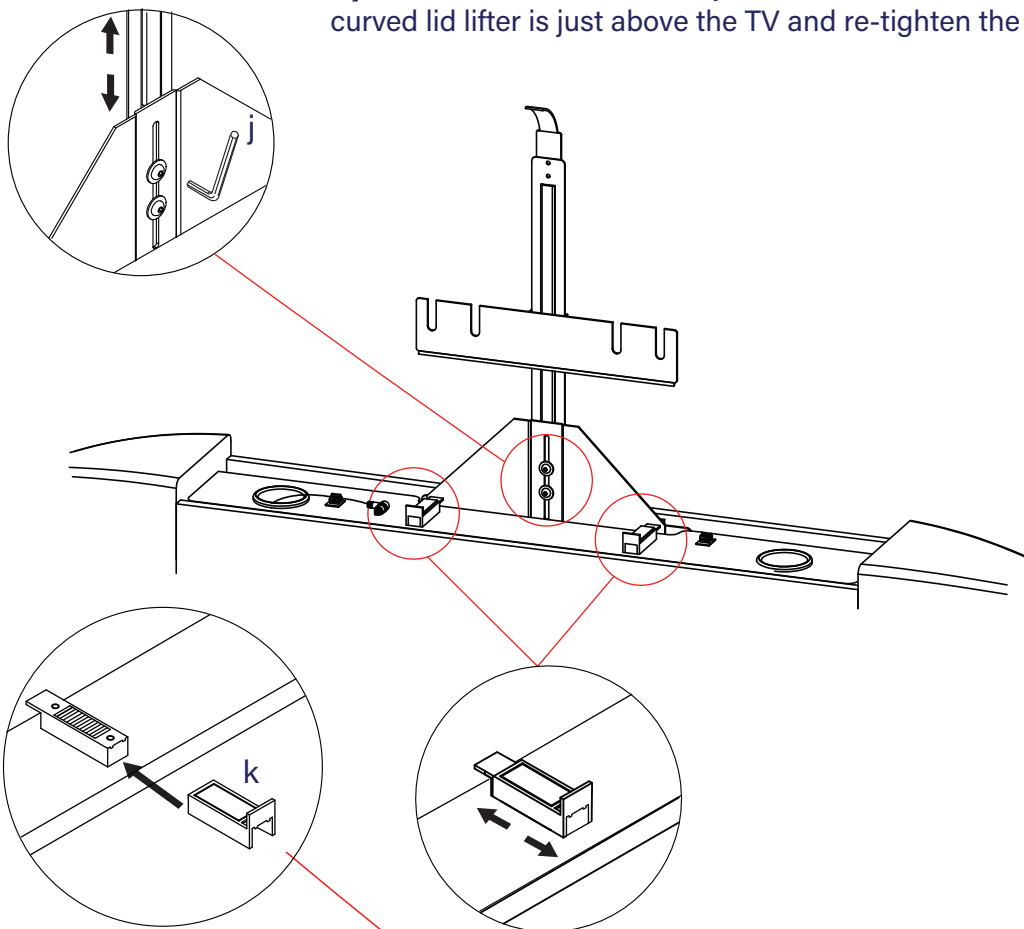



iii) The upper part of each support (k) slides to hold front of television in place, please follow the instructions on how to correctly set these supports in Step 9.

IF HARDWARE IS SUPPLIED WITH THE TV, PLEASE USE IT IN PREFERENCE

9 Fitting the TV.




i) Check the hardware supplied with television and if Vesa screws and spacers are supplied please use these to fit the TV.

  
ii) When spacers are provided it is very important that these are fitted in the correct place, fit between television & the TV mounting bracket (x) as in this sketch. The spacers are needed to keep the TV screen vertical.

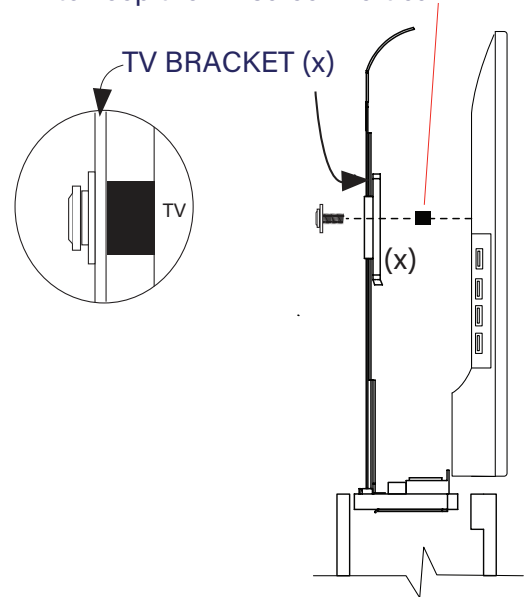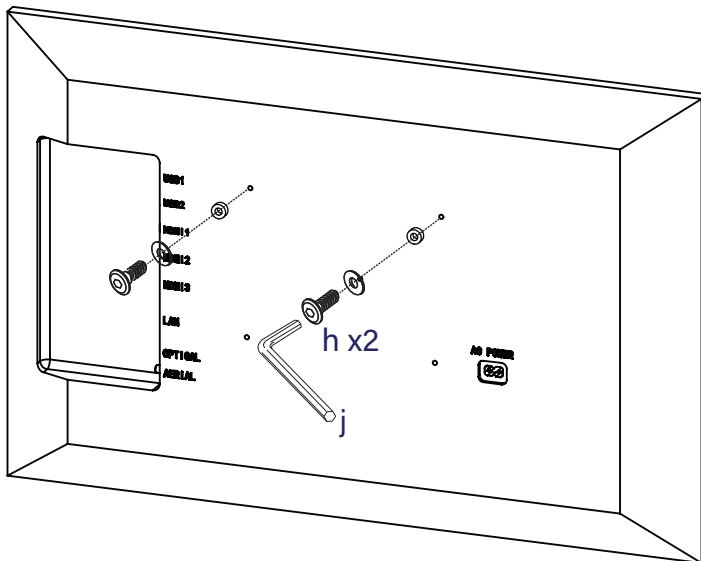


iii) To adjust the two TV supports (k), stand the television in position and loosely secure it to the TV mounting bracket (x) using the hardware supplied. Each slider should be set to just touch the front bezel. To make sliding each support easier, lift the TV slightly, above the support being adjusted.

If hardware is not supplied with the TV, choose suitable fittings from the TV Kit

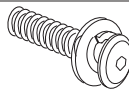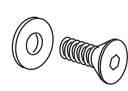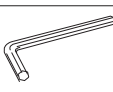	Bolt sets (M8 x 25mm)	
h	Countersunk screw sets (M6x12mm). Countersunk screw sets (M4x12mm).	
j	Allen Key (4mm). Allen Key (2.5mm).	

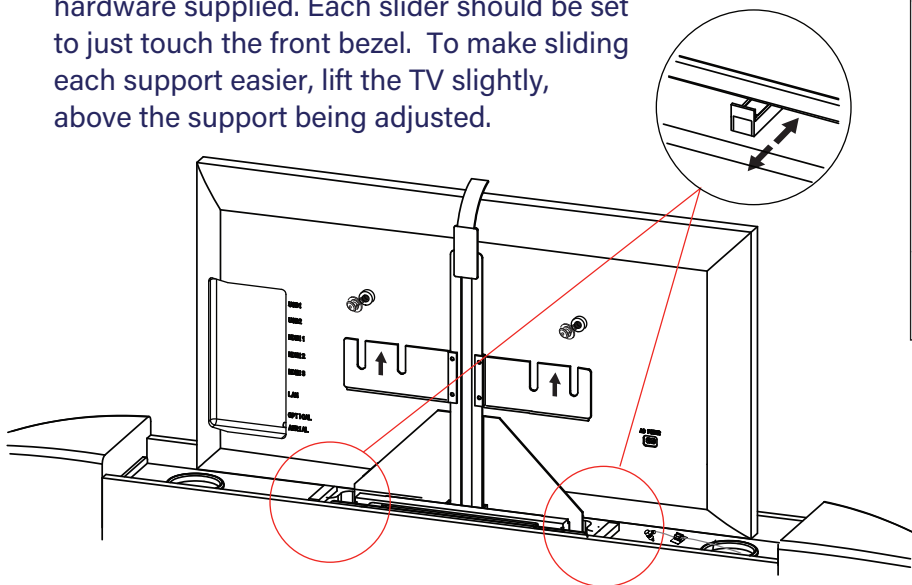 

 iv) Once supports are set, lightly push down in the centre of the TV and tighten the two Vesa bolts 100%, these should be in the centre of the long holes as shown.

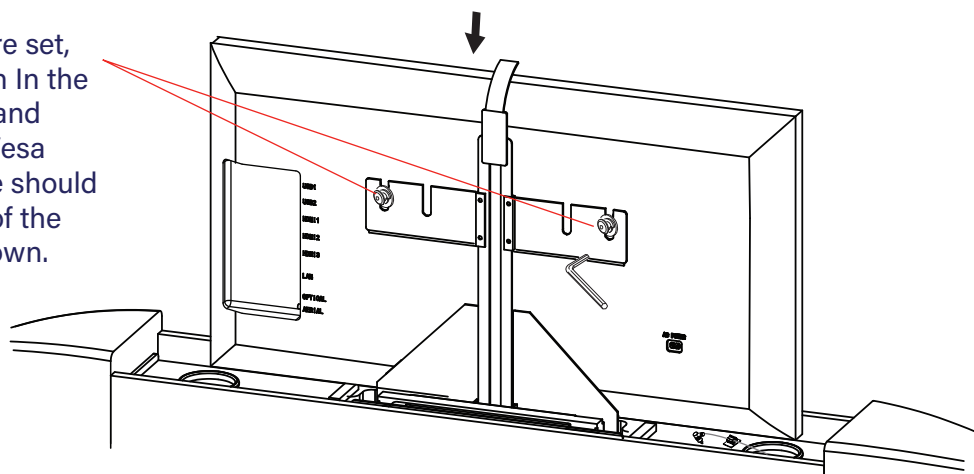

10 Note: For illustration purposes only, TV connections may vary.

TV Power Lead supplied with the TV

Keep wires tight so they can't get snagged. Peel off cover from cable clips & adhere to back of the TV.

HDMI PLUG TO CONNECT TO THE HDMI ARC SOCKET ON THE SIDE OF THE TELEVISION

PLUG IN - KEEP ALL LEADS TIGHT - USE CLIPS & TIES PROVIDED.

IF A STANDARD HDMI SOCKET IS SITUATED ON THE BACK OF THE TV, PLEASE USE THE HDMI 90° ADAPTER (P)

DO NOT REMOVE THIS CAP...

STD HDMI LEAD





DO NOT REMOVE THIS CAP...
This HDMI connector is not to be removed. It is used to connect the TV to the HDMI ARC socket on the back of the television.




11 Plug in the TV




i) For safety reasons, this three pin socket for the TV plug is not continuously live so only use to connect power to the television.

i) On the RC, press the "DOWN" button to lower the TV lift.

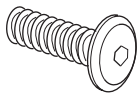
12 Make sure everything is connected safely then fit the left hand side rail.

   - a  x4
- b  x4
- c  x4
- d  x1

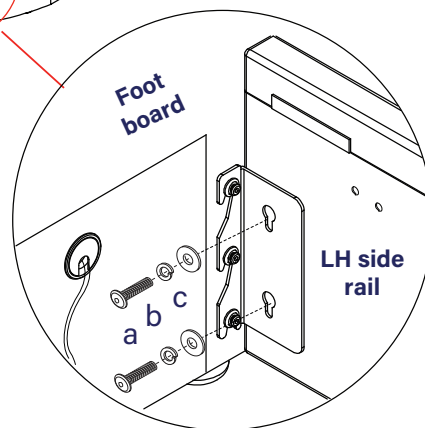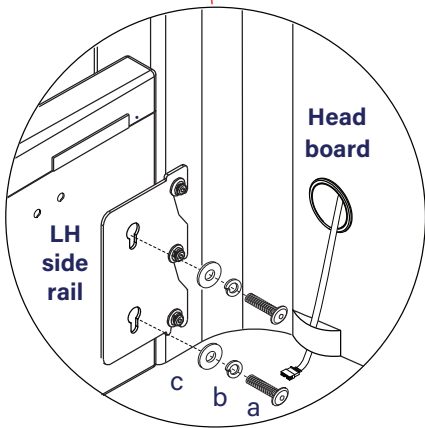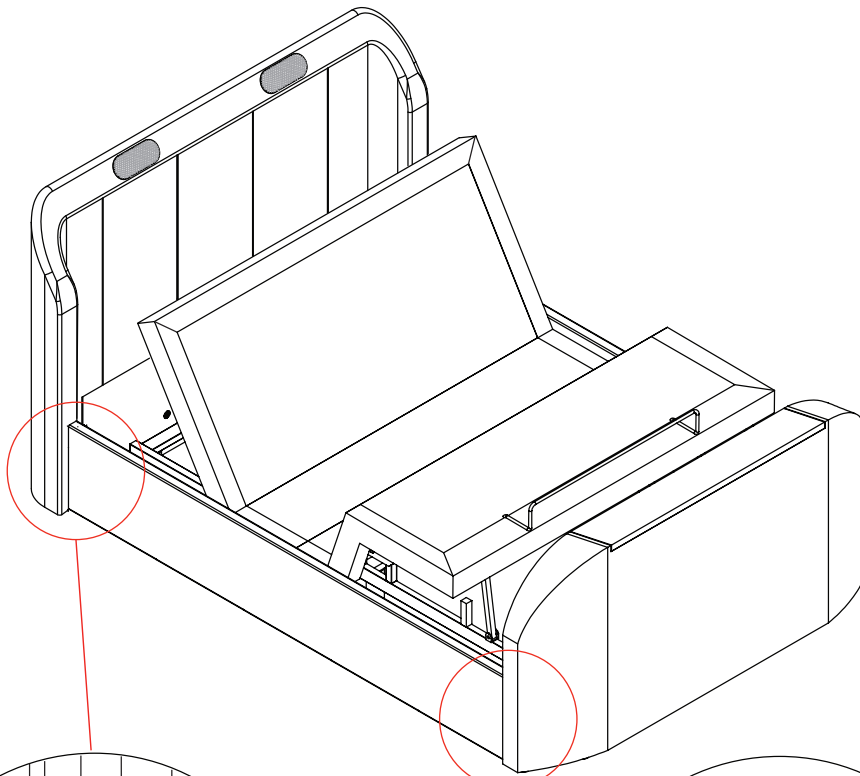

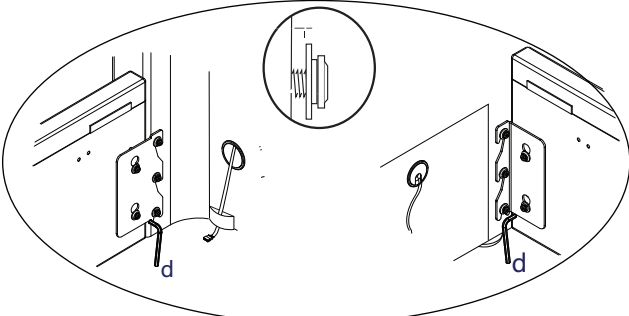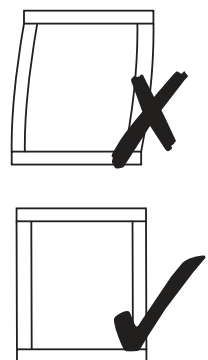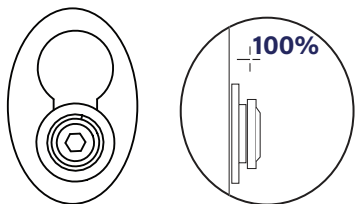
<p>i) Fit the side rail then tighten all x4 bolt sets 90% using Allen key (d).</p> 	<p>ii) Make sure the bed is squared up as shown.</p> 	<p>iii) Check the bolts on the side rails are sitting down in the keyhole slots then tighten all x20 bolt sets 100%.</p> 
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 13 Fit the remote control holster to left or right side rail.

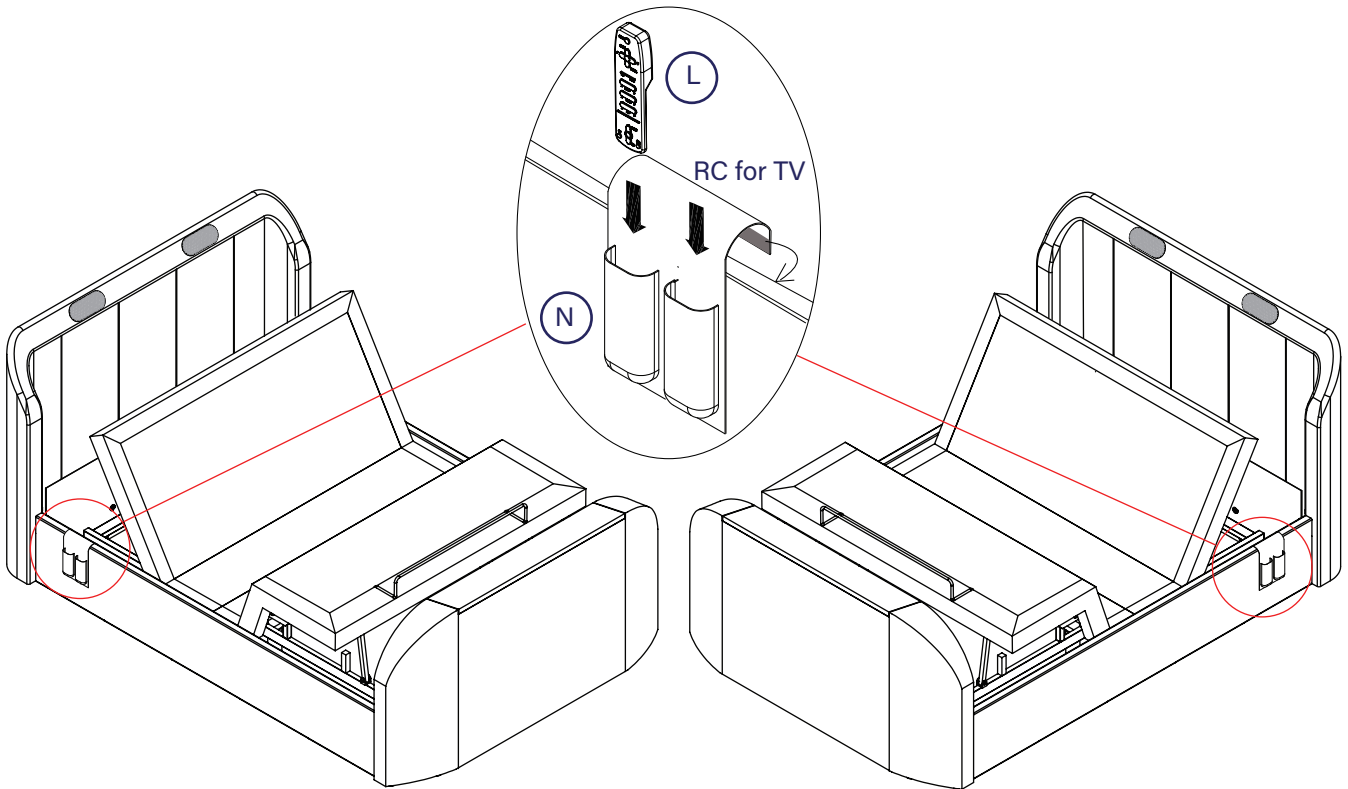

 14 Align the mattress base correctly using the sketch below as a guide.

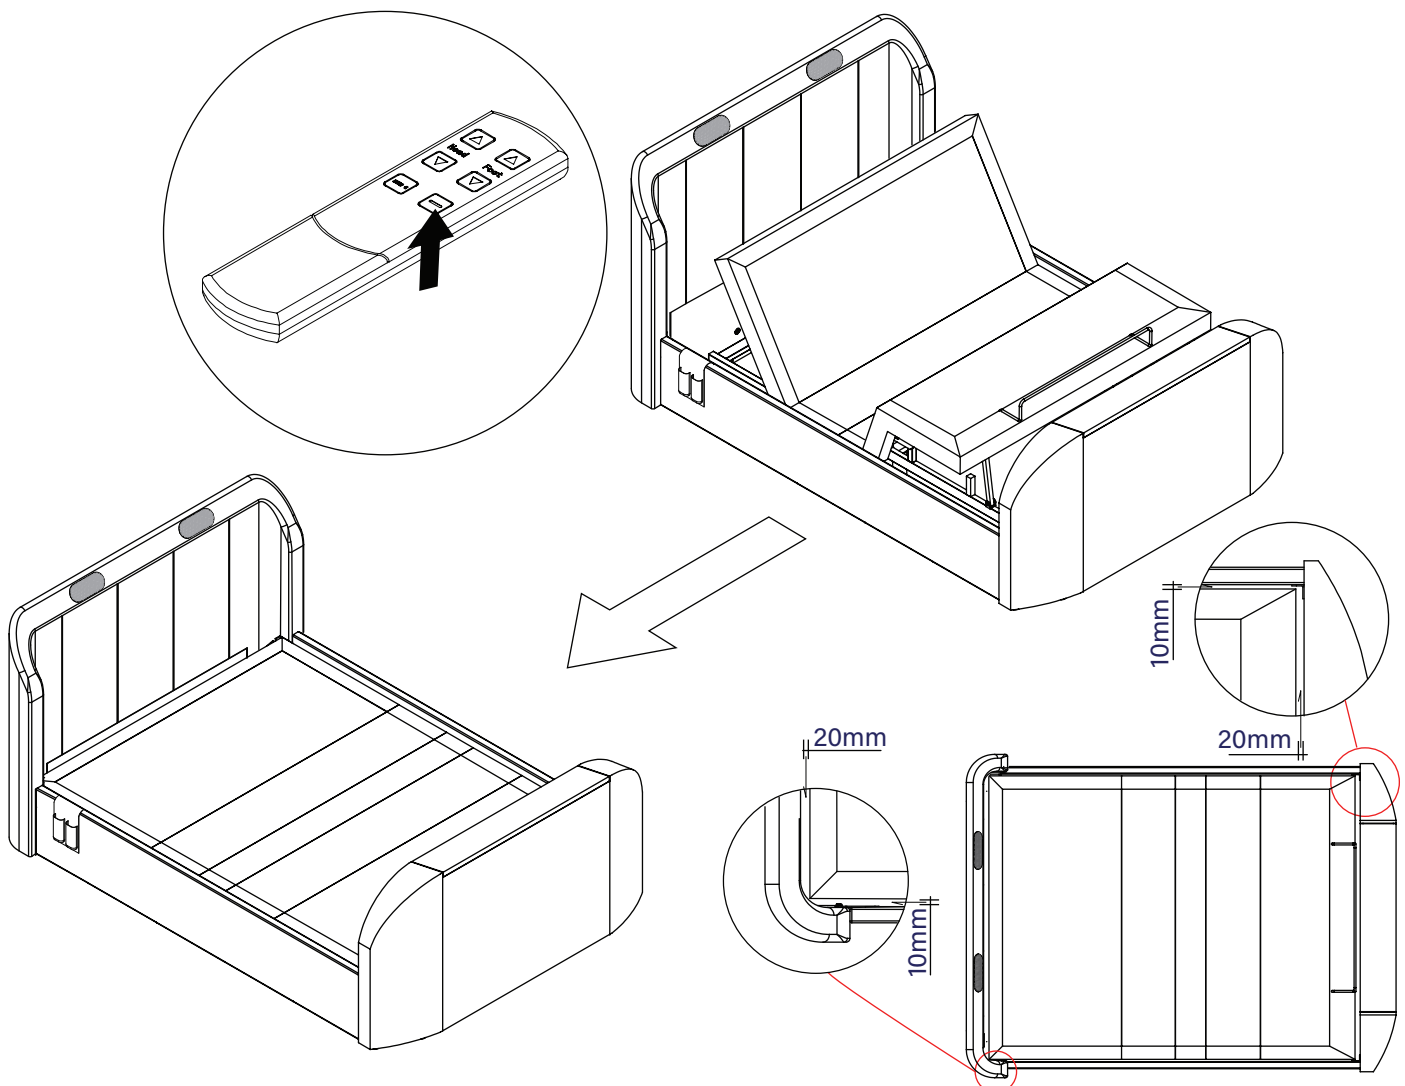


Sapporo Real 5.1 SS Audio System

HDMI (ARC) amplifier system

Music Power total = 210 Watts.

Three front speakers x30W
 Two Rear speakers x30W
 One Sub Woofer x60W

OPERATION GUIDE
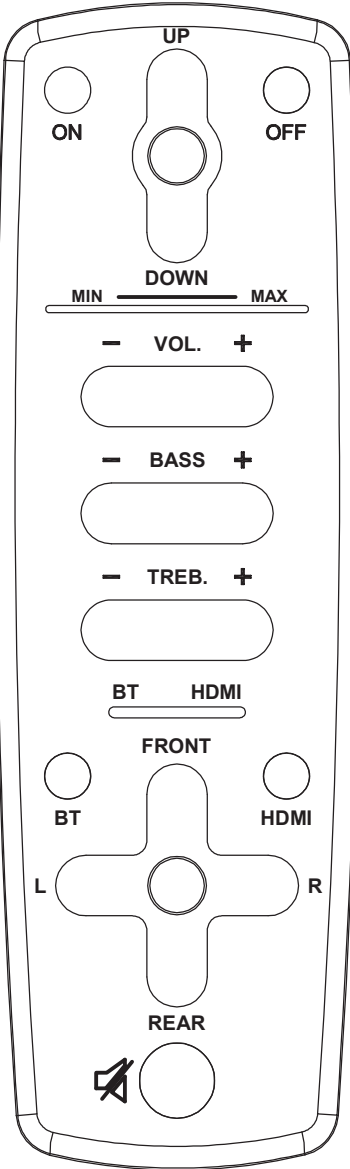
<p>SAPPORO 5.1 Remote Control (W)</p> 	<p>TURN AMPLIFIER ON or OFF.</p> <p>1) Turn on the mains power to the TV Bed. 2) Press the Remote Control (RC) ON button for 2 seconds to synchronise and prepare the system, system voice shall say 'Power On'. 3) When finished watching or listening, press the OFF button for 2 secs.</p>
	<p>LIFT or LOWER THE TV.</p> <p>Press once and TV will rise to it's upper working position. Power to the TV will be connected automatically - operate the TV using it's Operation Guide.</p> <p>Press central button once and TV Lift will stop.</p> <p>Press once and TV will go down - as soon as the lower resting position is reached power to the TV is switched off to prevent it overheating.</p> <p>NOTE: BLUETOOTH WILL WORK NORMALLY WHEN TV IS UP OR DOWN.</p>
	<p>The same blue LED light bar is used to show steps for all the following controls: VOLUME, BASS & TREBLE.</p>
	<p>VOLUME CONTROL</p> <p>Use --- + or - --- button to increase or decrease the volume. Note that this control operates step by step and as it is adjusted, the blue LED light bar follows each step until full volume is reached, then the blue lights are all on.</p>
	<p>BASS CONTROL</p> <p>Adjust the Bass attenuation - these buttons increase or decrease the lower frequencies of the sound.</p>
	<p>TREBLE CONTROL</p> <p>Adjust the Treble attenuation - these buttons increase or decrease the higher frequencies of the sound until the preferred sound level is achieved. Note: if higher frequency sound is reduced, the volume of the sound appears to be reduced too - this is normal.</p>
	<p>BALANCE CONTROL</p> <p>Press the button marked Front and the sound level will be higher at the footend than the headend of the bed.</p> <p>Press the L button and sound level will increase on the left Press the R button and sound level will increase on the right.</p> <p>Press the button marked Rear and the level of the sound will be higher at headend than the footend of the bed.</p> <p>To bring back the sound to middle of the bed, press the central button to reset it.</p>
<p>MUTE BUTTON</p>	

Technical Specifications

Max TV Size: 975 x 575 x 85 (WHDmm)

Overall Dimensions (LWH mm)

Double: 2285 x 1575 x 1240

King: 2385 x 1725 x 1240

 
Super King: 2385 x 2025 x 1240

Internal Dimensions (LW mm)

Double: 1930 x 1380

King: 2030 x 1530

Super King: 2030 x 1830

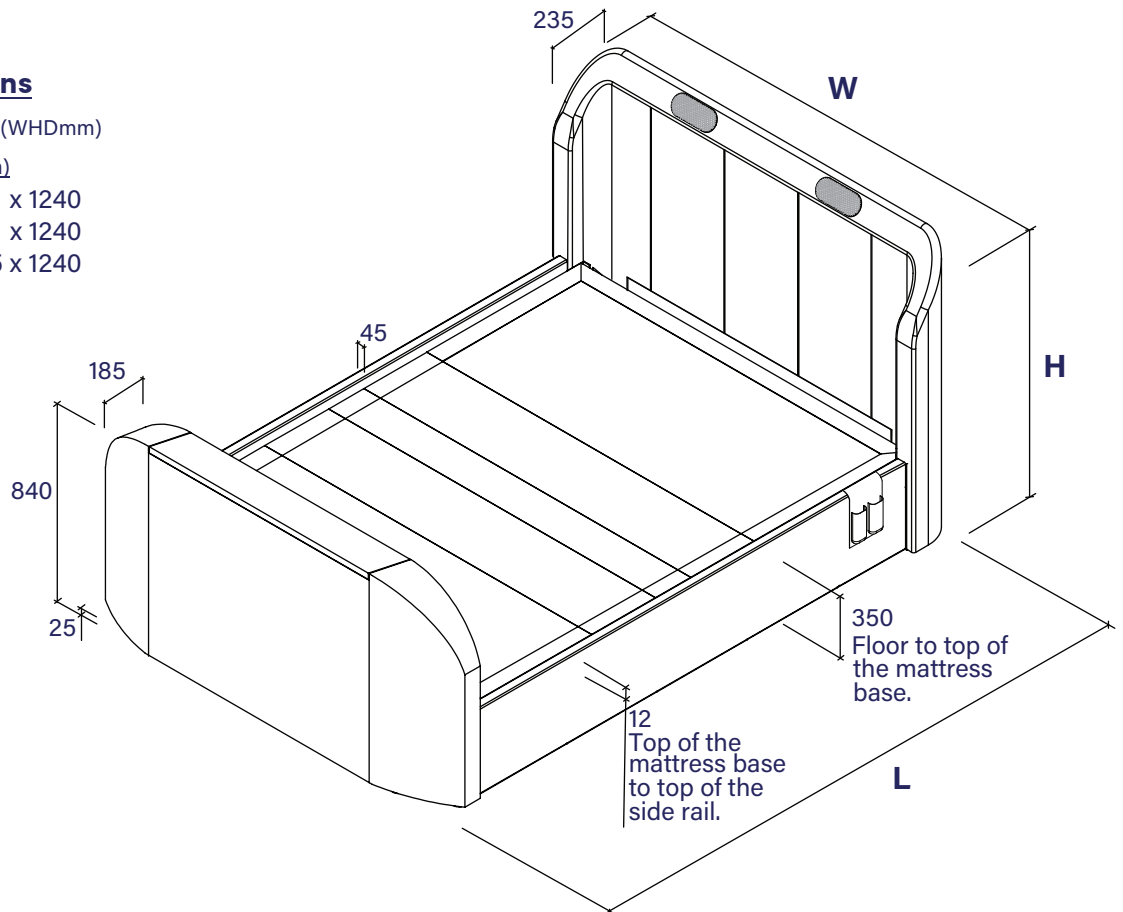

Care and maintenance

Here are some tips to keep your new bed in tip-top condition



Cleaning

To clean your new bed, we'd advise using a warm damp cloth or if fabric, remove dust using a low suction vacuum cleaner.

Please do not use abrasive chemicals or bleach as this may damage the product.



Checking and moving

Periodically we recommend you check that the screws or fixtures haven't become loose over time. To move your new bed, we recommend lifting it where possible, as dragging or pushing it could cause damage to the legs or flooring.



Wood

Please note each of our wooden pieces are unique, meaning that markings and shade can vary slightly between beds. Over a period of time, the wood might lighten or fade slightly due to light exposure.



Fabric

Please note depending on the lighting, positioning and surroundings of your room, the shade of the colour can sometimes appear slightly different. Over a period of time, the colour might lighten or fade slightly due to light exposure.



Metal

Metal tends to be more resilient to everyday wear and tear. We recommend to gently dust your metal furniture and keep it dry to maintain its look.

Thank you for shopping with us - we hope you have a great night's sleep.

Sleep well

TV BED SAFETY INFORMATION

GENERAL INFORMATION

It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers, on top of the TV footboard which may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment. If this happens, please contact Customer Services - ring 0800 652 6750.

For customers based in Northern Ireland, please call 028 9050 8300.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.

To keep the bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric use a light vacuum cleaner; disconnect power before cleaning.

Supplied with the TV bed is a remote control to operate the TV Lift and a remote control to operate the Television.

Both these remotes use batteries, there are strict controls for disposal of batteries - your local council can advise on how to safely dispose of them. Never burn batteries on an open fire as they could explode.

IMPORTANT POWER INFORMATION

It is essential that the Mains Power Lead is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The socket providing the power must be accessible at all times in case one needs to switch off the supply quickly.

During an electrical or lightning storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock.

Leads or leads supplied with this bed, or other approved mains powered extension leads used to power your own equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents.

Do not interfere with or modify any leads already fitted and do not add any extra media leads unless they are routed through the ducts as shown.

All leads must be tightly connected to back of TV using cable clips provided, never hanging loose.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.

Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is an unusual noise, disconnect the power & contact Customer Services.

TELEVISION INSTALLATION

Please follow the television installation instructions below.

Raise the TV Lift by pressing the up button of the remote control.

Connect the Aerial & standard HDMI leads by passing down the appropriate duct to suit connections on back of the TV.

Connect the TV to the mounting bracket as appropriate taking care to follow the instructions.

If necessary mounting bracket can easily be adjusted up or down to align with upper fixing holes on rear of TV.

Connect the TV Power Lead by passing the plug down one of the ducts, plugging it into an adapter if supplied, then into the TV power socket which is on the face of footboard. This socket is only to be used for the TV as for safety reasons, the power supply to it is not constant.

If required, connect your own media leads through either of the ducts - connect your media equipment when ready.

Please use the cable clips & cable ties to make certain there are no wires hanging loose that might get snagged or trapped.

The TV can now be operated following the TV User Guide supplied with your TV.

When finished viewing, lower the TV back into the footboard by pressing the down button of the remote control, the TV will retract into the footboard automatically - to prevent overheating, power shall be turned off when the TV reaches the lower rest position. When the up button is pressed - the TV Lifting Column rises and power to the TV turns back on automatically.

TROUBLE SHOOTING

 
If your equipment does not operate please check all the power connections from wall to the socket in the footboard.

Make sure TV is switched on (Note: TV will only work when it is in the up position).

If you cannot resolve an issue or still have a problem or need help, please contact Customer Services for advice.

IMPORTANT: Care should be taken when connecting electrical items. If you are in any doubt about the correct connections to your TV Bed, please consult an approved electrician.

Occasionally you may find the radio wave connection between remote control and TV Lift is lost, probably due to atmospheric conditions. In that case please follow these simple instructions:

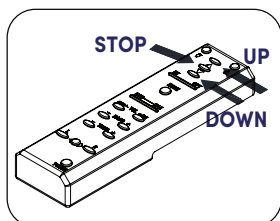


- ① Disconnect all mains electric power to the bed, for at least 60 seconds.
- ② Press either UP or DOWN Button on TV Lift Remote Control and keep holding button down, simultaneously re-connect mains electric power to bed keeping button down for at least a further 5 seconds. The TV Lift unit receives the signal from the Remote Control and TV lift will begin to move UP or DOWN whichever button was pressed.
- ③ Re-pairing is now complete.



Little dreamers

 Keep the little ones entertained while you assemble your new purchase.

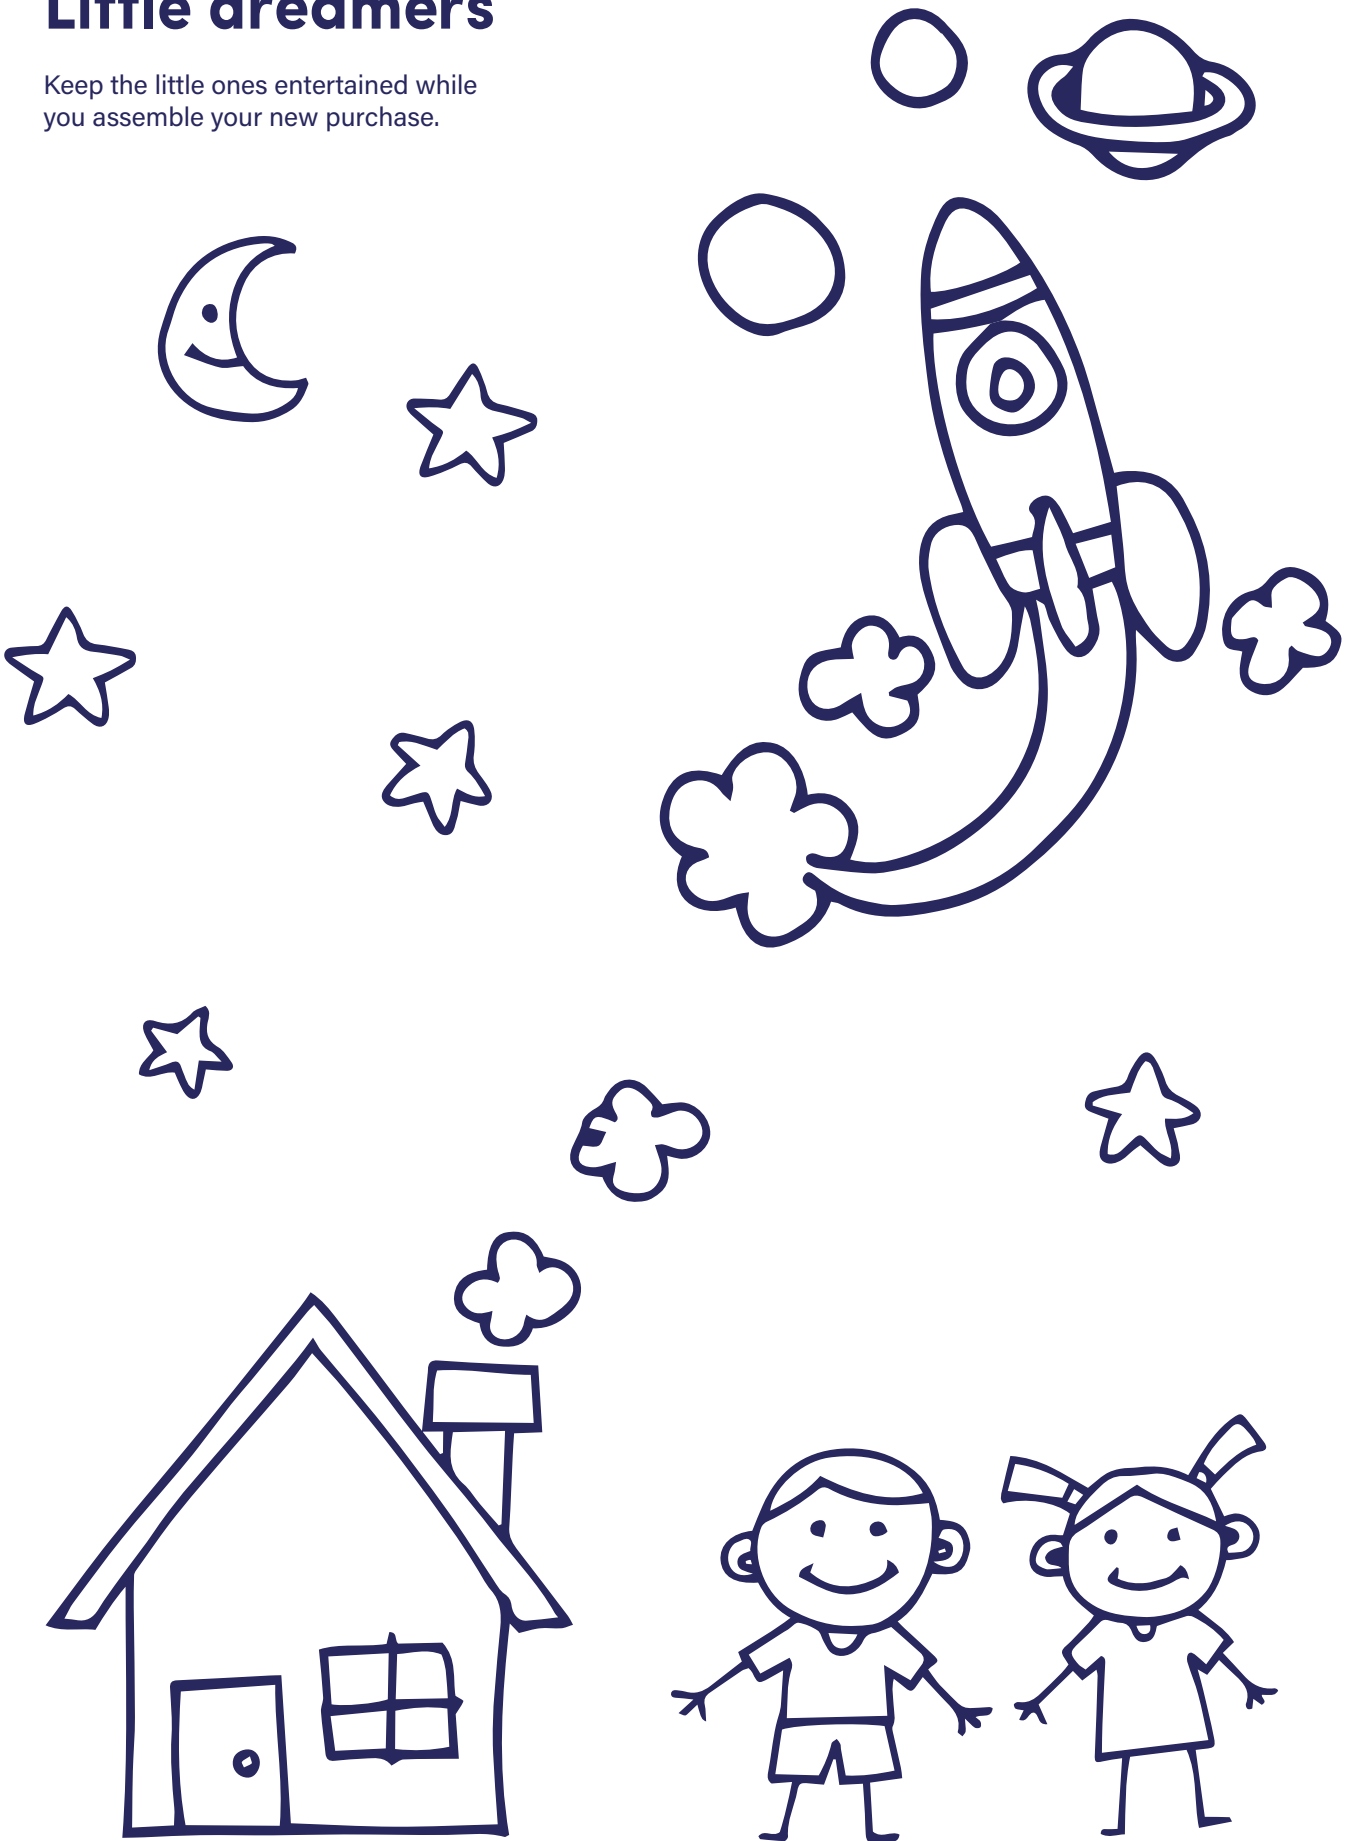

Dreams

