

CARE OF YOUR TEAL VELVET SOFA BED

Do not discard any of the packaging until you have checked the product.

Outlined below are General Care Instructions that will help prolong the look and life of your sofa bed by preventing wear and damage.

PLEASE NOTE: The Fabric on this product is Flame Retardant treated and therefore should be Specialist Upholstery cleaned only

CLEAN REGULARLY:

- ✚ Remove dust by pre-brushing with a soft brush
- ✚ Gently Vacuum all areas

 
SUNLIGHT AND HEAT

- ✚ Direct sunlight or heat can cause fabrics to deteriorate or fade. Protect them by situating your furniture out of the way of prolonged direct sunlight or by drawing curtains and blinds when applicable.
- ✚ Avoid placing furniture too close to fires or radiators.
- ✚ Reduce potential damage by moving items around or changing position so that the same piece or area is not always exposed.

SAFETY WARNINGS

✚ **ENTRAPMENT WARNING: KEEP HANDS CLEAR WHEN ADJUSTING THE RATCHET MECHANISM TO AVOID FINGER ENTRAPMENT: DO NOT ALLOW CHILDREN TO ADJUST THE MECHANISM.**

- ✚ Never allow children to jump on the Sofa Bed.
- ✚ Do not allow domestic pets to climb on the sofa bed or chew or claw it; oils and greases from animals will cause deterioration in the appearance of the fabric.
- ✚ Sharp objects such as buckles, toys and jewellery can easily snag on the fabric and produce tears and pulls in the fabric.
- ✚ Hot objects such as the heat from cups and mugs can permanently disfigure upholstery.

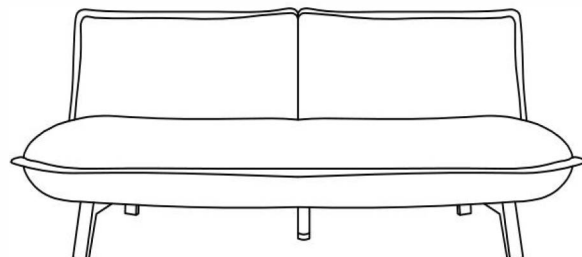











INSTRUCTIONS FOR FIXING LEGS TO SOFA BED







2 Person Assembly

Parts List:

A		Bolt x 4	F		Allen key x 1
B		Bolt x 2	G		Allen key x 1
C		Bolt x 2	H		Bracket x 2
D		Washer x 4	I		Leg x 2
E		Washer x 4	J		Support leg x 1

    - 1) Unpack the sofa bed and check the above items are present. Please note that hardware and legs can be found in the box near the sofa bed. If you have any parts missing please contact sales@kyoto.co.uk

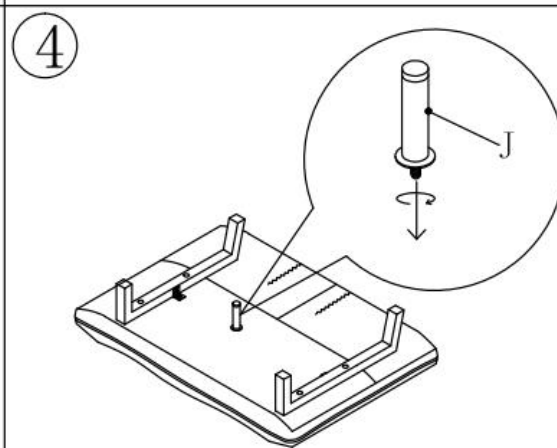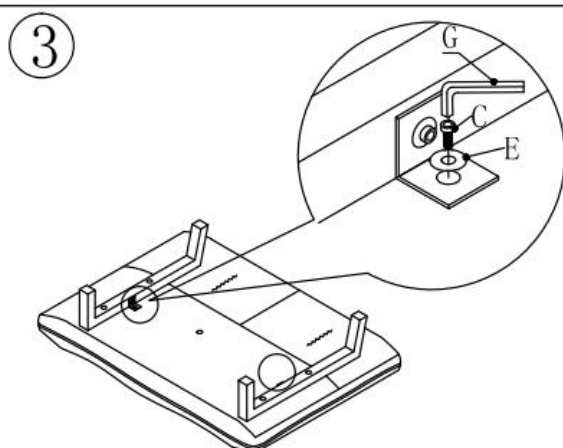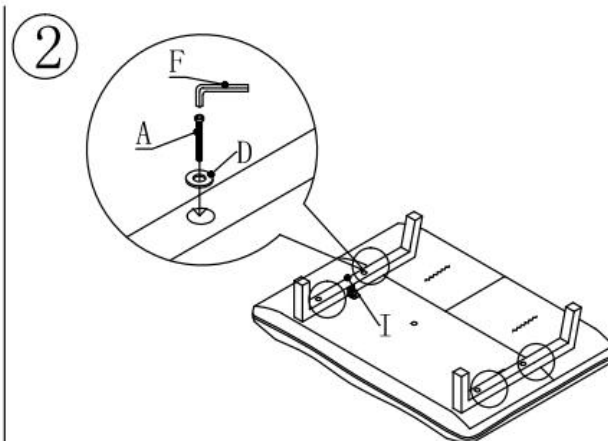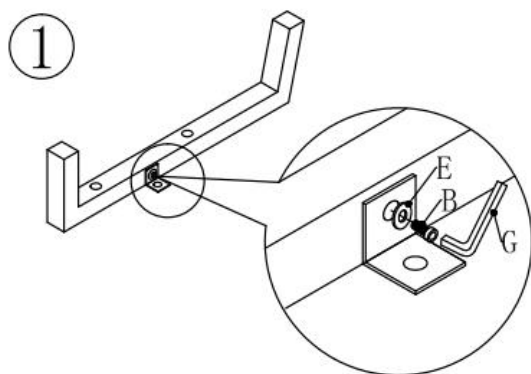

- 2) Place the sofa bed face down on a clean, flat surface.
- 3) Affix the legs as shown in the above diagram using the bolts and Allen key supplied. Please note that the legs positioned at 90 degrees should be at the front of the sofa when it is in the upright position, with the angled legs facing towards the back of the sofa.

Sofa Bed “Hidden” Legs

Please note there are “hidden” legs zipped into the back of the sofa bed to be used when in the bed position. Please be aware that these legs must be used while in the bed position to provide additional stability:

 
- 1) Draw the legs from the zipper pockets before converting from a sofa to the bed position.

 
Follow the instructions below to convert the sofa to the bed position.

- 2) To retract the legs: first convert from the bed position to the sofa (following the instructions below).

Retract the legs by pressing firmly on the button at the top of the leg (this will release the lock) and press toward the bed; zip close once retracted.

WARNING: TAKE CARE NOT TO TRAP YOUR FINGER WHEN CARRYING OUT THE ABOVE. DO NOT ALLOW CHILDREN TO PLAY WITH OR RETRACT THE LEGS.

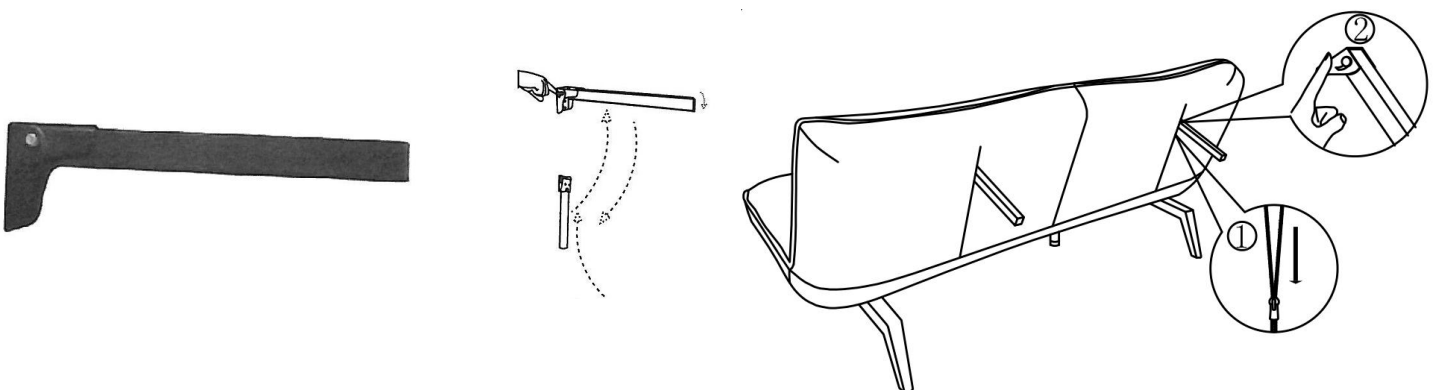

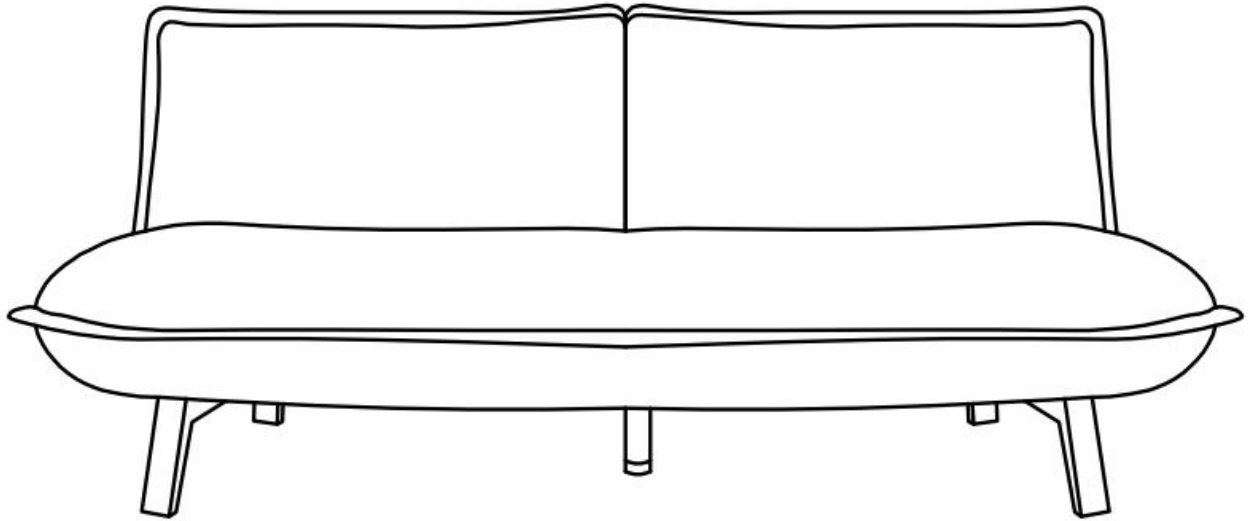

FROM SOFA TO BED: Hold the back of the sofa and tilt forward towards seat until click is heard; now tilt back into the bed position.

FROM BED TO SOFA: Lift the back until 1*click is heard for recliner position;2*clicks for upright sofa position.

FABRIC CONTENT:

MAIN FABRIC 100% POLYESTER

OTHER FABRIC (VISIBLE):

NON-WOVEN FABRIC 100% POLYESTER