



# Evans TV Bed

**Double Size**

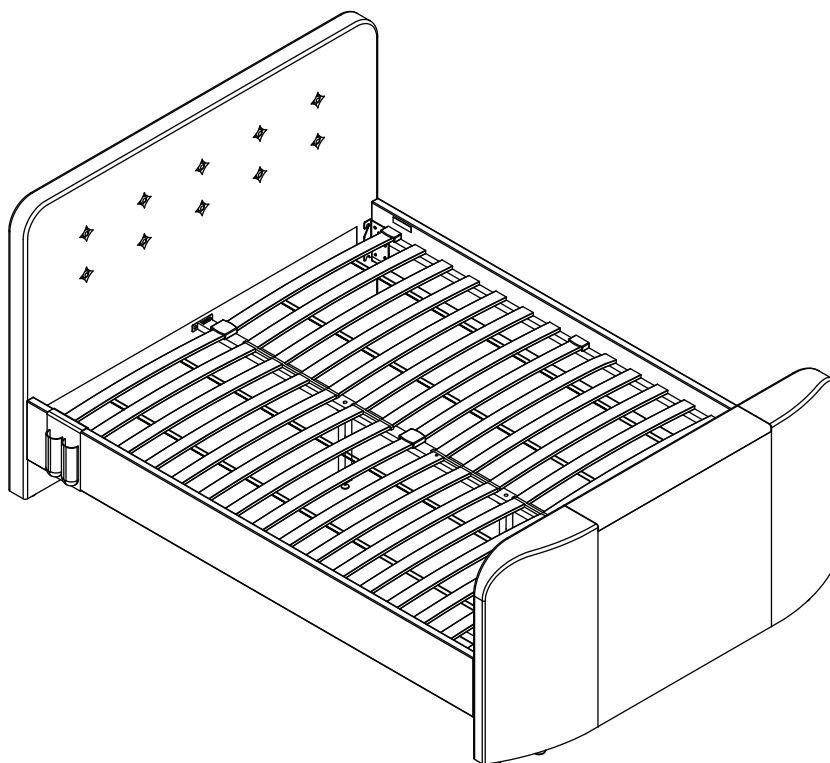

**King Size**

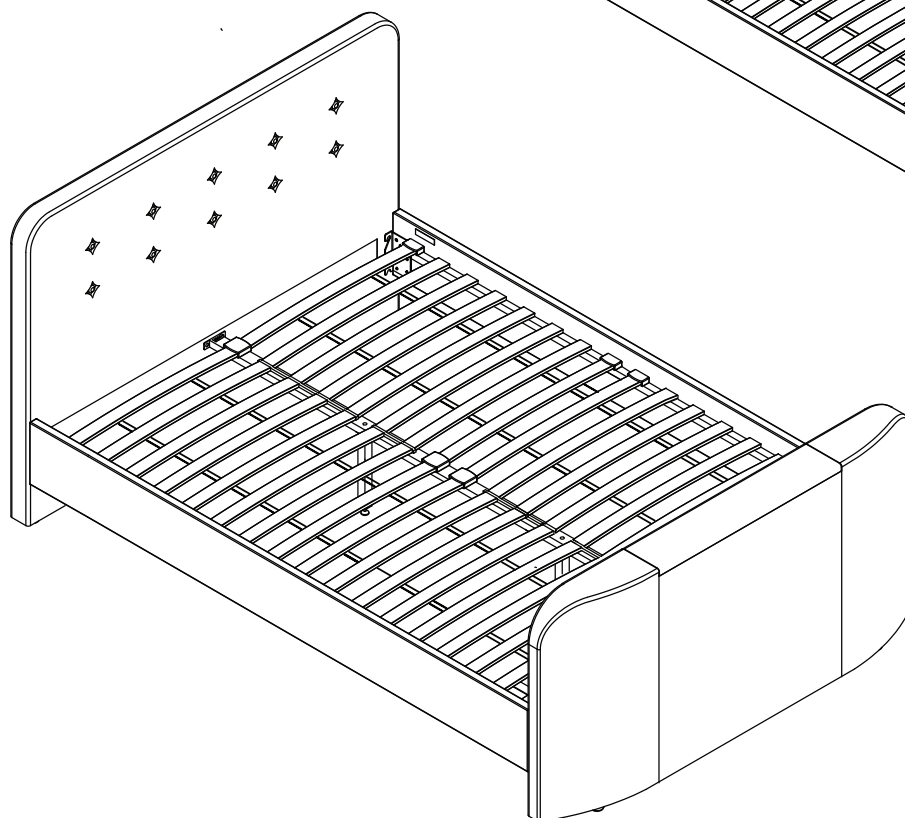

1 hour approx  
assembly time



Two person  
assembly

# Thank You

Dear Customer, Thank you for choosing to purchase your bed from our on-line store - we hope it brings you your best ever night's sleep. Before you begin building your bed, please take a moment to read through the instructions and make sure that you've got all the relevant parts listed on the following pages.



## Assembly tips

Before you begin, it's best to identify all parts and fittings to build your bed. We advise laying these out on the floor to check you have everything, and familiarising yourself before building.



## Top tip

We recommend that you build your new bed in the room you'd like it to be located - this will help prevent any risk of damage to your newly built bed whilst moving it.



## Safety and care

It's really important to ensure children and animals are kept away from the assembly area, as there are small components used in this bed which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation.



## Help and support

It's our mission to give the whole nation a great night's sleep - this means that the quality of our products is of utmost importance to us. If there are any issues with your product or any missing parts, please contact our on-line Help Centre.




## Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Our assembly instructions are printed on recycled paper. Please keep your assembly instructions safe to refer back to in the future.

# Parts

## Important information

The bed you have purchased comes complete with it's own bentwood slat base, please follow the instructions below in the current order. Before you begin building your bed, please take a moment to read through the instructions and make sure that you've got all the relevant parts listed on the following pages.

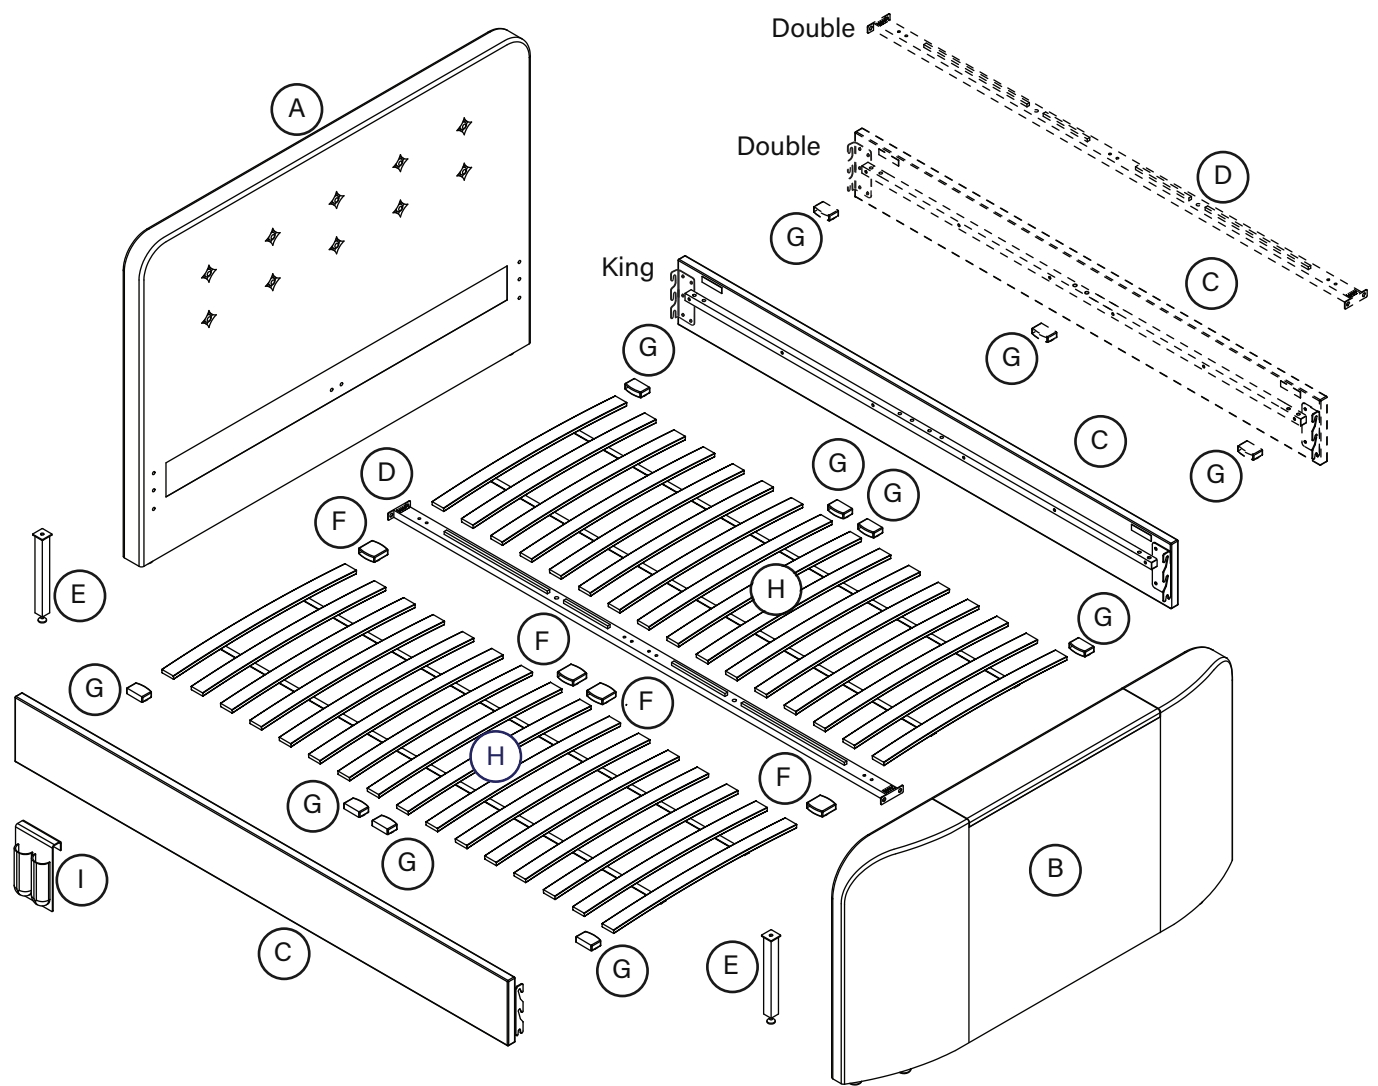


## Parts list

A. Headboard	1	F. Double Plastic Slat Caps	Double / King	3/4
B. Footboard	1	G. Single Plastic Slat Caps	Double / King	6/8
C. Side rails	2	H. Bentwood Slat Set		2
D. Centre Support Rail	1	I. Holster for Remote Controls		1
E. Centre Support Legs	2			












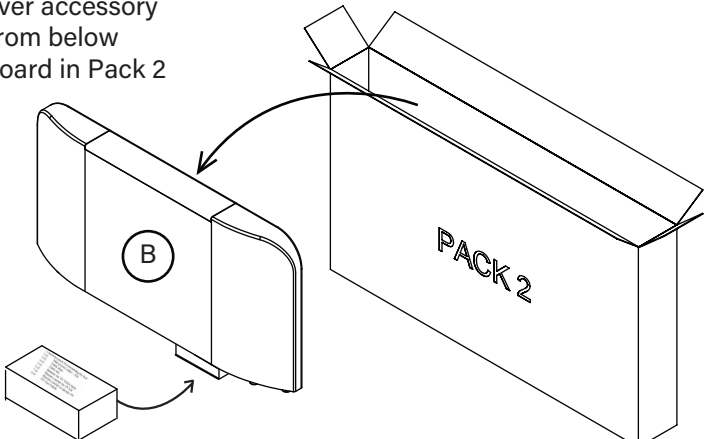

## Tools required

No more tools needed.




# Fittings

Packed in an accessory box inside bottom of footboard carton - Pack 2
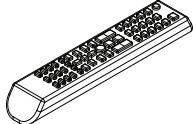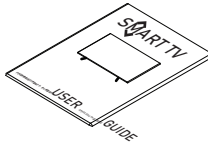
<p><b>a x16</b></p>  <p>Bolts (M8x30mm) for fitting side rails (C) &amp; centre support rail (D) to headboard &amp; footboard (A&amp;B)</p>	<p><b>b x12</b></p>  <p>Spring Washers for M8 Bolts</p>	<p><b>c x18</b></p>  <p>Flat Washers for M8 Bolts</p>	<p><b>d x1</b></p>  <p>Allen key for M8 Bolts</p>	<p><b>e x2</b></p>  <p>Bolts (M8x40mm) for fitting centre support legs (E) to centre support rail (D)</p>
<p><b>q x1</b></p>  <p>Mains Power Lead 3mt</p>	<p><b>t x1</b></p>  <p>TV Remote Control</p>	<p><b>u x1</b></p>  <p>TV Lift Remote Control</p>	<p><b>v x1</b></p>  <p>User Guide for TV</p>	
<p><b>w x1</b></p>  <p>Spanner for TV VESA Bolts</p>	<p><b>x x3</b></p>  <p>Cable Clips</p>	<p>Recover accessory box from below footboard in Pack 2</p> 		
<p><b>y x3</b></p>  <p>Cable Ties</p>				

## Bed assembly

**1**

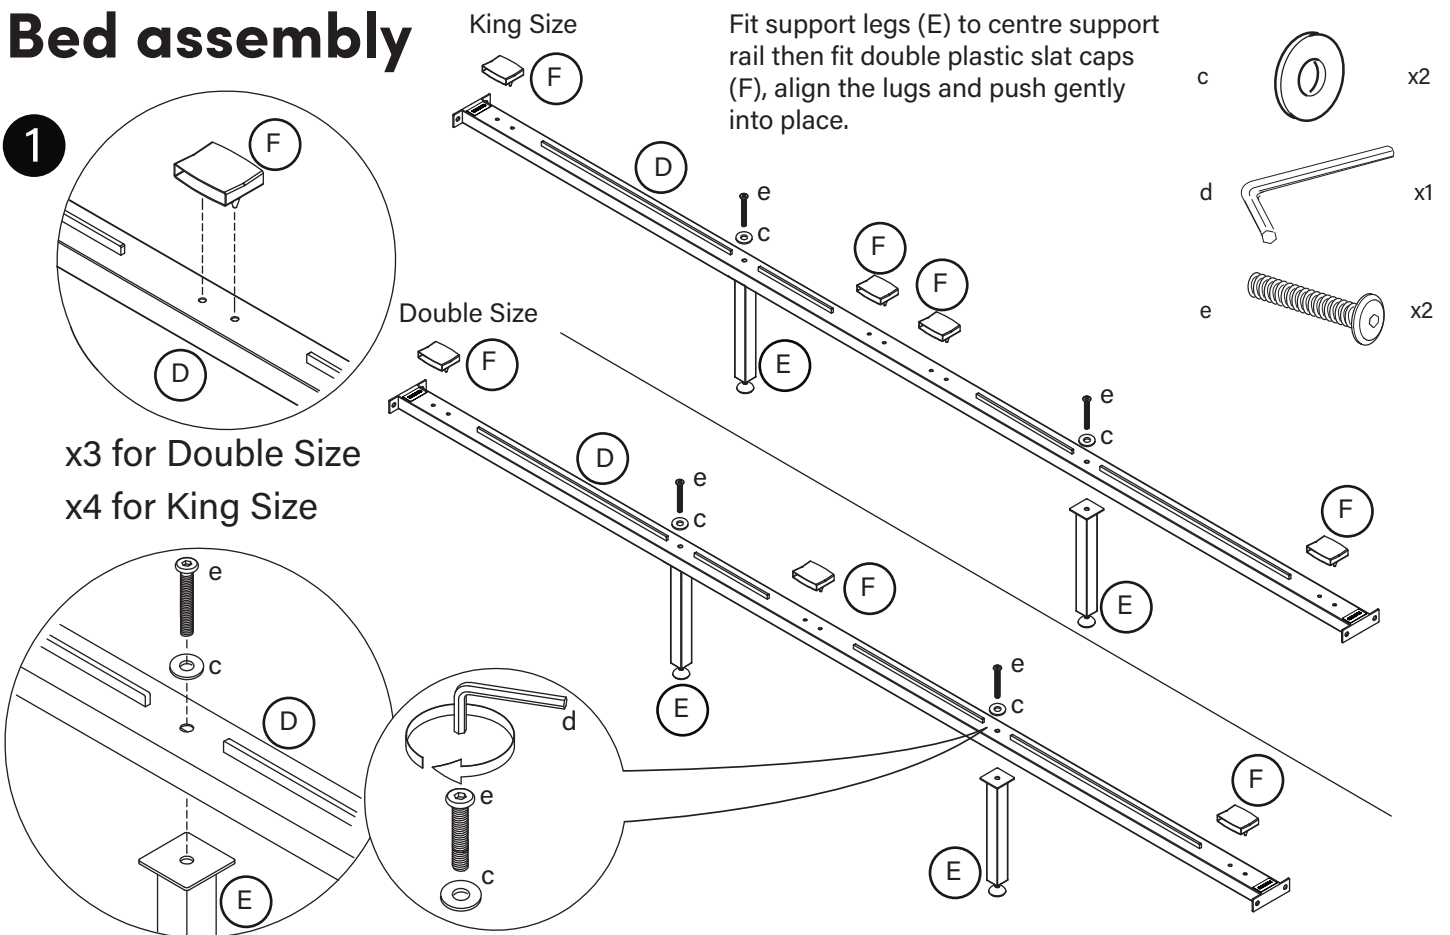

King Size





Double Size


Fit support legs (E) to centre support rail then fit double plastic slat caps (F), align the lugs and push gently into place.

x3 for Double Size  
x4 for King Size




Callouts: c, d, e, F, D, E


2

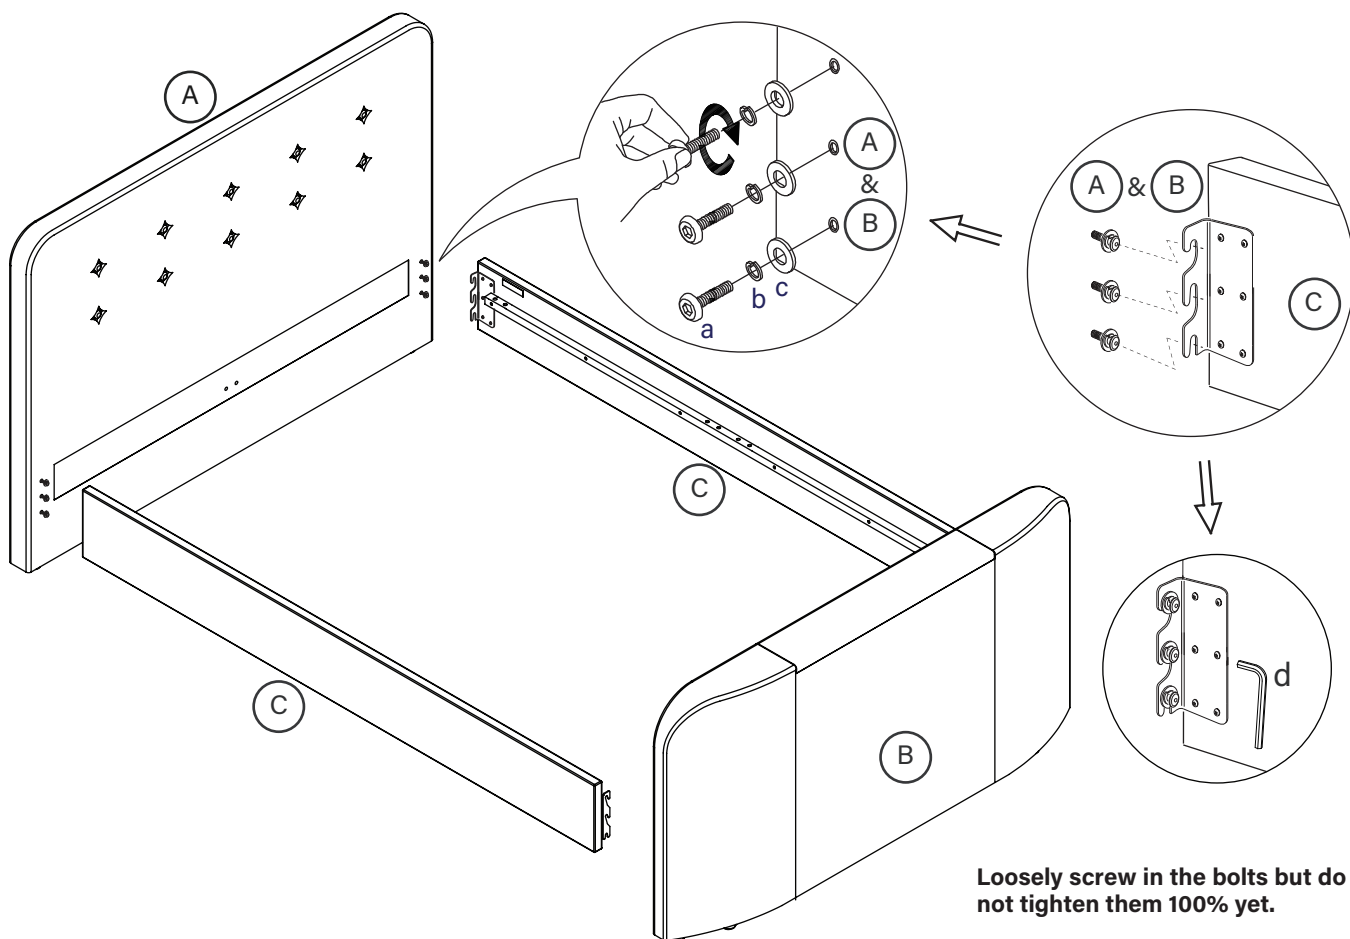- a  x12    b  x12    c  x12    d  x1




3

- a  x4    c  x4    d  x1

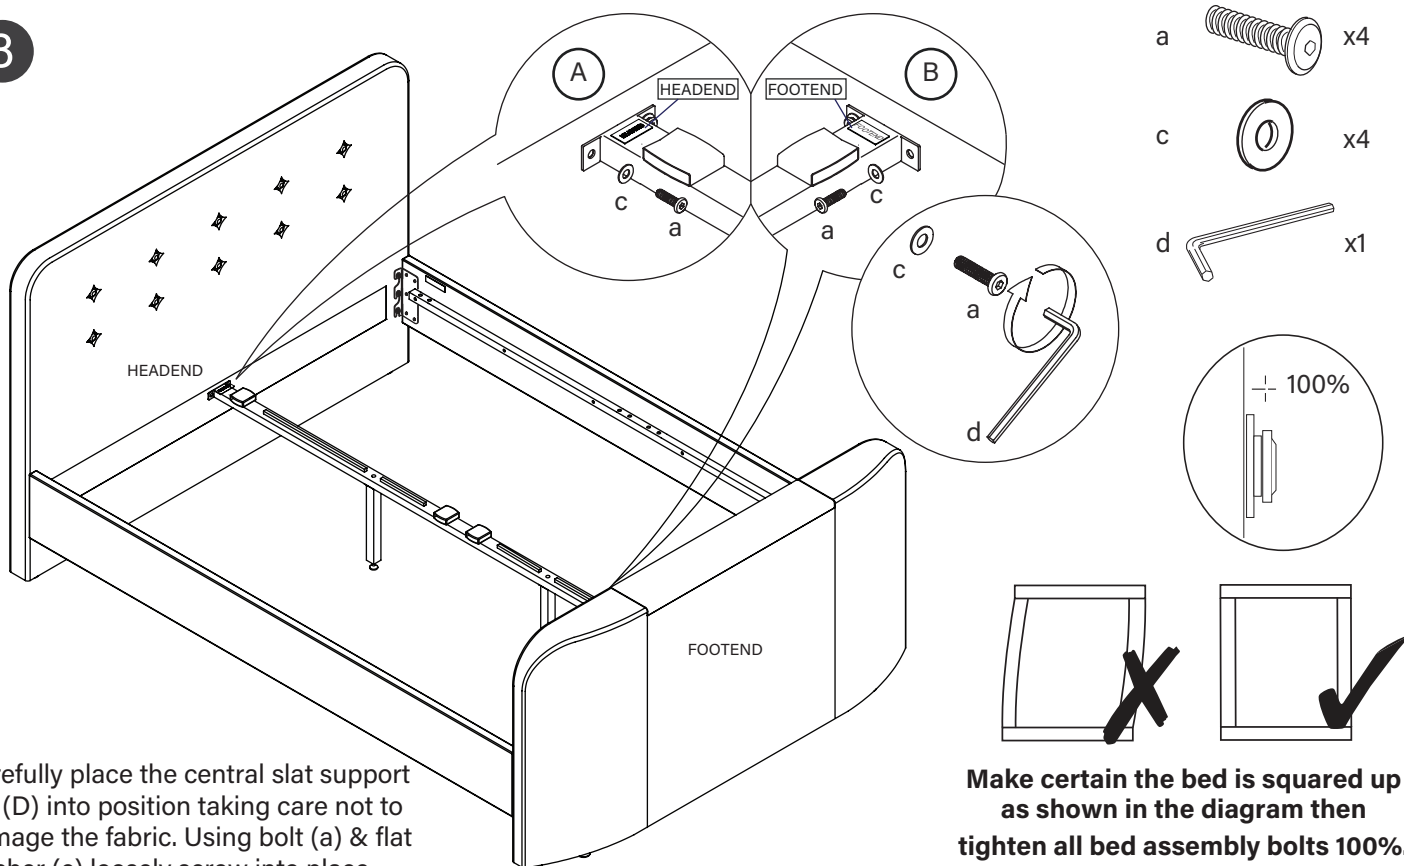


# Electrical & Cable Connections

4

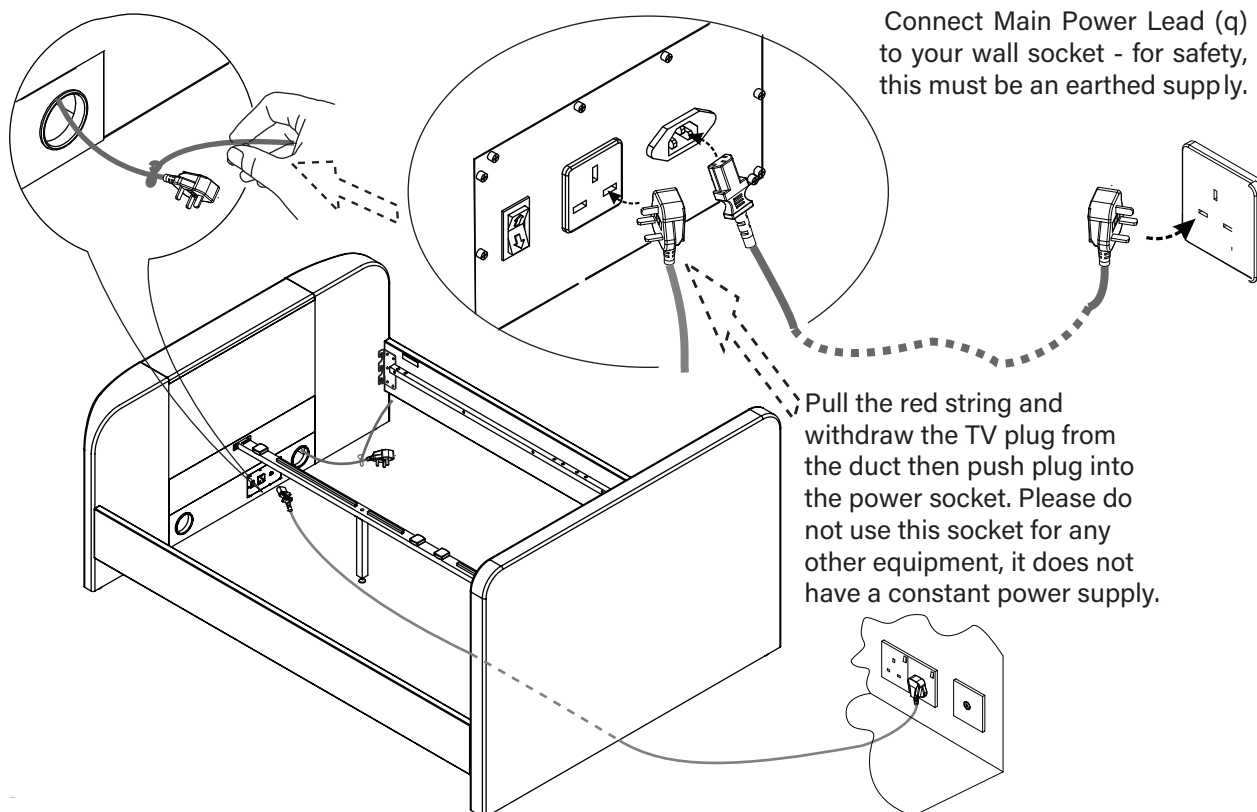


5


i) Remove TV Lift remote control.

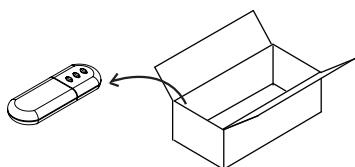

ii) Remove transit packing.

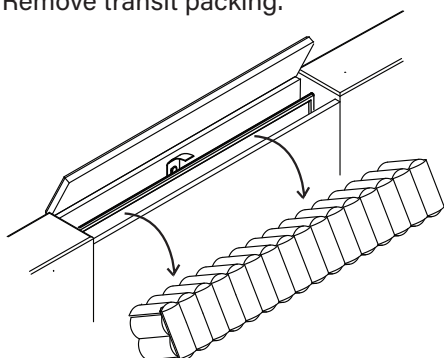

iii) Press the "UP" button to raise the TV lift.

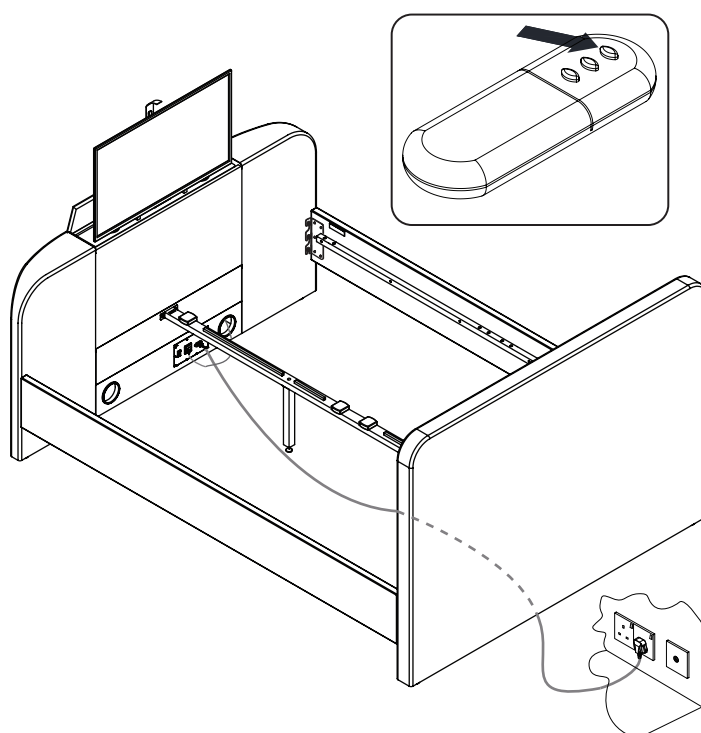


iv) Make sure all protection is removed then please dispose of it responsibly.

6

**IF YOU NEED TO CONNECT HDMI CABLES OR AN AERIAL CABLE TO THE SOCKETS UNDERNEATH THE TV, PLEASE FOLLOW THESE INSTRUCTIONS.**


- i)** Unplug TV from it's power socket.
- ii)** Loosen the x4 VESA bolts using spanner (w), there is no need to remove these completely.
- iii)** Lift TV off the brackets and hold it safely.

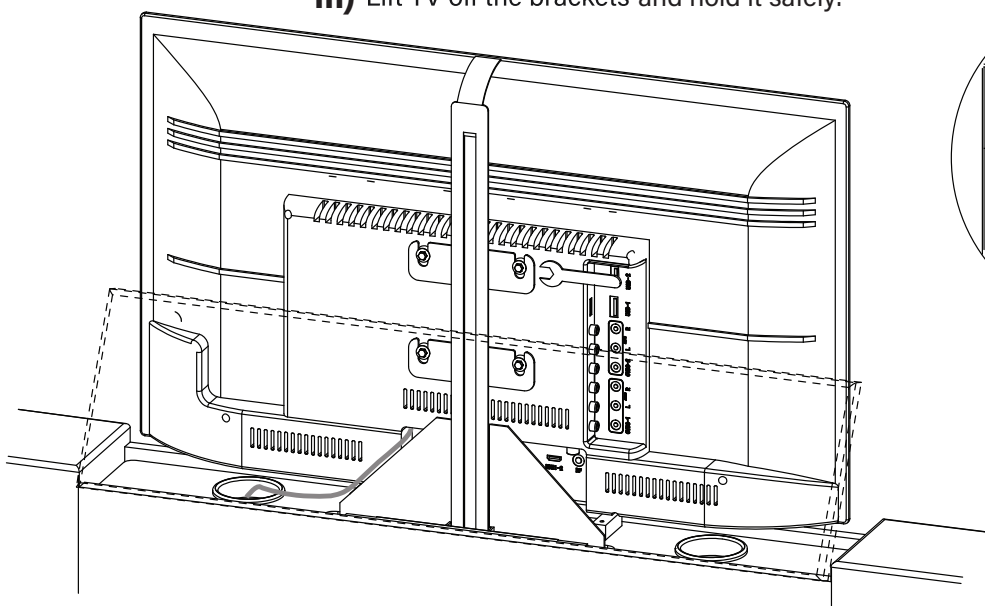

7


**FIT YOUR OWN MEDIA CABLES - NOTE: THIS IS FOR ILLUSTRATION PURPOSES ONLY.**

- 1:** RJ45 - LAN
- 2:** EARPHONE OUTPUT (MONO)
- 3:** STEREO OUTPUT (L & R)
- 4:** VGA (PC VIDEO CONNECTION)
- 5:** AUDIO INPUT (FROM PC)
- 6:** HDMI SOCKETS x2
- 7:** RF - CO-AX AERIAL SOCKET


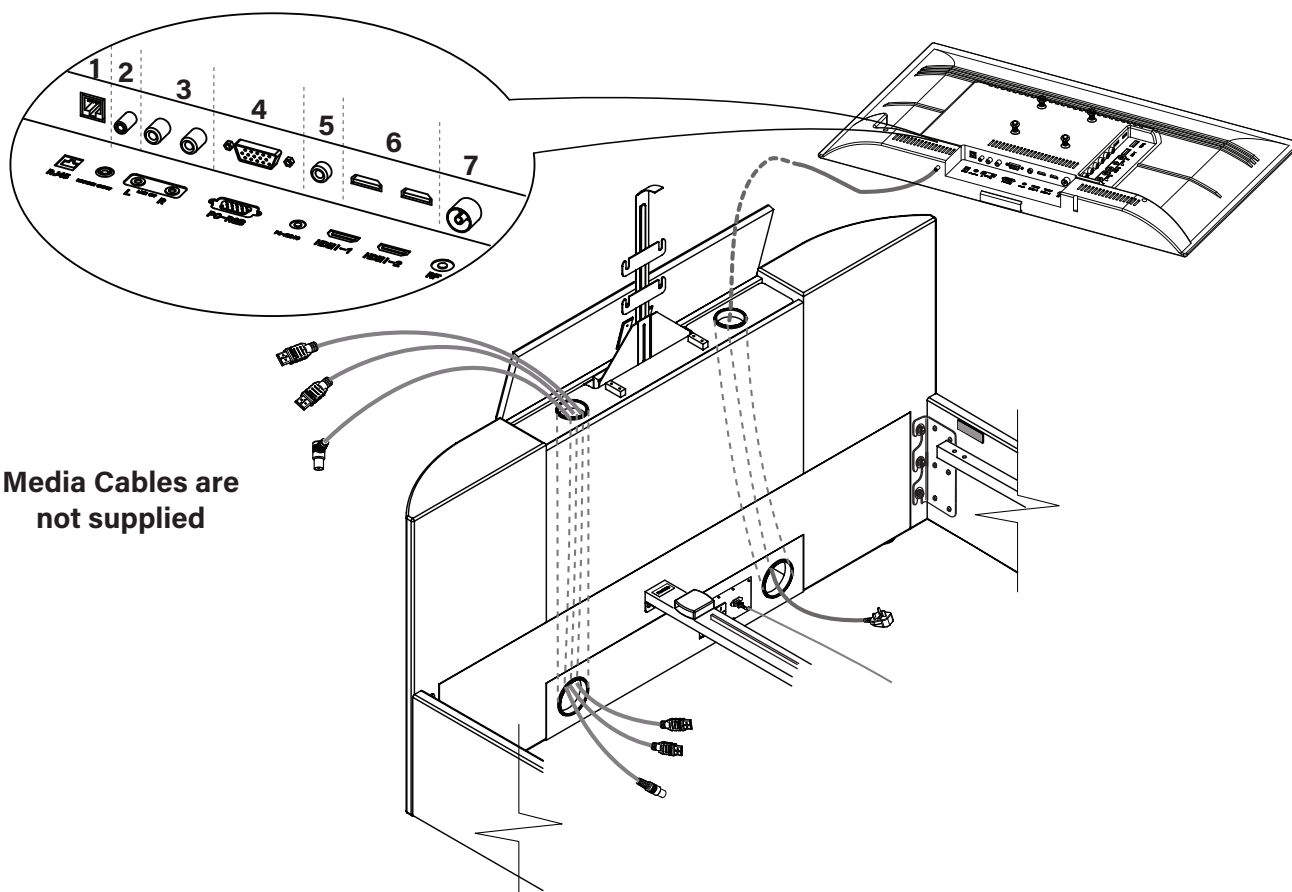


8


## FEED YOUR MEDIA CABLES THOUGH THE DUCTS & CONNECT TO TV

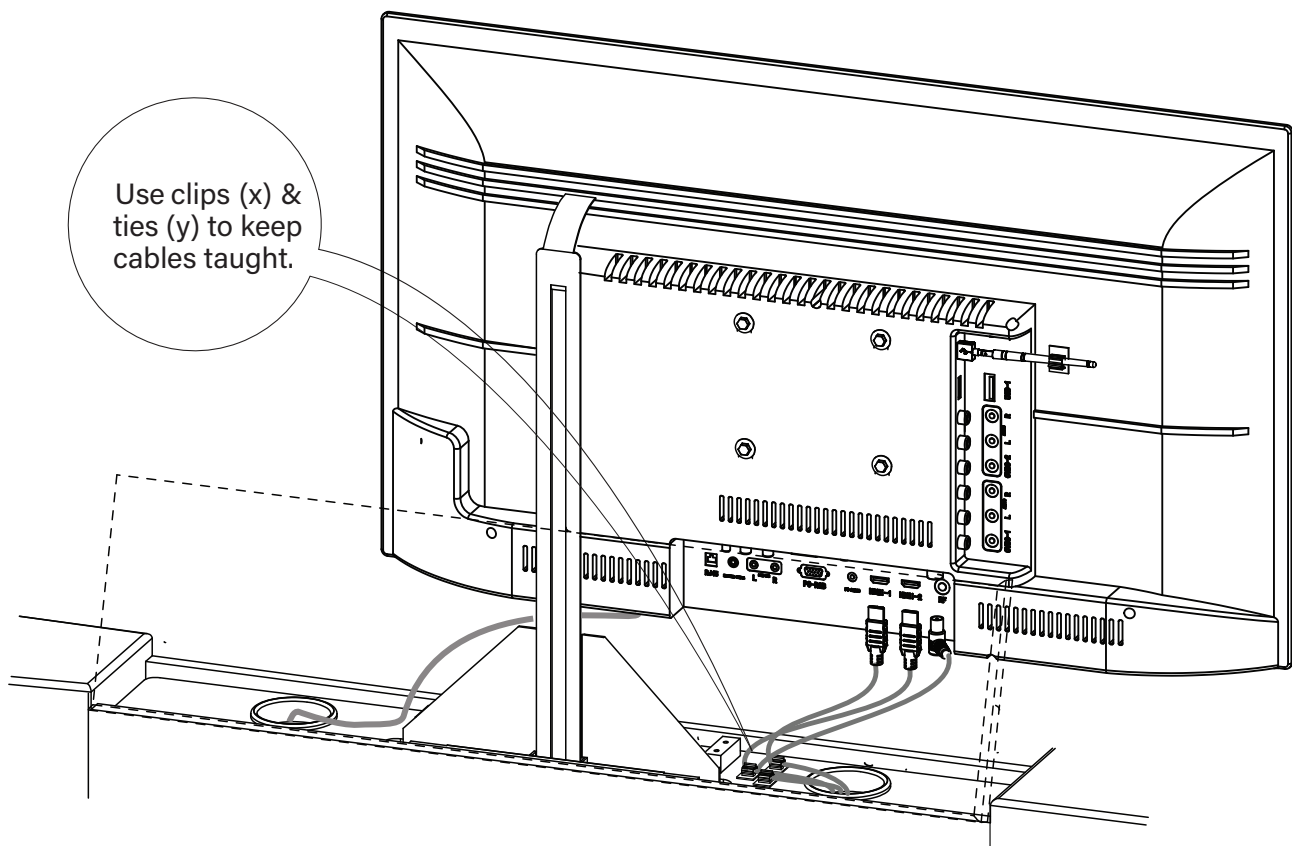


Only if WiFi reception needs to be improved, unclip antenna & raise as shown in the picture. Do not allow antenna to lean backwards or it shall get trapped & break off.

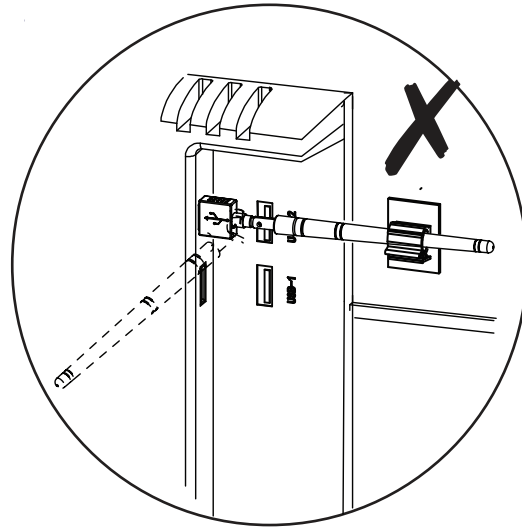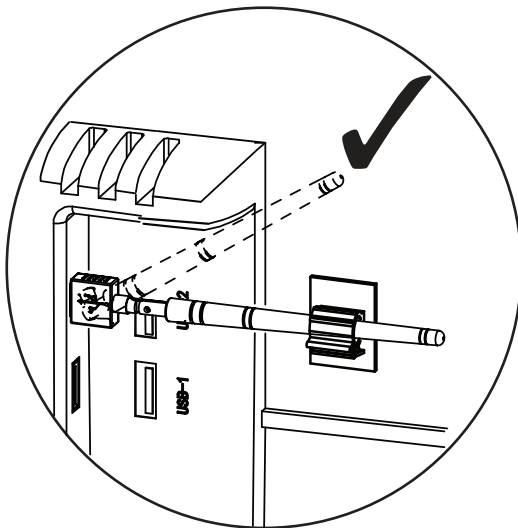

**PLUG IN - KEEP ALL CABLES TIGHT USING CLIPS & TIES PROVIDED.**

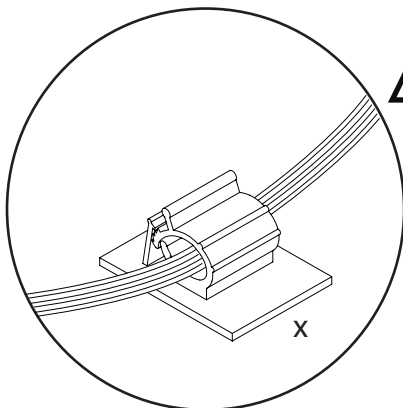

Keep wires tight - peel off cover from cable clips & adhere to back of TV.


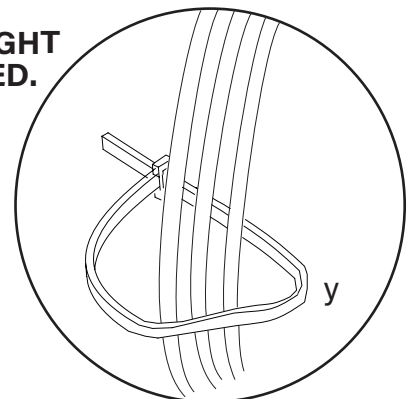


9

Carefully re-fit the TV making certain there are no trapped cables and then re-tighten the four VESA bolts, please do not over-tighten.





w x1

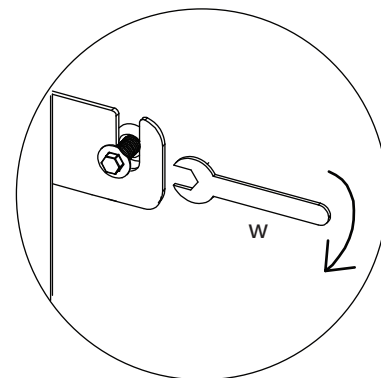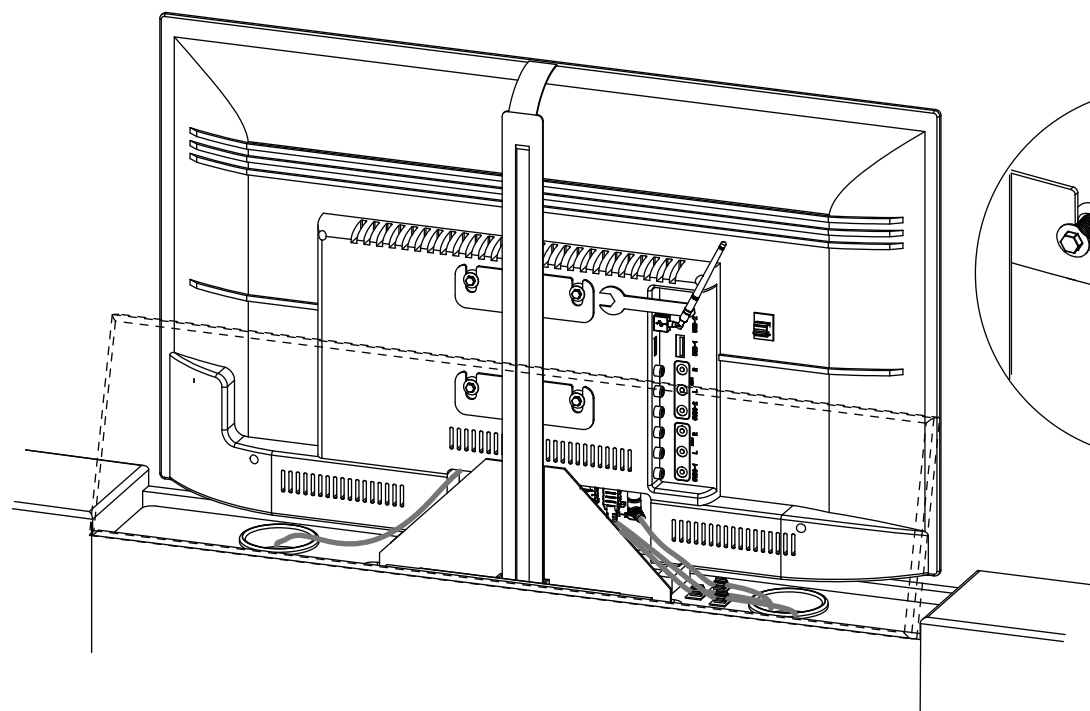


10

Re-plug TV into it's power socket.

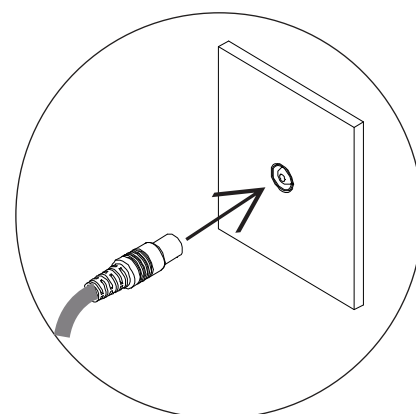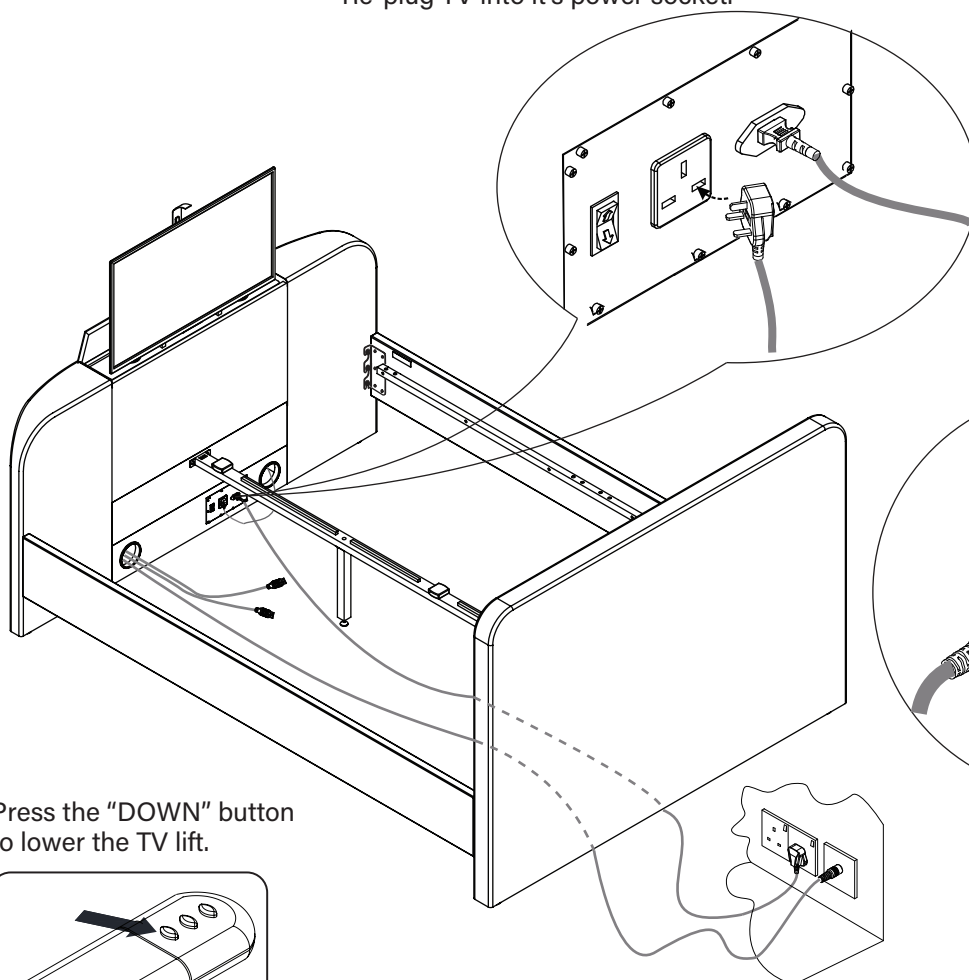


iv) Press the "DOWN" button to lower the TV lift.

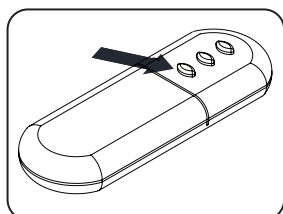


## Double size bed


i) Unroll the slats and slide on x6 single caps as shown (G)

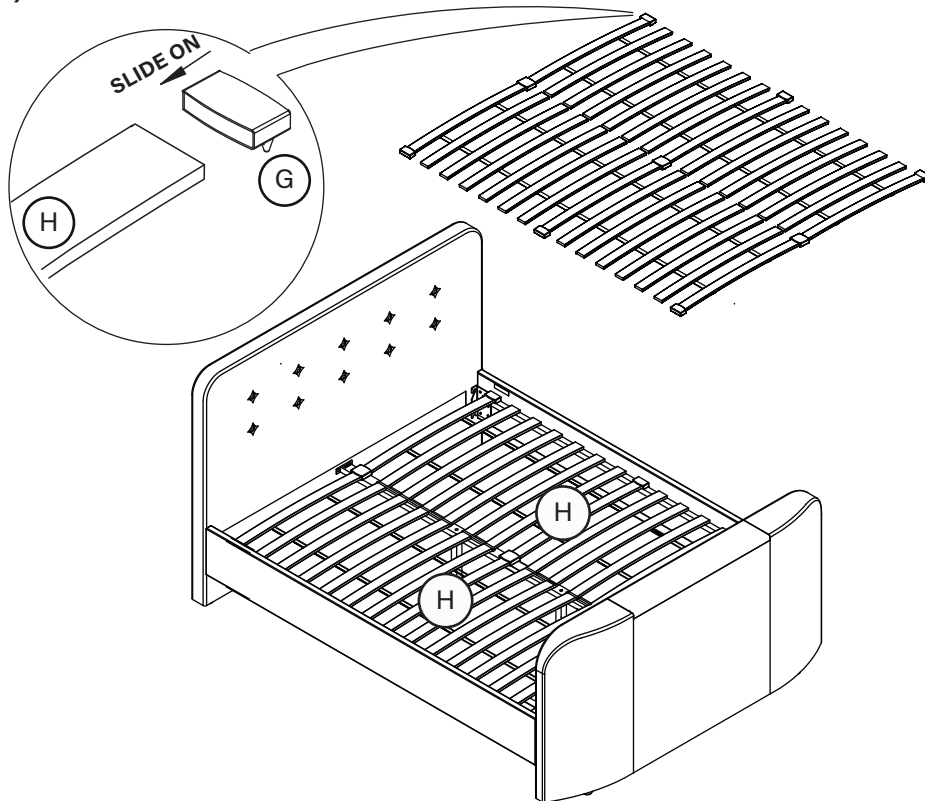

ii) Slide slat into the double cap (F)

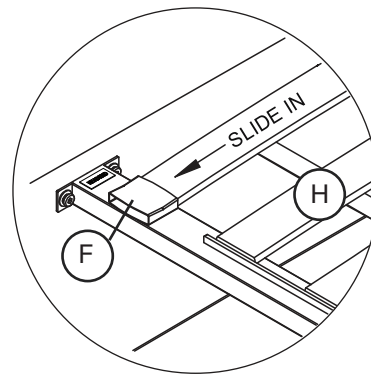


iii) Push lugs into holes in the side rails.

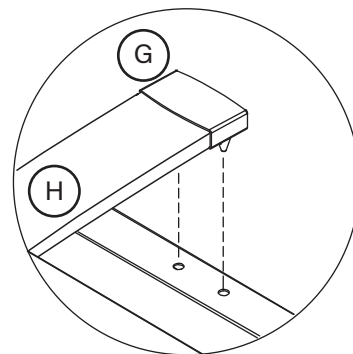


## King size bed


i) Unroll the slats and slide on x8 single caps as shown (G)

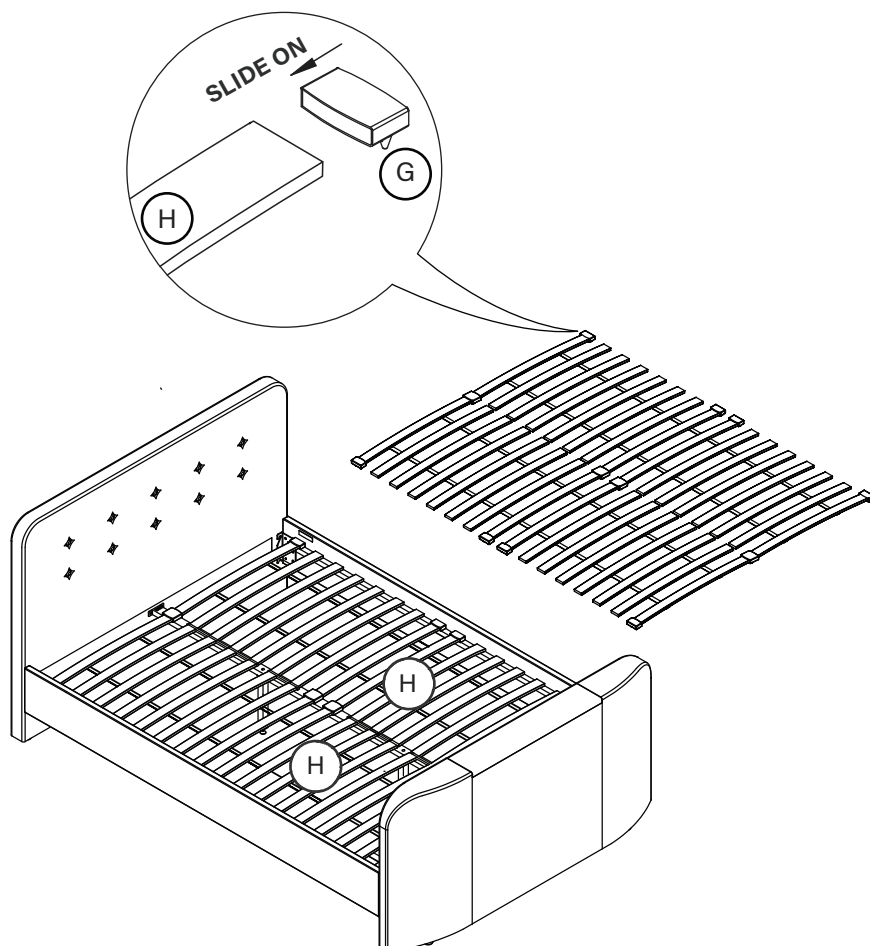

ii) Slide slats into double caps (F).


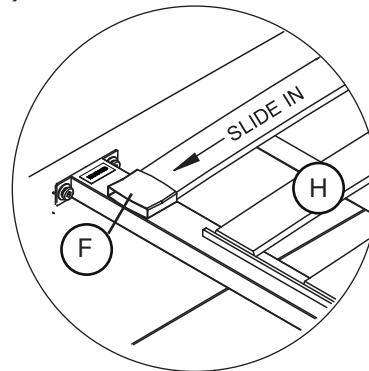


iii) Align lugs with holes in side rails and press down.

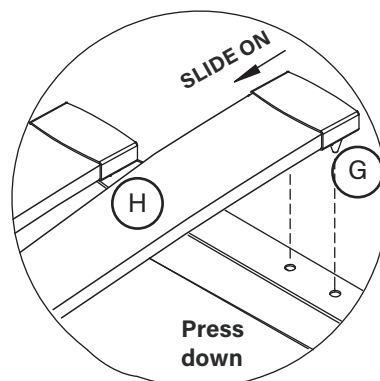

12

Fit RC holster (I) to left or right side.

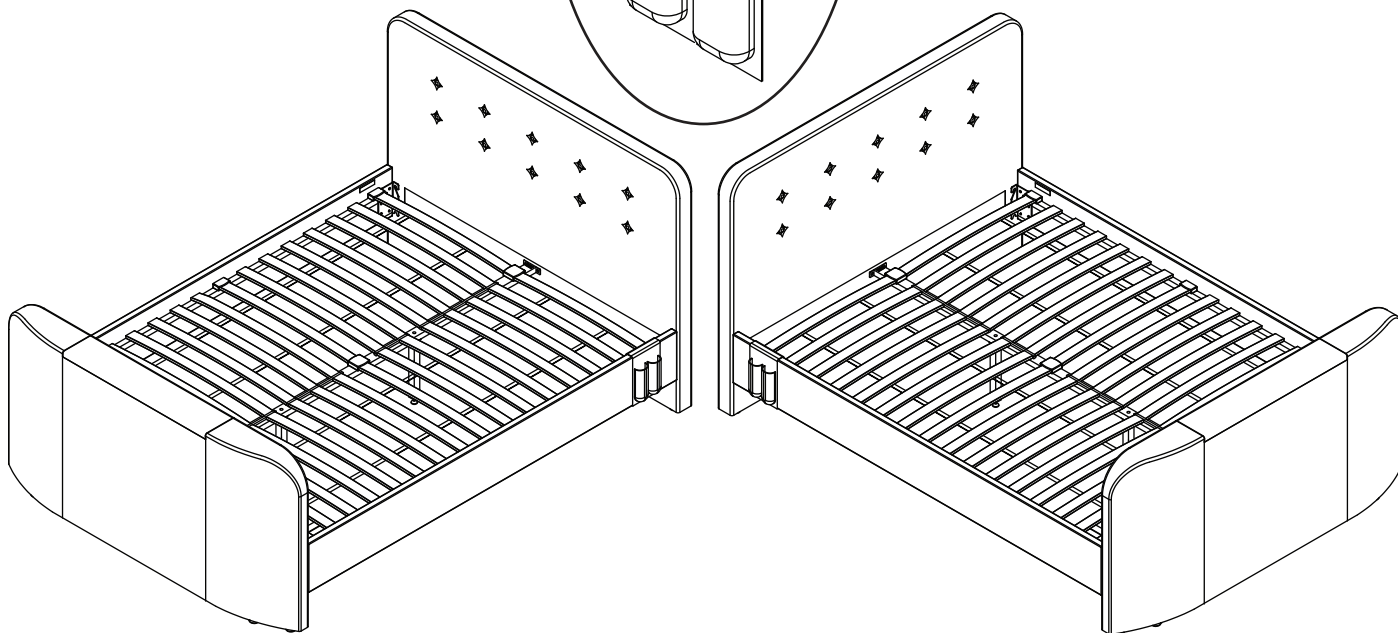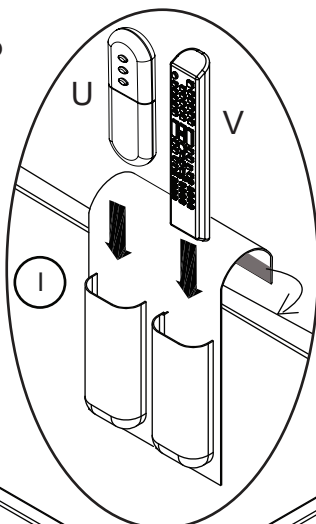

#### Overall Dimensions (LWH cm)

Double: 144 x 217 x 113.6

King: 159 x 227 x 113.6

#### Internal Dimensions (LW cm)

Double: 193 x 137.5

King: 203 x 152.5


#### Distance between slats (cm)

Double or King: 7.0

#### Slat Dimensions (LWH cm)

Double: 68.5 x 5.3 x 0.9

King: 76 x 5.3 x 0.9

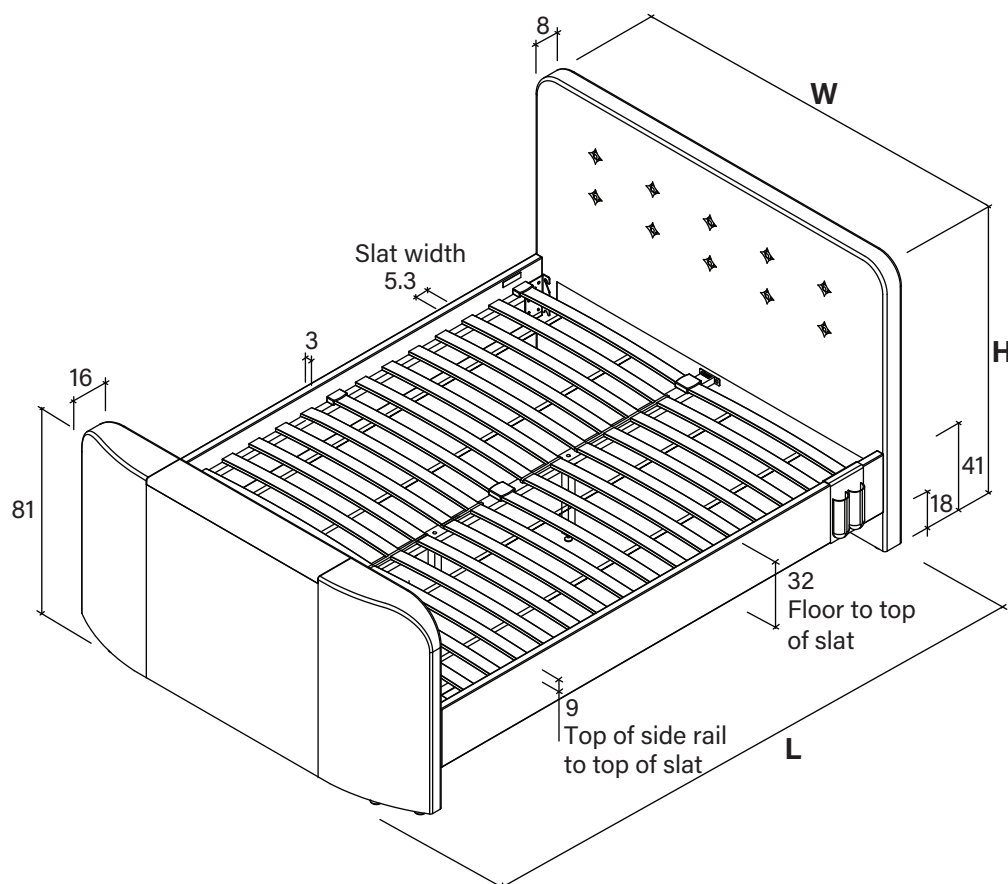



# Evans TV bed safety information.

## GENERAL INFORMATION

It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers on top of the TV footboard that may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment. If this happens turn off the power and contact your retailer.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.

To keep your bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric, use a light vacuum cleaner; disconnect power before cleaning.

Supplied with the bed is a remote control to operate the TV Lift and one to operate the TV itself. Both these remotes are supplied with batteries that last a reasonable amount of time - there are no batteries in the rest of the equipment.

When it is time to change the batteries there are strict controls for disposal of the old ones - your local council can advise on how to safely dispose of them. Never burn batteries on an open fire as they could explode.

## IMPORTANT POWER INFORMATION

Before fixing the slats to the bed, please follow the instructions below:

Plug in the main power supply lead (q) supplied with your bed; this is packed inside the accessory box which is underneath the bottom of the footboard inside Pack 2, see Page 4.

It is essential that this power lead is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The wall socket providing the power must be accessible at all times in case you need to switch off the electric supply.

Power cable supplied with this bed or other approved mains powered extension leads used to power your equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock.

During an electrical or lightning storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Do not interfere with or modify any cables already fitted and do not add any media cables unless they are routed through the ducts as shown in Step 7. All leads must be tightly connected to back of TV, never hanging loose where they can get trapped.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.

Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is any unusual noises, disconnect the power and contact your retailer for advice.

## TELEVISION INFORMATION

Please follow the assembly steps for initial operation the TV and TV Lift in the current order:

Withdraw the TV power plug from the left hand duct by pulling the red string as shown in Step 4.

Push the plug into it's own special socket which is on the face of the footboard - this socket is only to be used for the TV, it does not have a constant power supply.

Recover the remote control (u) from the accessory box then raise the TV Lift by pressing the top UP button then carefully remove any remaining transit protection material.

The bed comes with a 32" SMART TV already fitted, please read the User Guide carefully (v).

If required you can connect up to two HDMI cables and an aerial cable to the ports underneath the TV, see Steps 6 & 7..

One can also connect your own cables to the connections either on the side of the TV or underneath the TV.

Please use the cable clips & cable ties to make certain there are no loose wires to snag or get trapped.

The television can now be operated following the TV User Guide.

When finished viewing, lower the TV back into the footboard by pressing bottom DOWN button of the remote control, for safety and to stop TV overheating, power is switched off on the way down.

When the UP button is pressed - the TV Lifting Column rises and power to the TV turns back on automatically.


## TROUBLE SHOOTING

If your equipment does not operate please check all the power connections to the wall socket and check that power is reaching the main power input plug (q) bringing power into the footboard.

Make sure TV is switched on - note: TV will only work when it is in the up position.

Check that the remote control has not lost its connection with the TV Lift - please see top of following page.

Occasionally you may find the radio wave connection between remote control and TV Lift is lost, probably due to atmospheric conditions. In that case please follow these simple instructions:

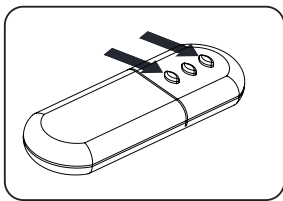

1. Disconnect all mains electric power to the bed, for at least 60 seconds.
2. Press UP or DOWN Button on Remote Control and keep holding button down, simultaneously re-connect mains electric power to bed keeping button down for at least a further 5 seconds. TV Lift unit receives signal from Remote Control and lift will begin to move UP or DOWN whichever direction is appropriate.
3. Re-connection is now completed.

**IMPORTANT: Care should be taken when connecting electrical items. If you are in any doubt about the connections please consult an approved electrician. If you still have a problem please contact your retailer for advice.**

## Care and maintenance

Here are some tips to keep your new furniture in tip-top condition



### Cleaning

To clean your new bed, we'd advise using a warm damp cloth or if fabric remove dust using a low suction vacuum cleaner - please do not use abrasive chemicals or bleach as this may damage the product.



### Checking and moving

Periodically we recommend you check that the screws or fixtures haven't become loose over time. To move your new bed, we recommend lifting it where possible, as dragging or pushing it could cause damage to the legs or flooring.



### Wood

Please note each of our wooden pieces are unique, meaning that markings and shade can vary slightly between beds. Over a period of time, the wood might lighten or fade slightly due to light exposure.



### Fabric

Please note depending on the lighting, positioning and surroundings of your room, the shade of the colour can sometimes appear slightly different. Over a period of time the colour might lighten or fade slightly due to light exposure.



### Metal

Metal tends to be more resilient to everyday wear and tear. We recommend to gently dust your metal furniture and keep it dry to maintain its look.

**Thank you for shopping with us - we hope you have a great night's sleep**

*Sleep well*