
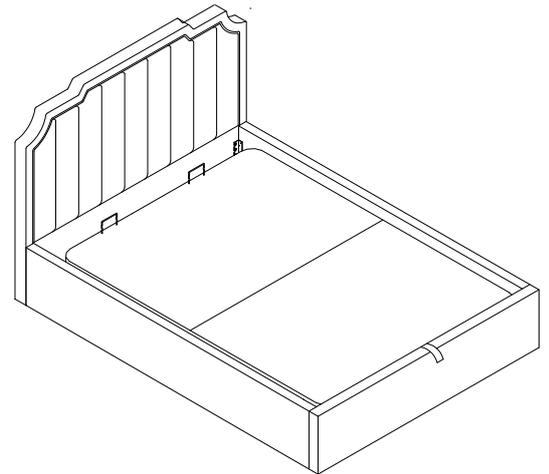


Alyssa Ottoman Bed

Double
King
Super King

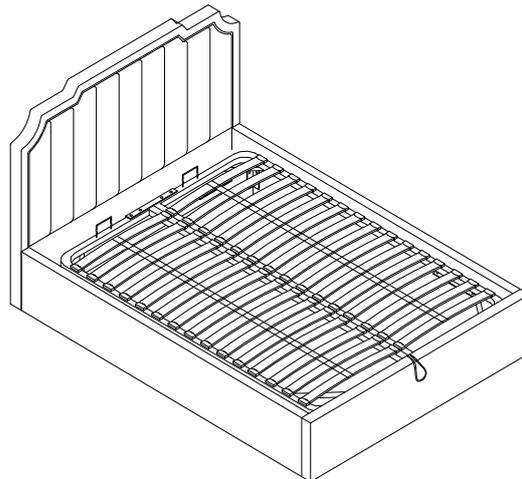

Important - read this guide carefully and retain for future reference.

Ottoman Safety Warnings

- **Ensure the combined bedding and mattress weight is within the recommended weight guidance**
- **Adult Operation Only** : Not recommend for use by under 12 years old. Please note ease of operation is dependent on height and strength of user.
- **Avoid Entrapment** : Always lift the bed with the mattress in place, using the handle to lift and lower the base, keeping clear of the mechanism.



- **Fully Open Ottoman** : Ensure the ottoman is fully open before accessing the storage area.
- **Avoid Hinge Area** : Do not reach into the storage area through the hinge mechanism.
- **Keep Children and Pets Away** : Ensure children and pets stay away from the storage area. Do not stand inside the internal storage area of the bed.
- **Maintenance** Regularly inspect your bed to ensure it is functioning correctly.

Bed	Bed Size	Min Mattress Weight (kg)	Max Mattress Weight (kg)
Alyssa (manual)	Double	23	45
	King	25	50
	Super king	30	55



1 hour approx assembly time



Two person assembly

Dreams
Love your bed

Thank you

Hello, thanks for choosing to purchase your bed from Dreams - you're now on your way to your best Ever night's sleep. Before you begin building your bed, please take a moment to read through the Instructions and make sure that you've got all the relevant parts listed on the following pages.



Assembly tips

Before you begin, it's best to identify all parts and fittings to build your bed. We advise laying these out on the floor to check you have everything, and familiarising yourself before building.



Top tip

We recommend that you build your new bed in the room you'd like it to be Located - this will help prevent any risk of damage to your newly built bed Whilst moving it .



Safety and care

It's really important to ensure children and animals are kept away from the assembly area, as there are small components used in this bed which could present a choking hazard, All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation. To keep your little ones busy, there is a colouring page inside the back cover.



Help and support

At Dreams, it's our mission to give the whole nation a great night's sleep - this means that the quality of our products is of utmost importance to us. If there are any issues with your product or any missing parts, please visit our website at [www.dreams.co.uk /help](http://www.dreams.co.uk/help)



Recycling


Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where. Please keep your assembly instructions

Parts (Option 1: Sprung Slat System)

Important information

The bed you have purchased comes with a metal slat frame lifting from the front.

Assembly steps : 6- 9

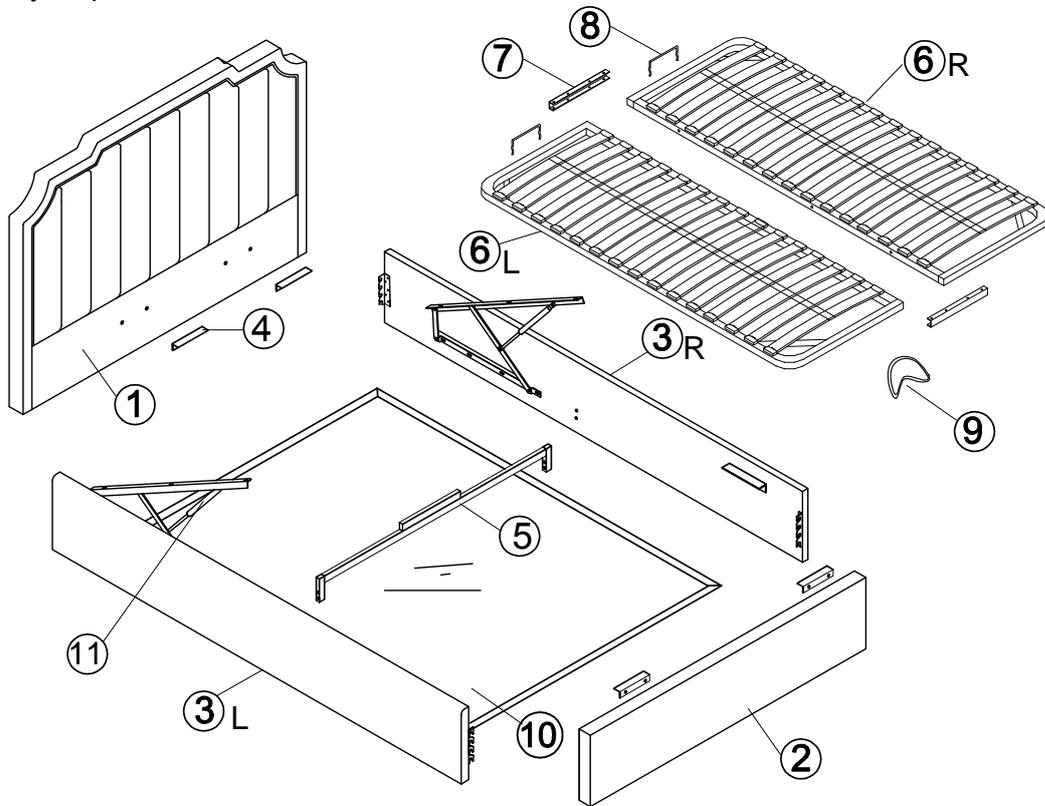

Part List

	Qty	Box		Qty	Box
1. Headboard	1	1	7. Joining Brackets	2	3
2. Footboard	1	2	8. Mattress Holder	2	3
3. Side Rails (R&L)	2	2	9. Fabric Pull Handle	1	3
4. Support Brackets	4	2	10. Fabric Bottom	1	2
5. Cross Bar	1	2	11. Pistons	2	3
6. Slatted Bed Frames (R&L)	2	3			

Tools required

Please check you have all these below




Tape measure

Parts (Option 2: Baseboard System)

Important information

The bed you have purchased comes with a baseboard frame lifting from the front.

Assembly steps : 10- 16

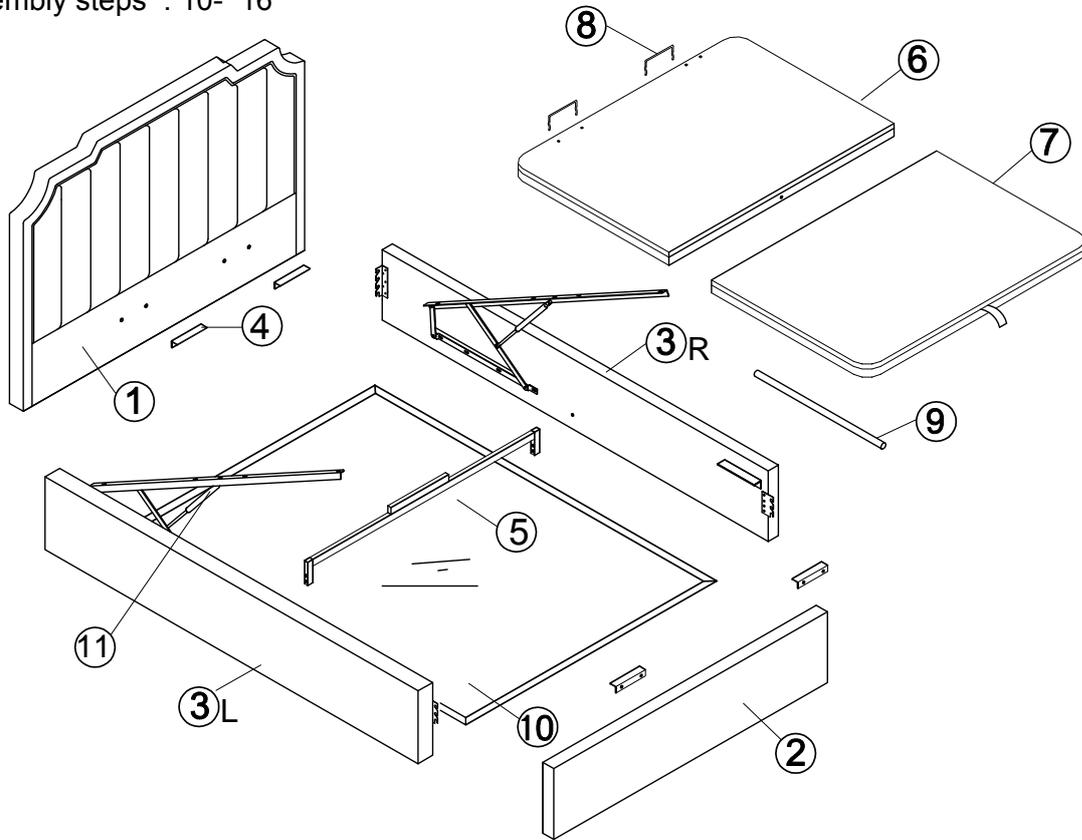

Part List

Part List	Qty	Box	Part List	Qty	Box
1. Headboard	1	1	7. Upper Bed Frame	1	3
2. Footboard	1	2	8. Mattress Holder	2	3
3. Side Rails (R&L)	2	2	9. Support Bar	1	3
4. Support brackets	4	2	10. Fabric Bottom	1	2
5. Cross Bar	1	2	11. Pistons	2	3
6. Lower Bed Frame	1	3			

Tools required

Please check you have all these below










Tape measure

Fittings pack A: in box 1

For Bed frame - Assembly steps : 1 - 5

Please check you have all the parts listed below with your product:




<p>A1 x8</p>  <p>M8 x20mm Bolt</p>	<p>A2 x10</p>  <p>Φ 8 Washer</p>	<p>A3 x1</p>  <p>5MM Allen key</p>	<p>A4 x4</p>  <p>M6 x60mm Bolt</p>	<p>A5 x4</p>  <p>Φ 6 Washer</p>
<p>A6 x2</p>  <p>4MM Allen key</p>	<p>A7 x1</p>  <p>11MM Spanner</p>	<p>A8 x1</p>  <p>13MM Spanner</p>		


Fittings pack B: in box 3

For Option 1: Sprung Slat System

- Assembly steps : 6- 9

Please check you have all the parts listed below with your product:

<p>B1 x 8</p>  <p>M6 x40mm Bolt</p>	<p>B2 x16</p>  <p>Φ 6 Washer</p>	<p>B3 x8</p>  <p>M6 x20 JCN Nut</p>	<p>B4 x8</p>  <p>M6 Nut</p>	<p>B5 x16</p>  <p>Φ 6 Spring Washer</p>
<p>B6 x1</p>  <p>M8 x80mm Bolt</p>	<p>B7 x1</p>  <p>M8 Nut</p>	<p>B8 x2</p>  <p>Φ 8 Washer</p>	<p>B9 x 8</p>  <p>M6 x60mm Bolt</p>	






Fittings pack C: in box 3

For Option 2: Baseboard System

- Assembly steps : 10 - 16


Please check you have all the parts listed below with your product:
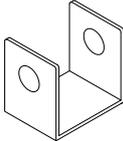
<p>C1 x10</p>  <p>M6 x25mm Bolt</p>	<p>C2 x3</p>  <p>M8 x80mm Bolt</p>	<p>C3 x1</p>  <p>M6 x60mm Bolt</p>	<p>C4 x1</p>  <p>U Metal</p>
<p>C5 x1</p>  <p>M6 Nut</p>	<p>C6 x8</p>  <p>Φ 6 Spring Washer</p>	<p>C7 x8</p>  <p>Φ 6 Washer</p>	<p>C8 x6</p>  <p>Φ 8 Washer</p>
<p>C9 x3</p>  <p>M8 Nut</p>			



Bed assembly :


For : bed frame assebly



1 A3  x1

1) Loosen the pre-assembled bolts on the headboard (1) and footboard (2) with the Allen Key(C) .


Note: Leave 10 mm protruding as in the diagram


2) Attach the side rails to the headboard and footboard.

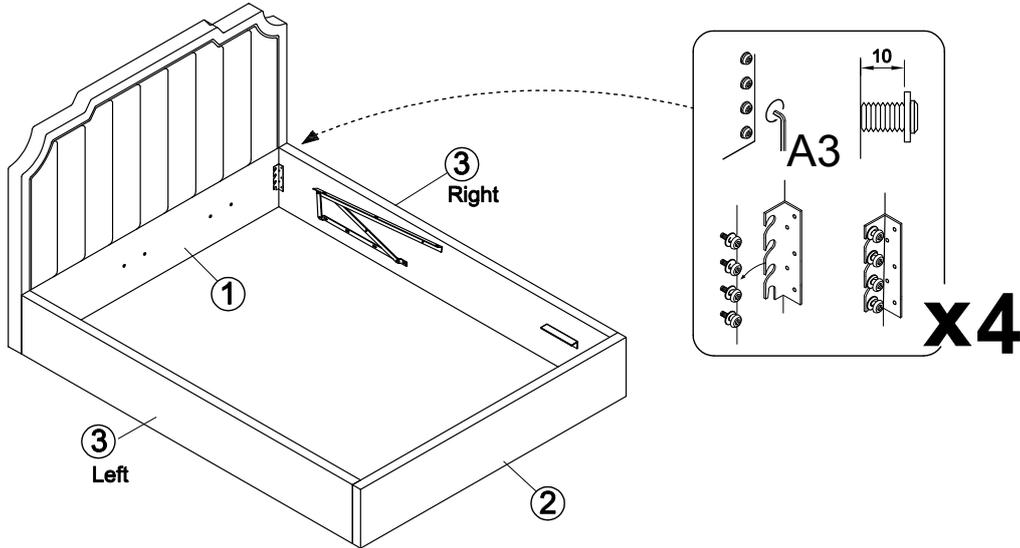


2 A1  x8 A2  x8 A3  x1

1) Attach the support brackets (4) to the headboard and footboard by using bolts (A1) , washer (A2) and Allen key (A3).

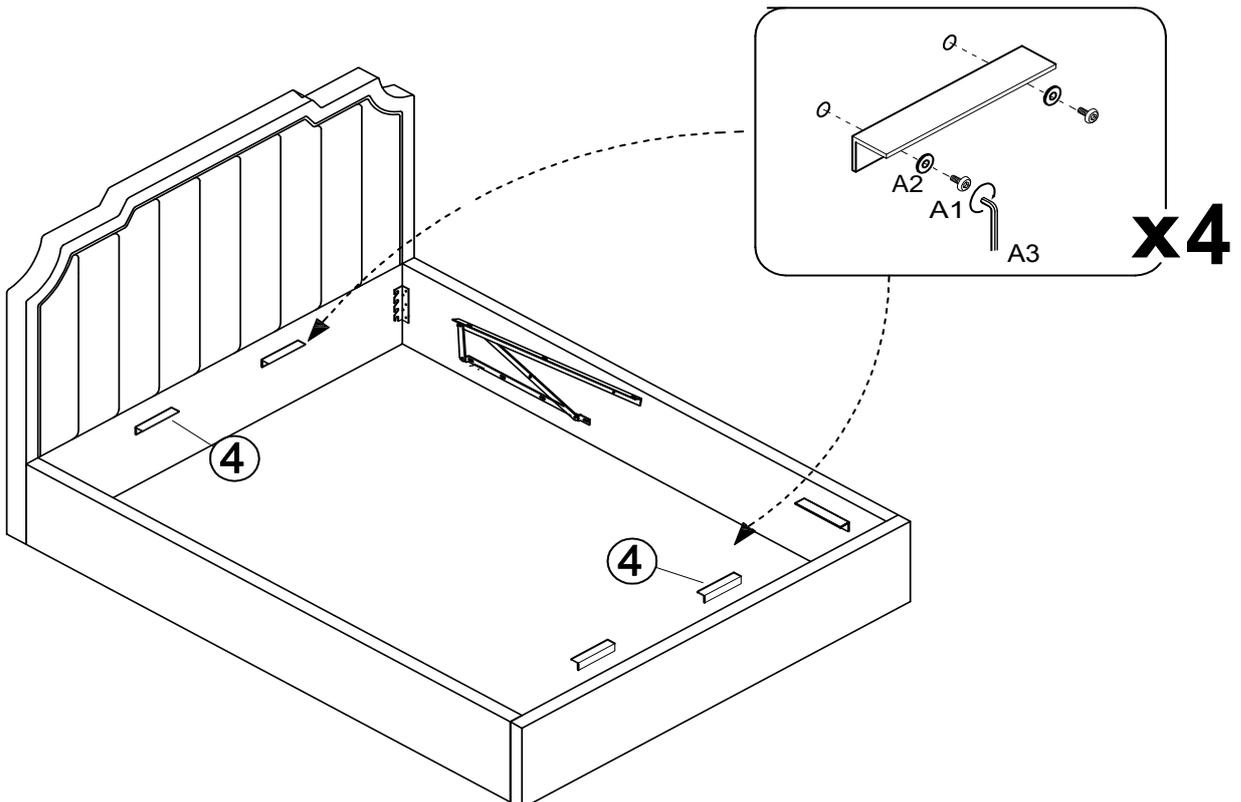


3 A3  x1

1) Once all four corners are located. make sure the bed is still square as in the sketch. then tighten all the bolts 100% using Allen key (A3)

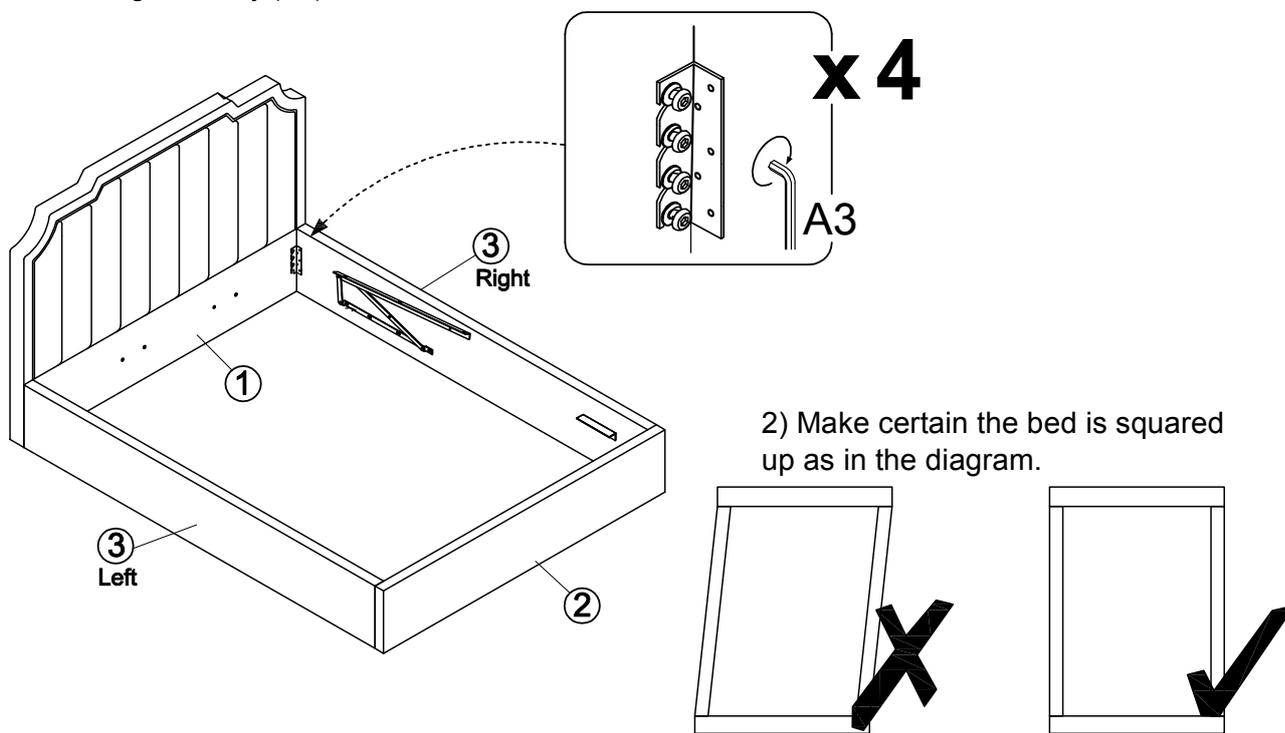



4

Fix the fabric bottom (10)

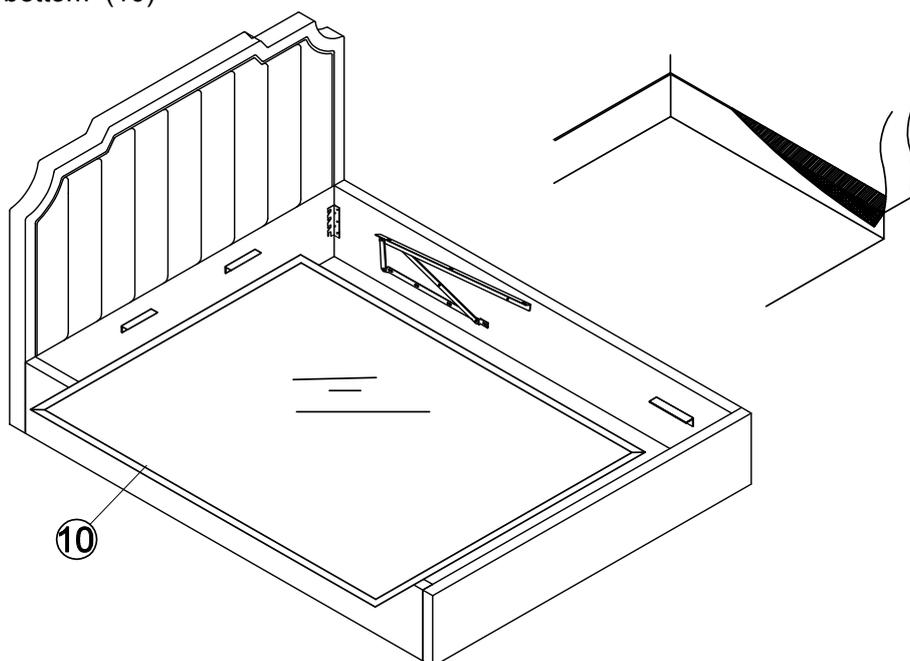






1) Attach the Cross Bar (5) to the Side Rails by using bolts (A4), washer (A5) and allen key (A6).

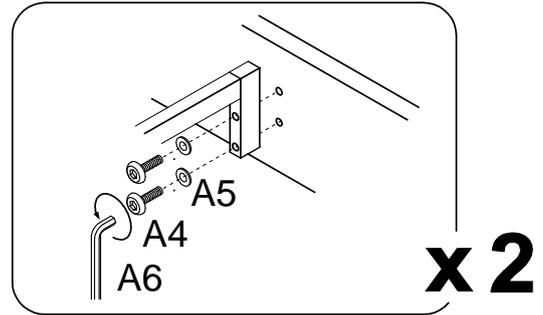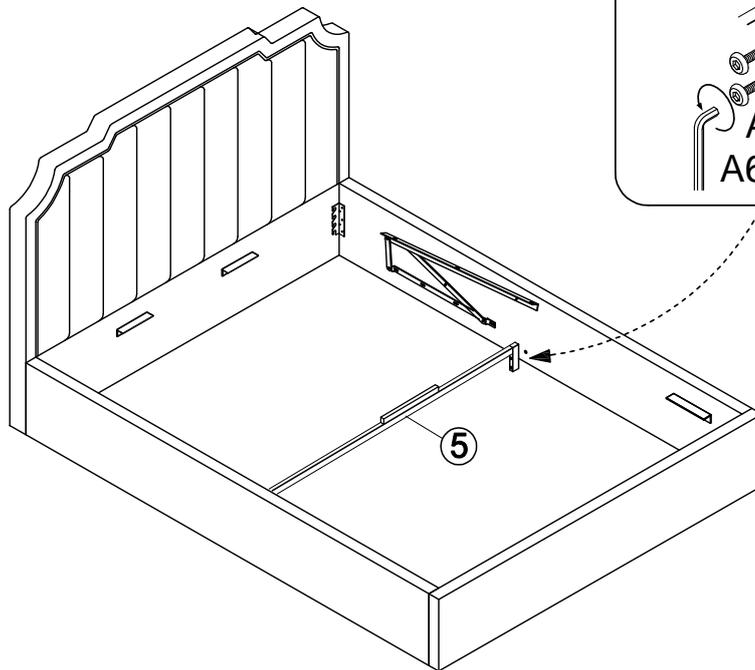


Sprung Slat metal frame assembly with fitting pack B and some fittings from pack A




1) Slot the bolts (B1) through the holes and tighten with the M6 JCN nuts (B3). Complete at head and foot end of frame.

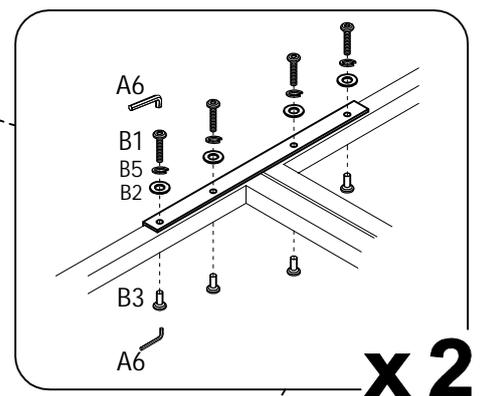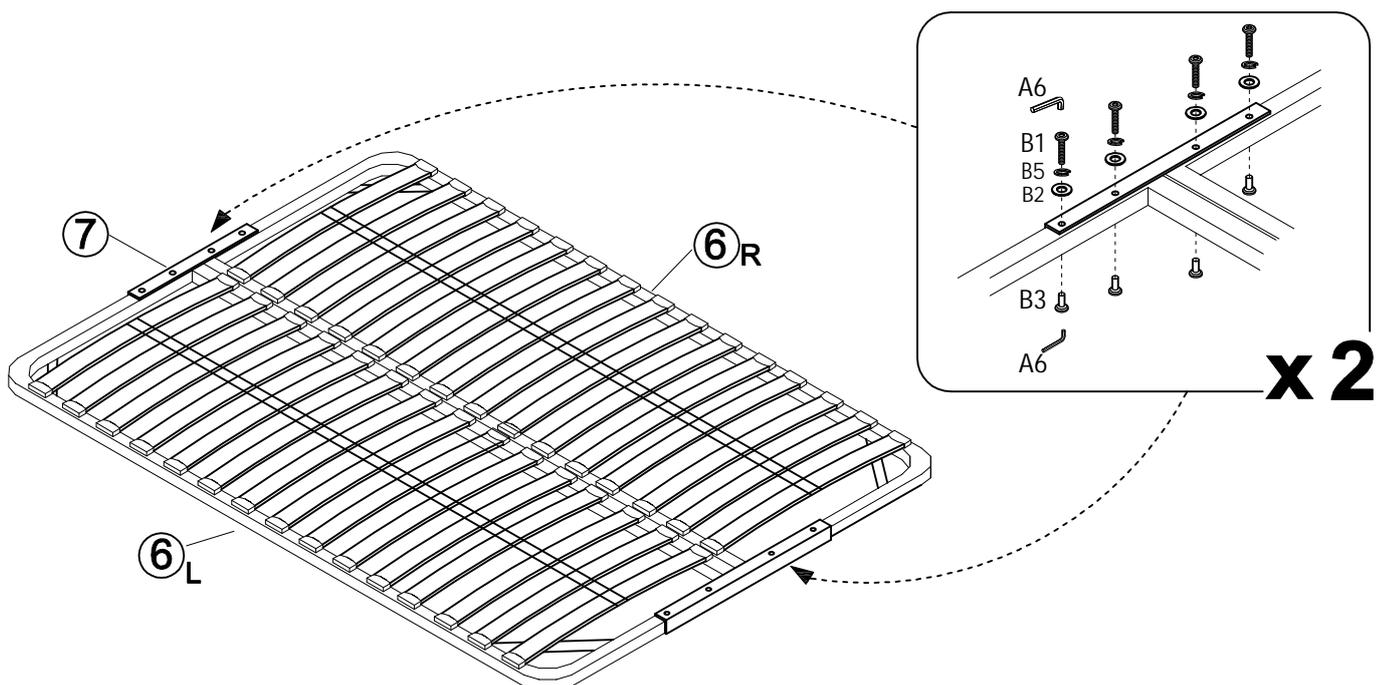




- 1) Join the two halves together using the bolt (B6) through the holes and tighten with the M8 nut.(B7)
- 2) Push the two mattress bars into the holes both sides of the head end of the frame.



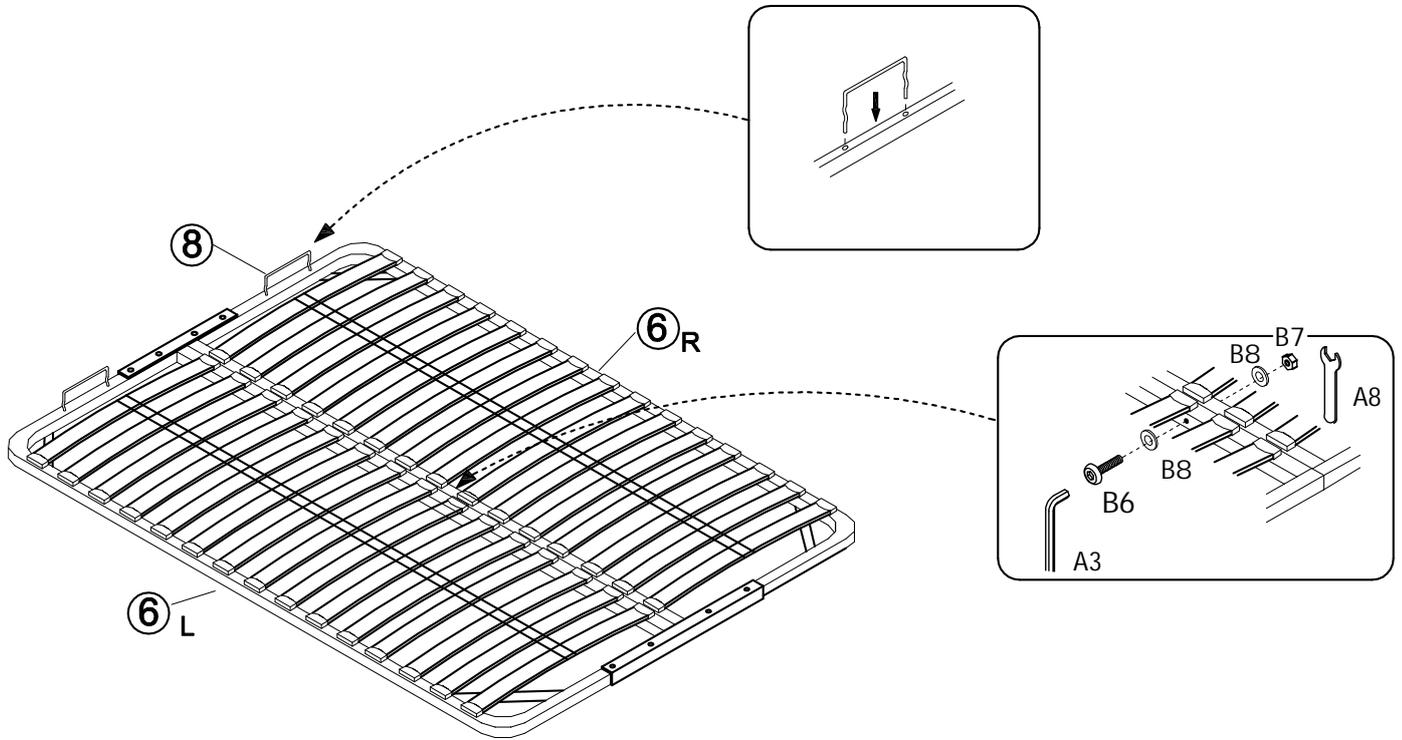


- 1) Two nuts were already attached to the hinge . And take both nuts off the bolts and attached the piston.
Once this is in place, replace and tighten the nut.
- 2) Then fix another piston.

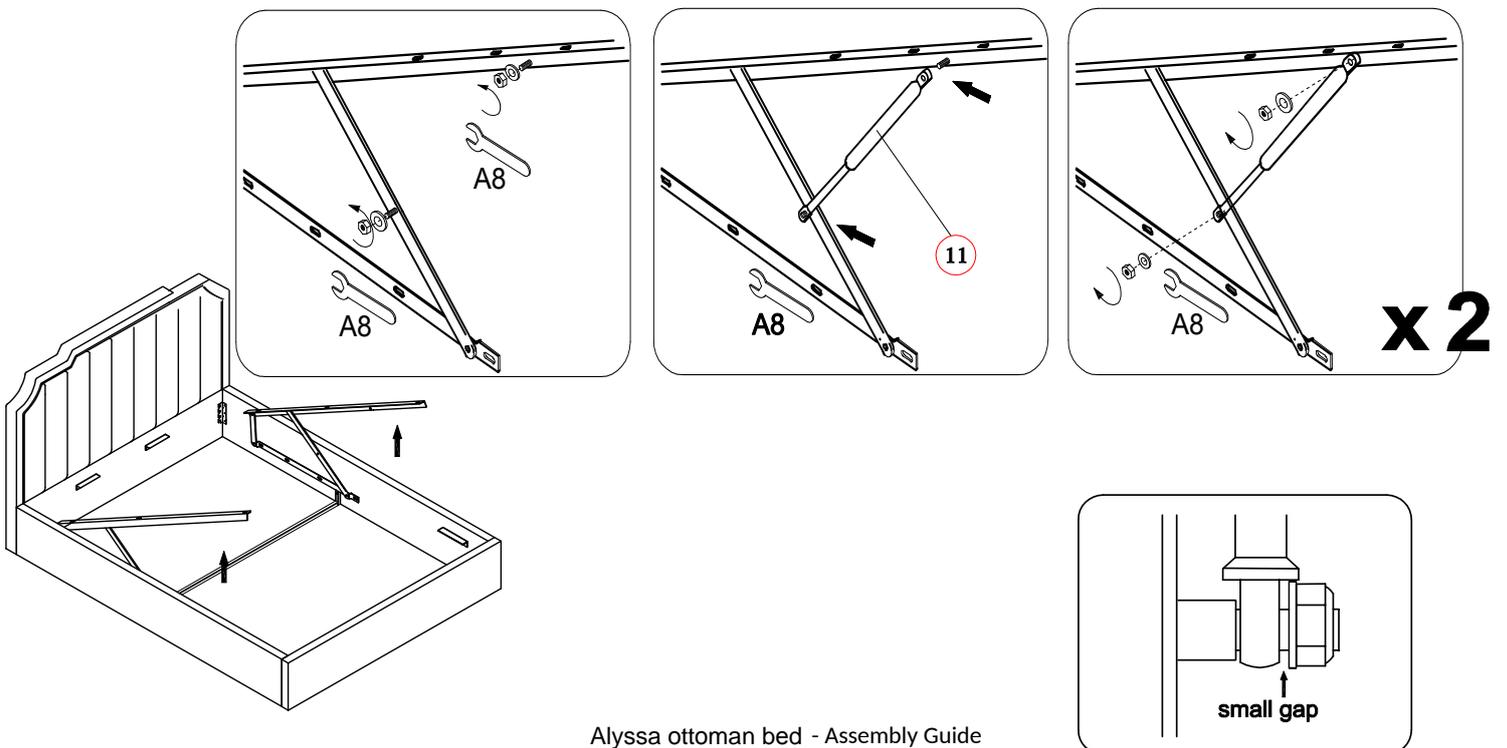


9 B9  x8 B2  x16 B4  x8 A6  x1 A7  x1 B5  x8

- 1) Attach the Bed Frame (6) using bolts (B9) and washer (B2) (B5) with the Allen Key (A6) .
- 2) Attach the Mattress Holder
- 3) Attach the Fabric Pull Handle

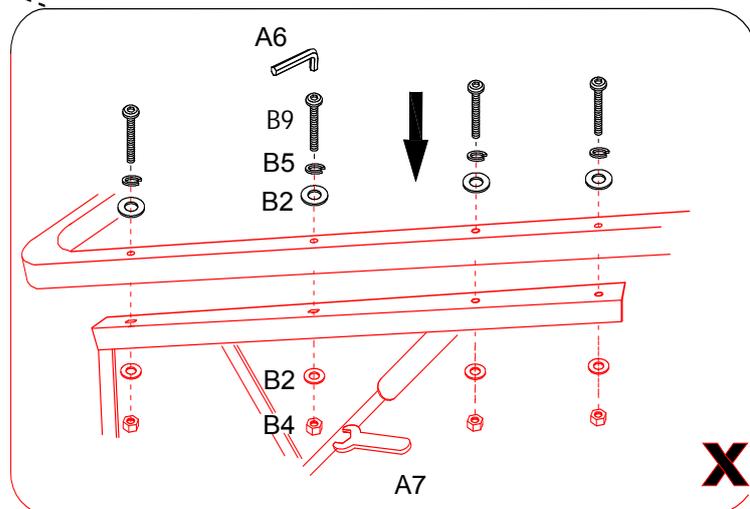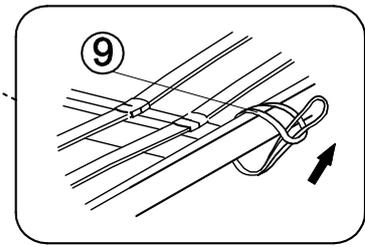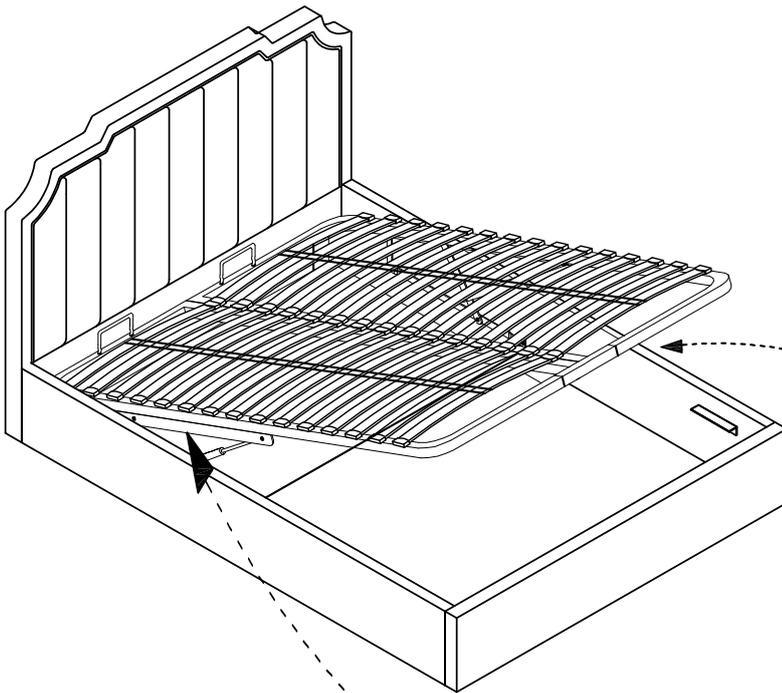


Board Base Frame assembly

with fitting Pack C and some fittings from fitting pack A




- 1) Attach the bolts (C1) on the Lower Bed Frame (6) with the Allen Key (A6) and leave 10mm protruding as the diagram.

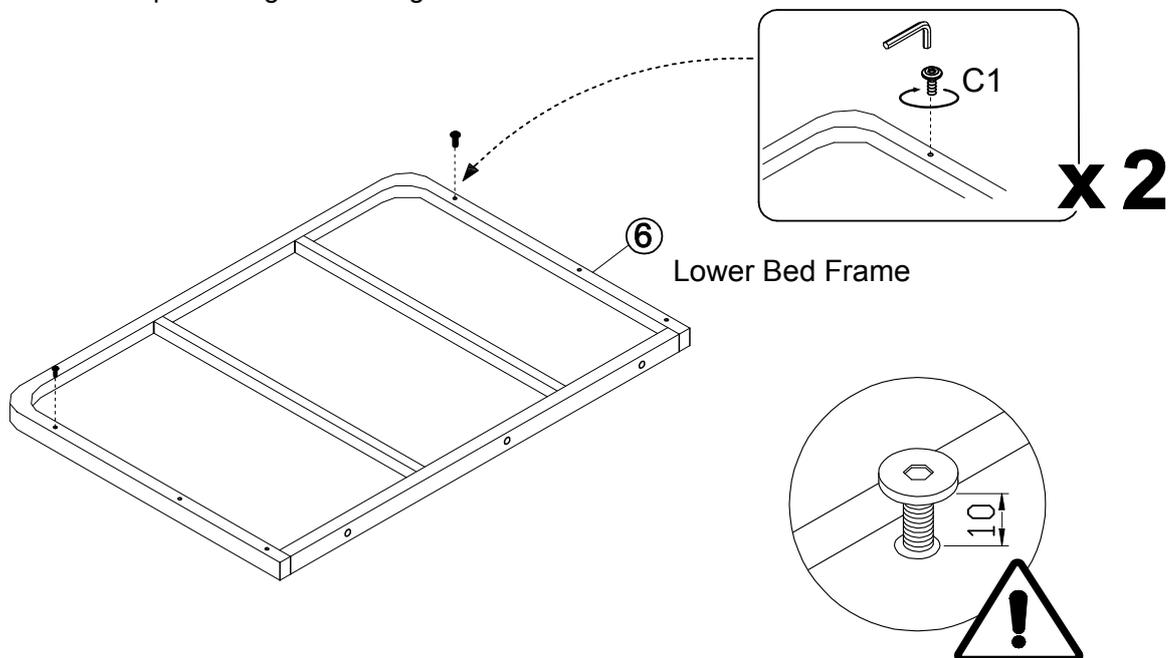


11

- 1) The hook was already attached to the frame. and please turn it up by hand slowly.

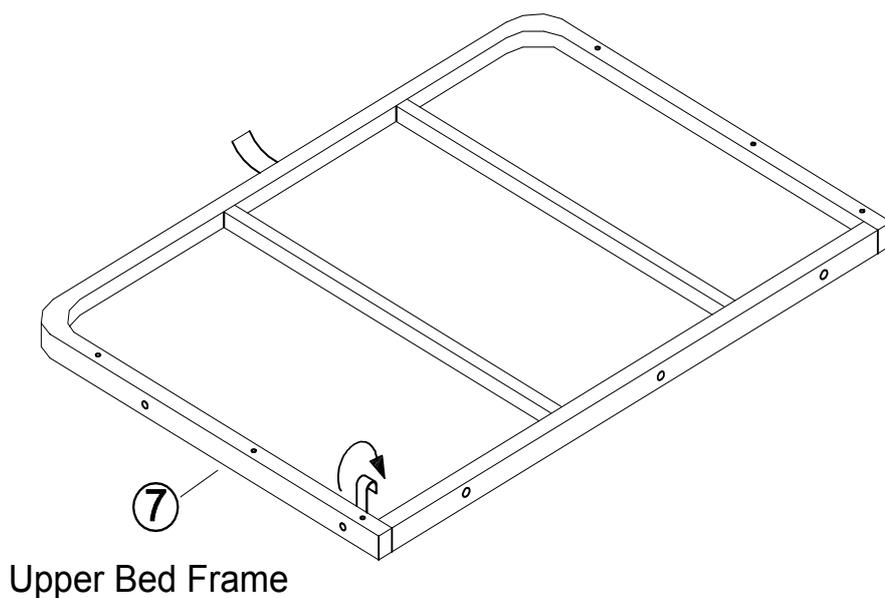


12

1) Attach the lower Bed Frame (6) on the Hinge

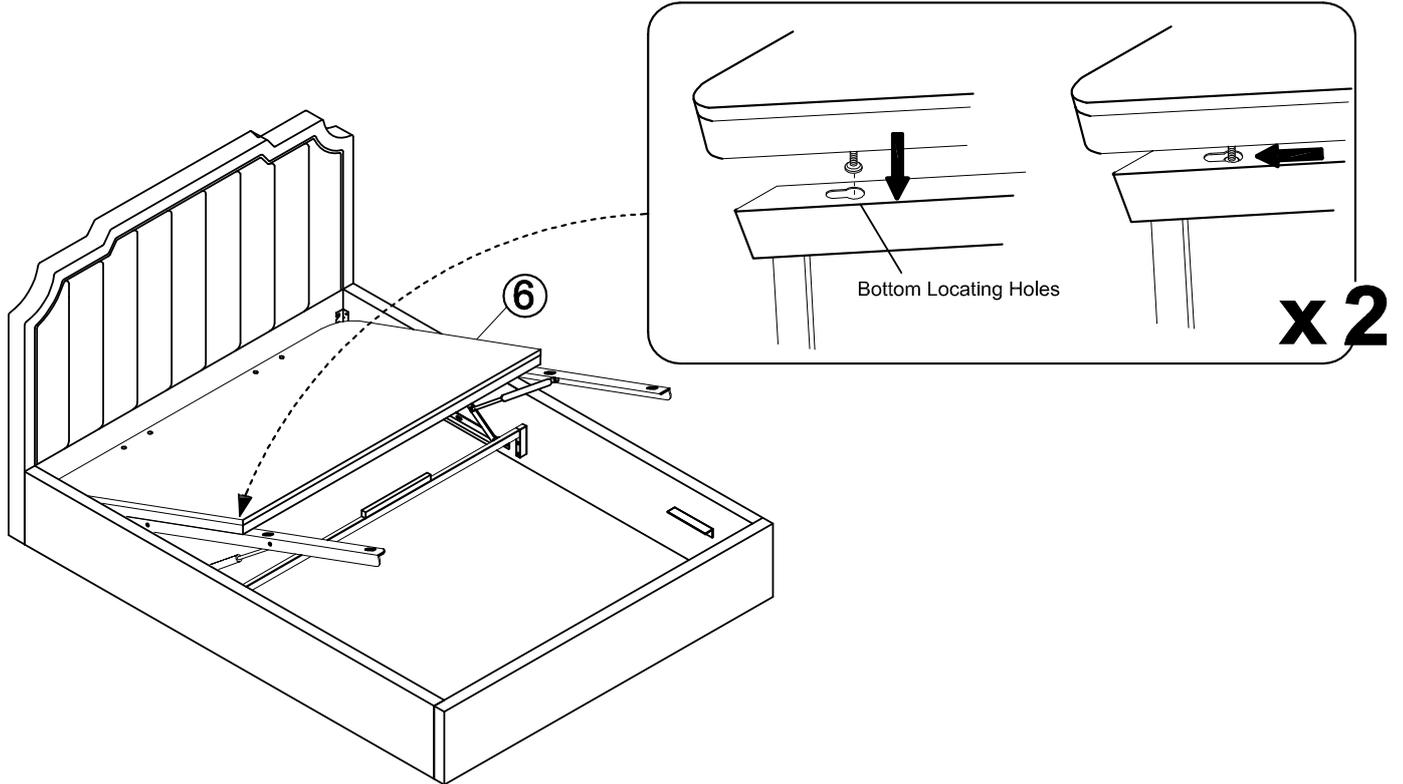



13 C1  x4 C7  x4 C6  x4 A6  x1



1) Attach the Front Bed Frame (6) using bolts (C1) and washer (C7) (C6) with the Allen Key(A6) .
2) Attach the Mattress Holder

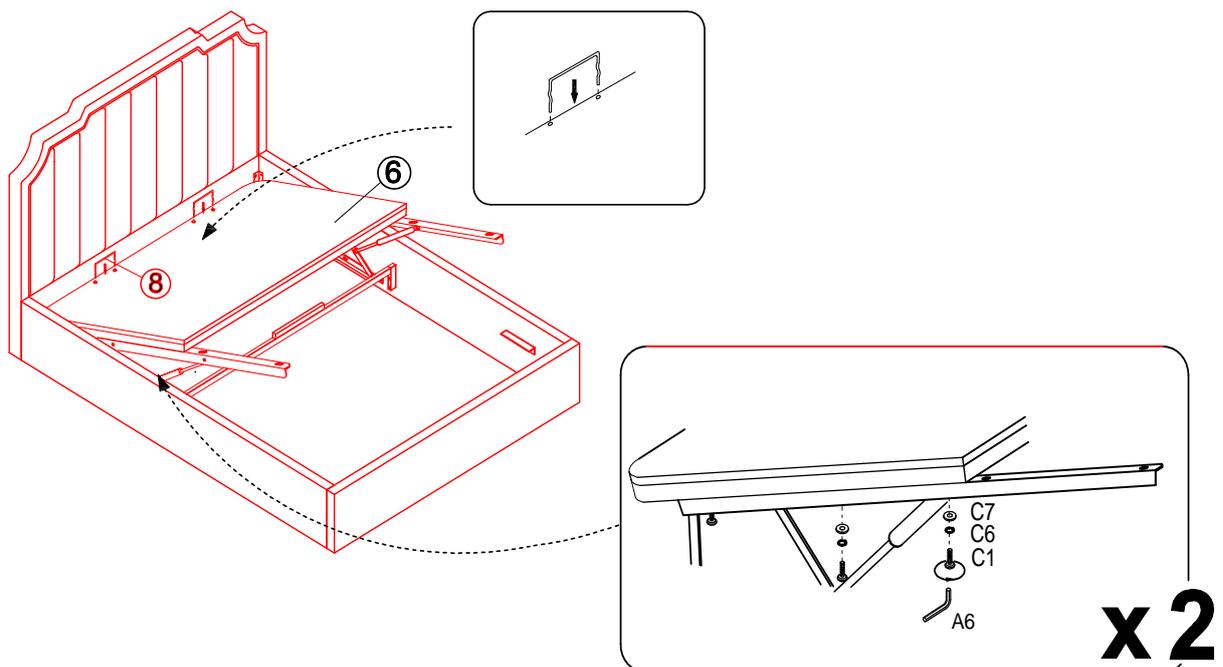



14 C1  x4 C7  x4 C6  x4 A6  x1


1) Attach the Back Bed Frame (7) using bolts (C1) and washer (C7) (C6) with the Allen Key(A6) .

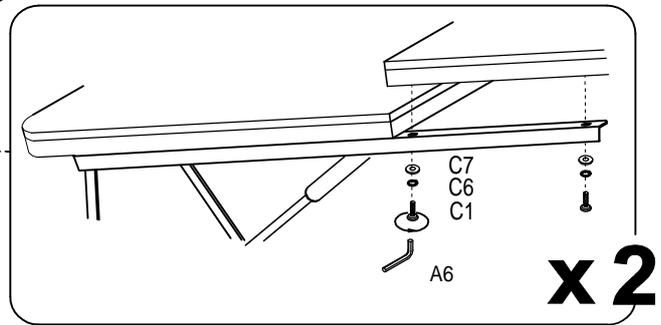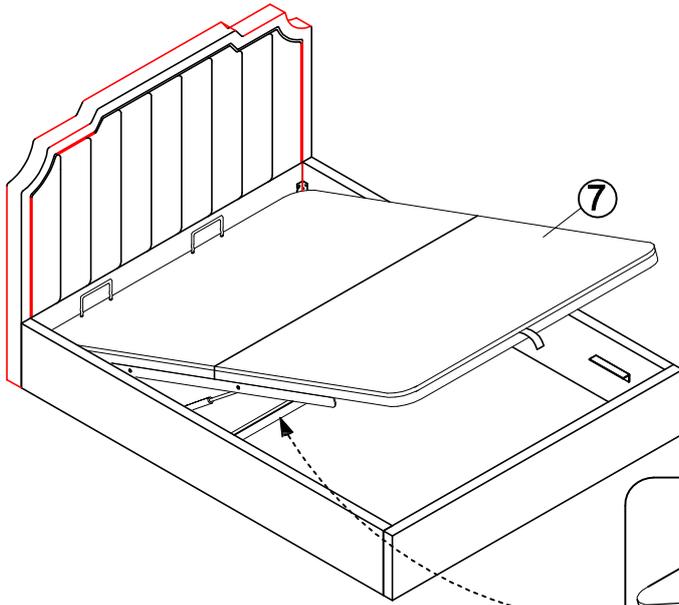


15 C2  x3 C8  x6 C9  x3 A3  x1 A8  x1

1) Join the two halves together using the bolt (C2) through the holes and tighten with the M8 nut.

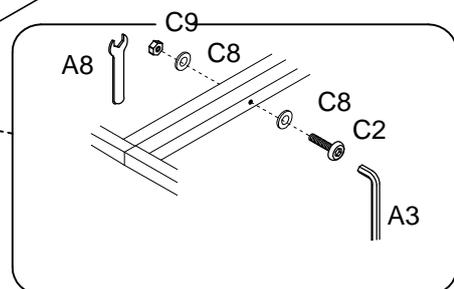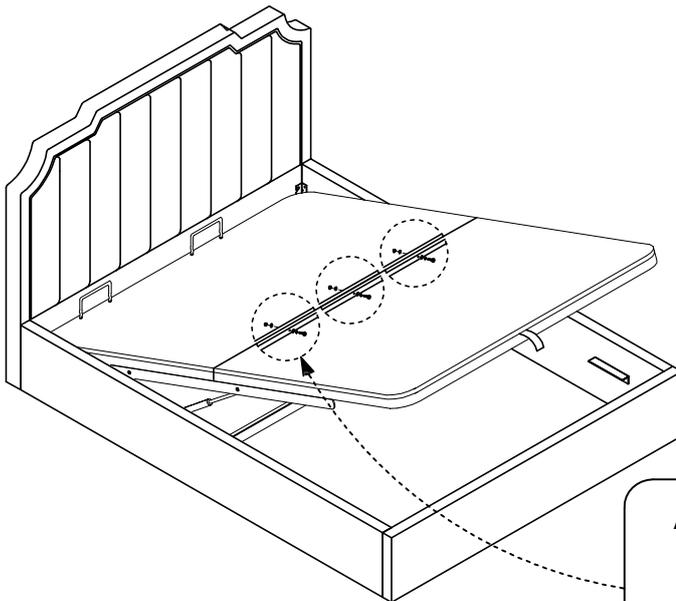


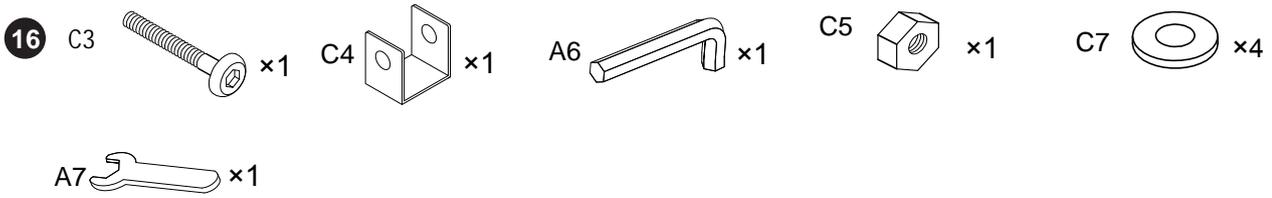

1) Attach the Support Bar (9) on the Upper Bed Frame(7) using bolts (C3) U Metal (C4) and nut (C5) with the Allen Key(A6) .

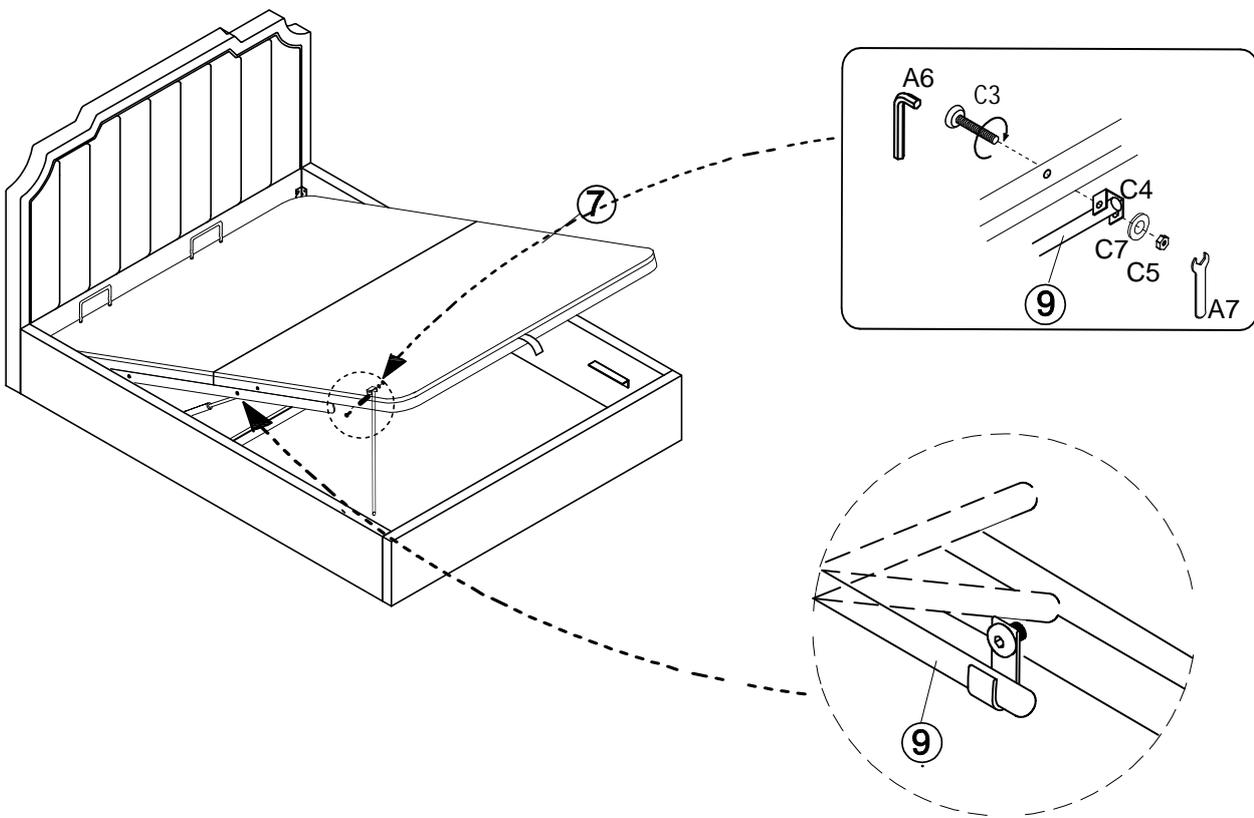



Ottoman Support Bar Assembly

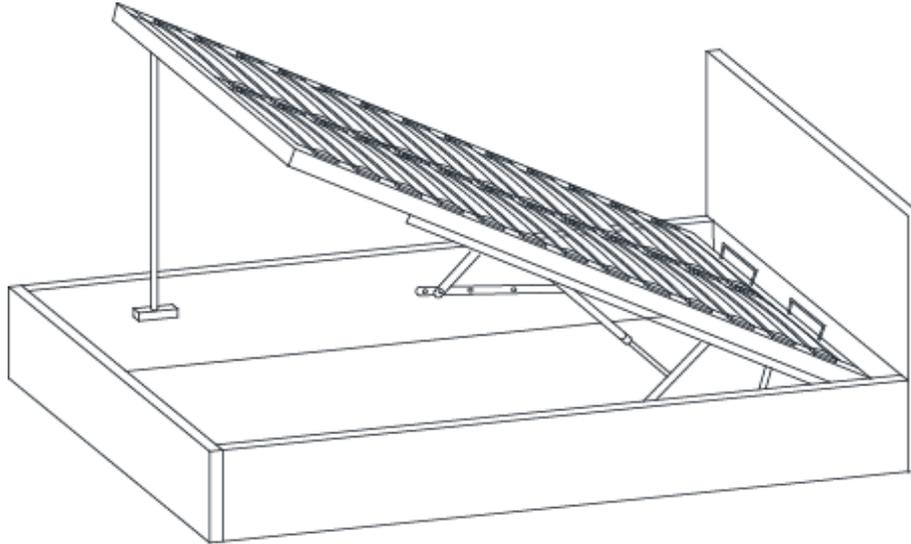

How to use

Before accessing the ottoman storage area, always ensure the ottoman support bar is engaged.

1. When engaging the ottoman support bar, ensure the slat frame/ platform base is raised to the maximum opening extension point i.e. the uppermost height.
2. Locate the support bar from under the slat frame / platform base bracket and guide the support bar into the bracket fixed to the bed frame.
3. When you are ready to close the ottoman, carefully locate the support bar and lift it upwards out of the bed frame bracket and guide it back under the slat frame/platform base and secure it using the bracket provided.
4. Slowly close the ottoman slat frame / platform base using the handle provided.

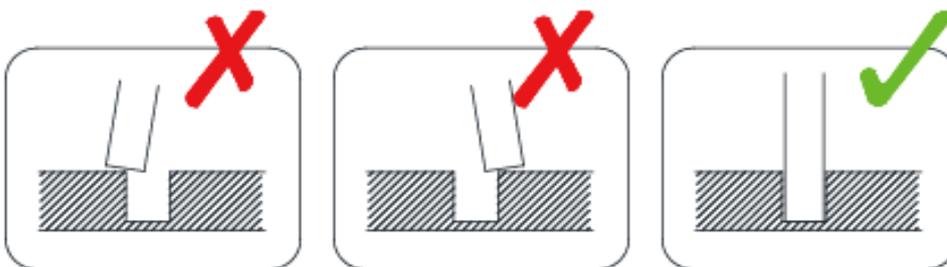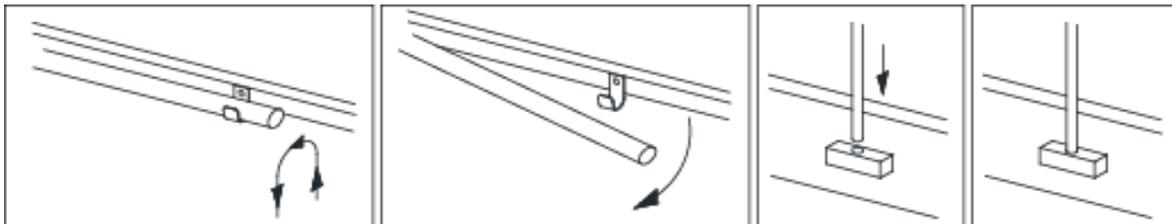

- ✓ **Recommended mattress weights - do not exceed the maximum relevant weight specified on the Assembly Instruction.**
- ✓ **Ottoman support bar - always engage the support bar when accessing the ottoman storage area.**
- ✓ Read all instructions provided before using your Ottoman bedframe. Please save and retain the instructions for future reference.



WARNING

- **Ensure the combined bedding and mattress weight is within the recommended weight guidance**
- **Adult Operation Only:** Not recommend for use by under 12 years old. Please note ease of operation is dependent on height and strength of user.
- **Avoid Entrapment:** Always lift the bed with the mattress in place, using the handle to lift and lower the base, keeping clear of the mechanism.



- **Fully Open Ottoman:** Ensure the ottoman is fully open before accessing the storage area.
- **Avoid Hinge Area:** Do not reach into the storage area through the hinge mechanism.
- **Keep Children and Pets Away:** Ensure children and pets stay away from the storage area. Do not stand inside the internal storage area of the bed.
- **Maintenance** - Regularly inspect your bed to ensure it is functioning correctly.

Recommended mattress weight for safe operation

Bed	Bed Size	Min (kg)	Max (kg)
Alyssa (manual)	Double	23	45
	King	25	50
	Super king	30	55

Overall dimensions (LWH cm)

Double: 205x147x117

King: 215x162x117

Super King: 215x192x117

Storage Dimensions (LWH cm)

Double: 183x134x25


King : 193x149x25

Super King: 193x179x25

Distance between slats (cm)

Double : 7.1 Super King : 7.1

King : 7.1

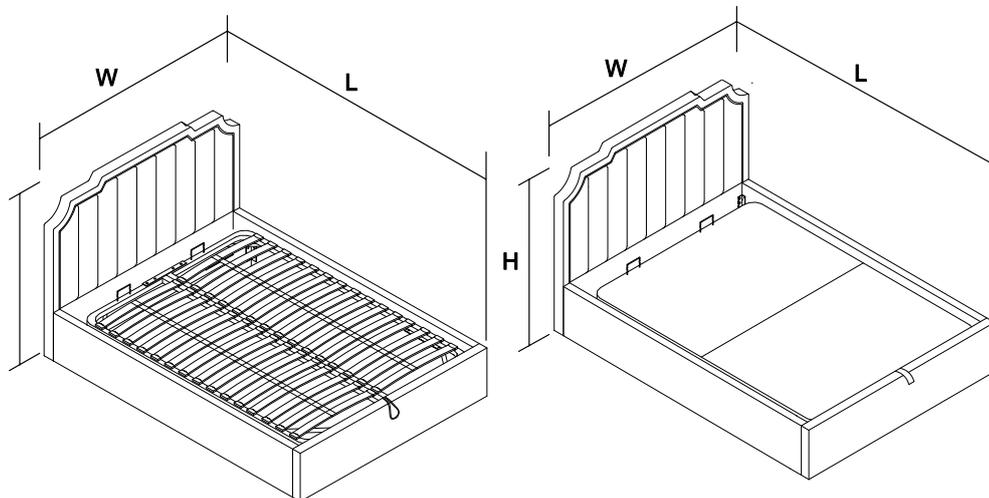

Care and maintenance

Here are some tips to keep your new bed in tip-top condition




Cleaning

To clean your new bed, we'd advise using a warm damp cloth or if fabric, remove dust using a low suction vacuum cleaner - please do not use abrasive chemicals or bleach as this may damage the product.



Checking and moving

Periodically we recommend you check that the screws or fixtures haven't become loose, over time. To move your new bed, we recommend lifting it where possible, as dragging or pushing it could cause damage to your flooring.

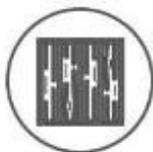

Wood

Please note each of our wooden pieces are unique, meaning that markings and shade can vary slightly between beds. Over a period of times, the wood might lighten or fade slightly due to light exposure



Fabric

Please note depending on the lighting, positioning and surroundings of your room, the shade of the colour can sometimes appear slightly different. Over a period of times the colour might lighten or fade slightly due to light exposure.



Metal

Metal tends to be more resilient to everyday wear and tear. We recommend to gently dust your metal furniture and keep it dry to maintain its stock.

Thank you for shopping with us -we hope you have a great night's sleep

Sleep well

Dreams

Love your bed

PRODUCED IN CHINA **FOR:**

Dreams Limited | Knaves Beech | High Wycombe | HP10 9YU

www.dreams.co.uk

Hometime Retail Limited | 6-16 Duncrue Crescent | Belfast | Antrim | BT3 9BW

www.dreams.ie