

Linking Instructions For Ottoman Divans

- 4' 0" (120 cms), 4' 6" (135 cms), 5' 0" (150 cms) and 6' 0" (180 cms).

- Step 1. Identify the square sides of each base half and, with the opening ends of the lids facing toward you, arrange them so they sit next to each other. Push them so they fit very tightly together (Fig 1).
- Step 2. Locate the "INSERT FITTING HERE" stickers (Fig 2).
- Step 3. Carefully pierce the material, through the centre of the "INSERT FITTING HERE" stickers, using the "male" chrome connecting bolt.
- Step 4. With the ottoman lids in the raised position, ensure the base halves still fit very tightly together.
- Step 5. Insert the "male" and "female" chrome connectors, through the "INSERT FITTINGS HERE" stickers, holding the base sides tightly together, and tighten the connectors securely, using a screwdriver (Fig 1)
- Step 6. Once the base units have been joined together, using the chrome connectors, then (with the ottoman lids in the raised position) insert fastener bolt to secure the lids together (Fig 3).

Fig 1 - View without lid.

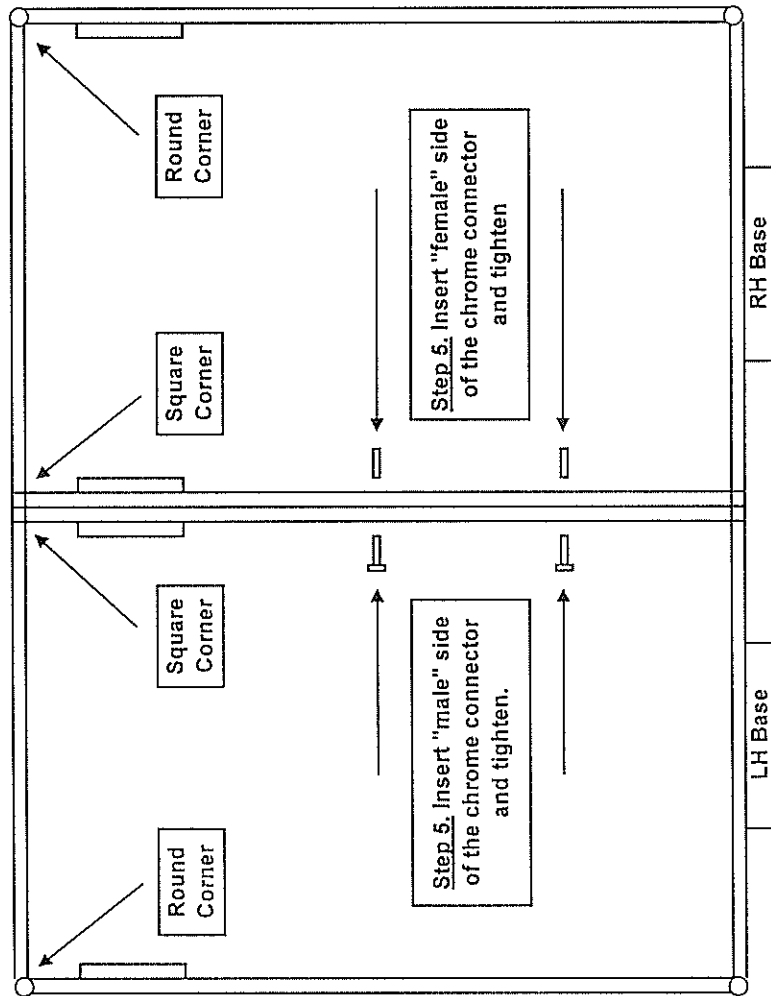


Fig 2

Fig 3

