

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.


Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

Please ensure that the packaging is disposed of in a safe environmentally friendly way.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid the danger of choking.

IMPORTANT: BEFORE STARTING TO ASSEMBLE THE BED - PLEASE READ THESE INSTRUCTIONS CAREFULLY.

Parts Identification

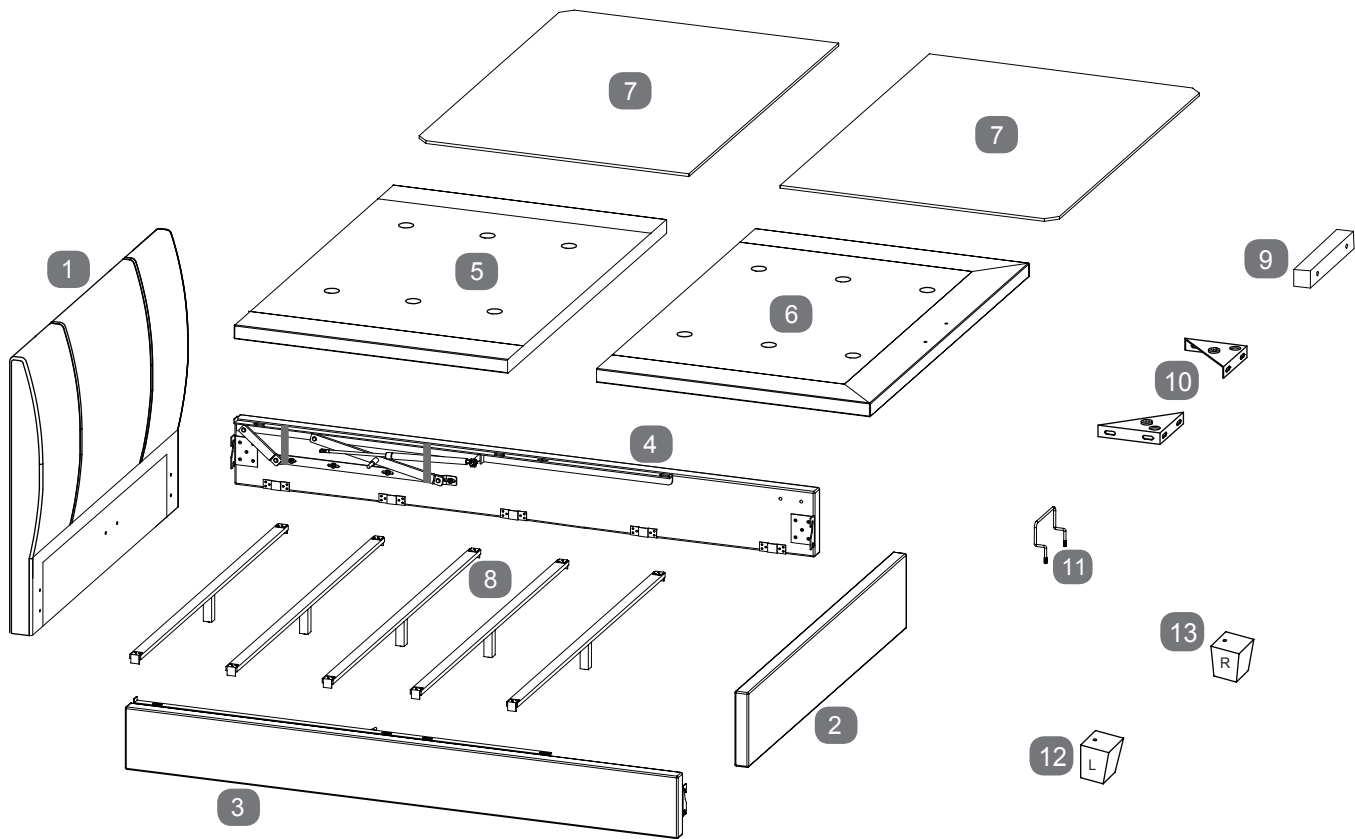

Parts Checklist

Ref.	Description	Qty	Ref.	Description	Qty
1	Headboard	1	8	Base Board Support Rails (Wood)	5
2	Footboard	1	9	Mattress Base Support Rails (Wood)	2
3	Side Rail - Left	1	10	Angle Brackets	2
4	Side Rail - Right	1	11	Mattress Base Lifting Handle	1
5	Mattress Base Board - Headend	1	12	Feet - Left	2
6	Mattress Base Board - Footend	1	13	Feet - Right	2
7	Base Boards	2			

Fittings Checklist

HARDWARE NEEDED FOR BED ASSEMBLY (PACK A)

Code	Description	Qty	Code	Description	Qty
A	Bolts (M8x30mm) for fitting side rails (3&4) to headboard & footboard (1&2)	x16	D	Allen Key (for M8 bolt)	x1
B	Spring Washers (for M8 bolts)	x16	H	Bolts (M8x60mm) for fitting feet (12&13) to headboard & footboard (1&2) fitting mattress base support rail (9) to headboard & footboard (1&2)	x8
C	Flat Washers (for M8 bolts)	x24			

HARDWARE FOR FITTING MATTRESS BASE BOARDS (PACK B)

Code	Description	Qty	Code	Description	Qty
A	Bolts (M8x30mm) for fitting gas-lift mechanism and metal connecting plates (J) to mattress base boards (5&6).	x16	F	Spanner (for M8 nuts)	x1
B	Spring Washers (for M8 bolts)	x8	G	Flange Lock-Nuts (M8) for gas-lift pistons.	x2
C	Flat Washers (for M8 bolts)	x18	J	Metal Plates for connecting mattress base boards (5&6)	x2
E	Domed nuts (M8) for fitting mattress base lifting handle (11) to mattress base board (6).	x2			

Additional Tools Required

No Additional Tools Required

Care & Maintenance

In the unlikely event of missing or damaged parts, please contact the customer service team on 0344 292 00 00. When calling this number, please quote the part code reference numbers shown in this leaflet when requesting spare or replacement parts.

General Hints & Tips




Please retain your assembly instruction and tools provided for future use. Periodically check that all bolts are still tight.

Assembly requires two persons.




1.5 Hrs

Approximate time to assemble this product

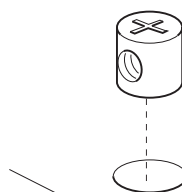

When they are supplied and are part of the assembly of this bed, ensure that the barrel nuts are fitted the correct way so the hole in the nut is facing towards the intersecting hole in the panel.

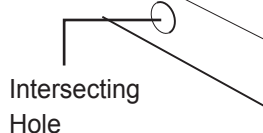



We recommend the bed is assembled in the room it shall be located in.




Bed Assembly - Use Pack 'A'

Stage 1


C  x4

D  x1

H  x4

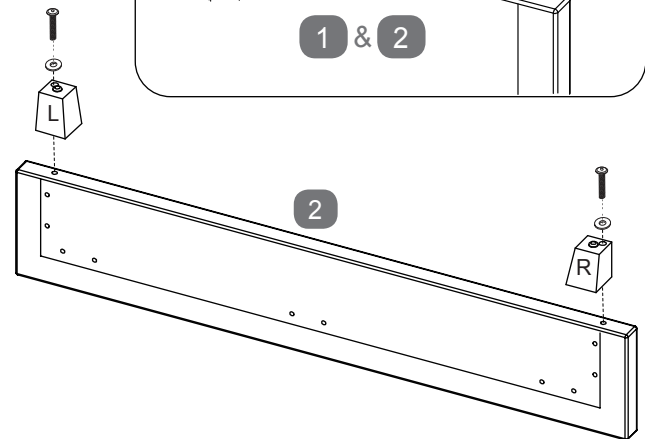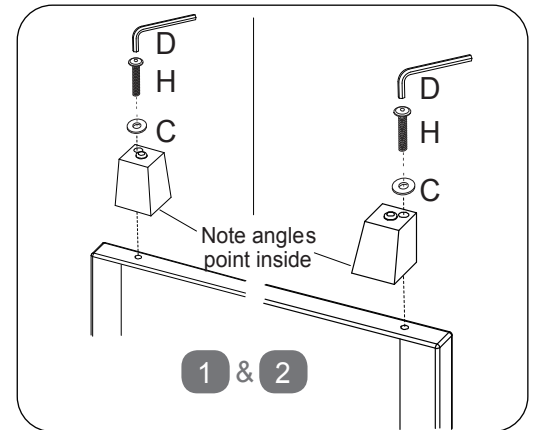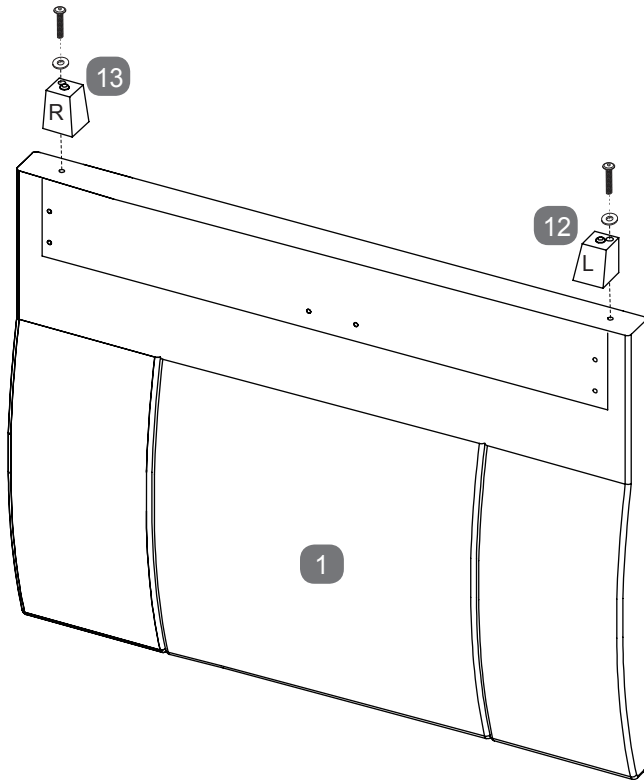


Stage 2




A  x8

B  x8

C  x12


D  x1

H  x4

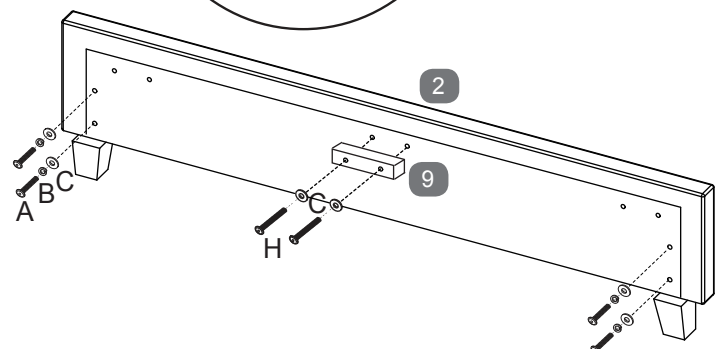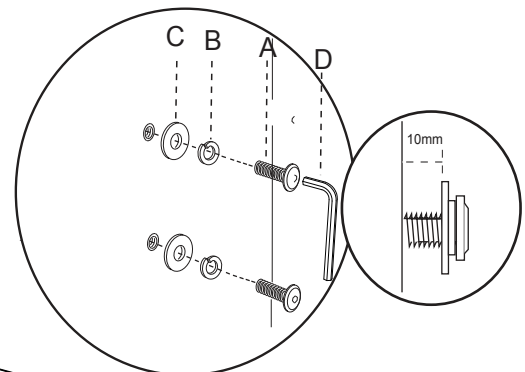
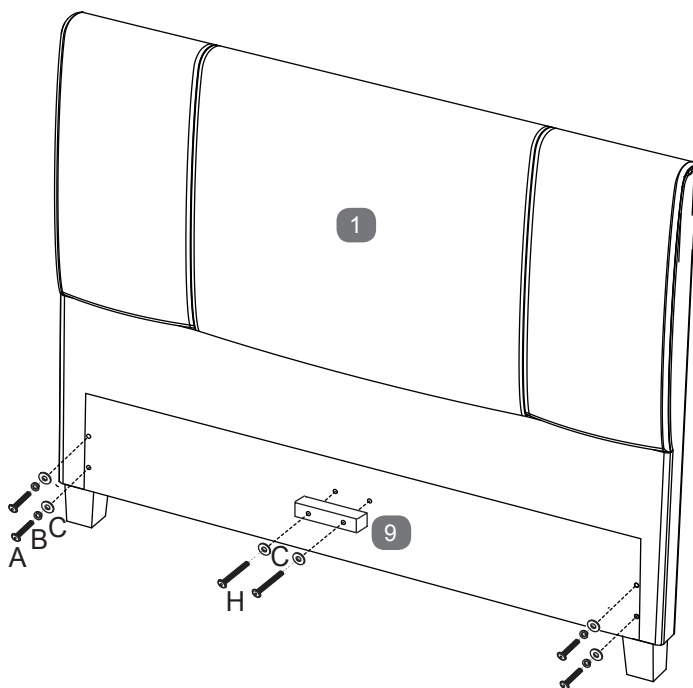


Bed Assembly - Use Pack 'A'


Stage
3

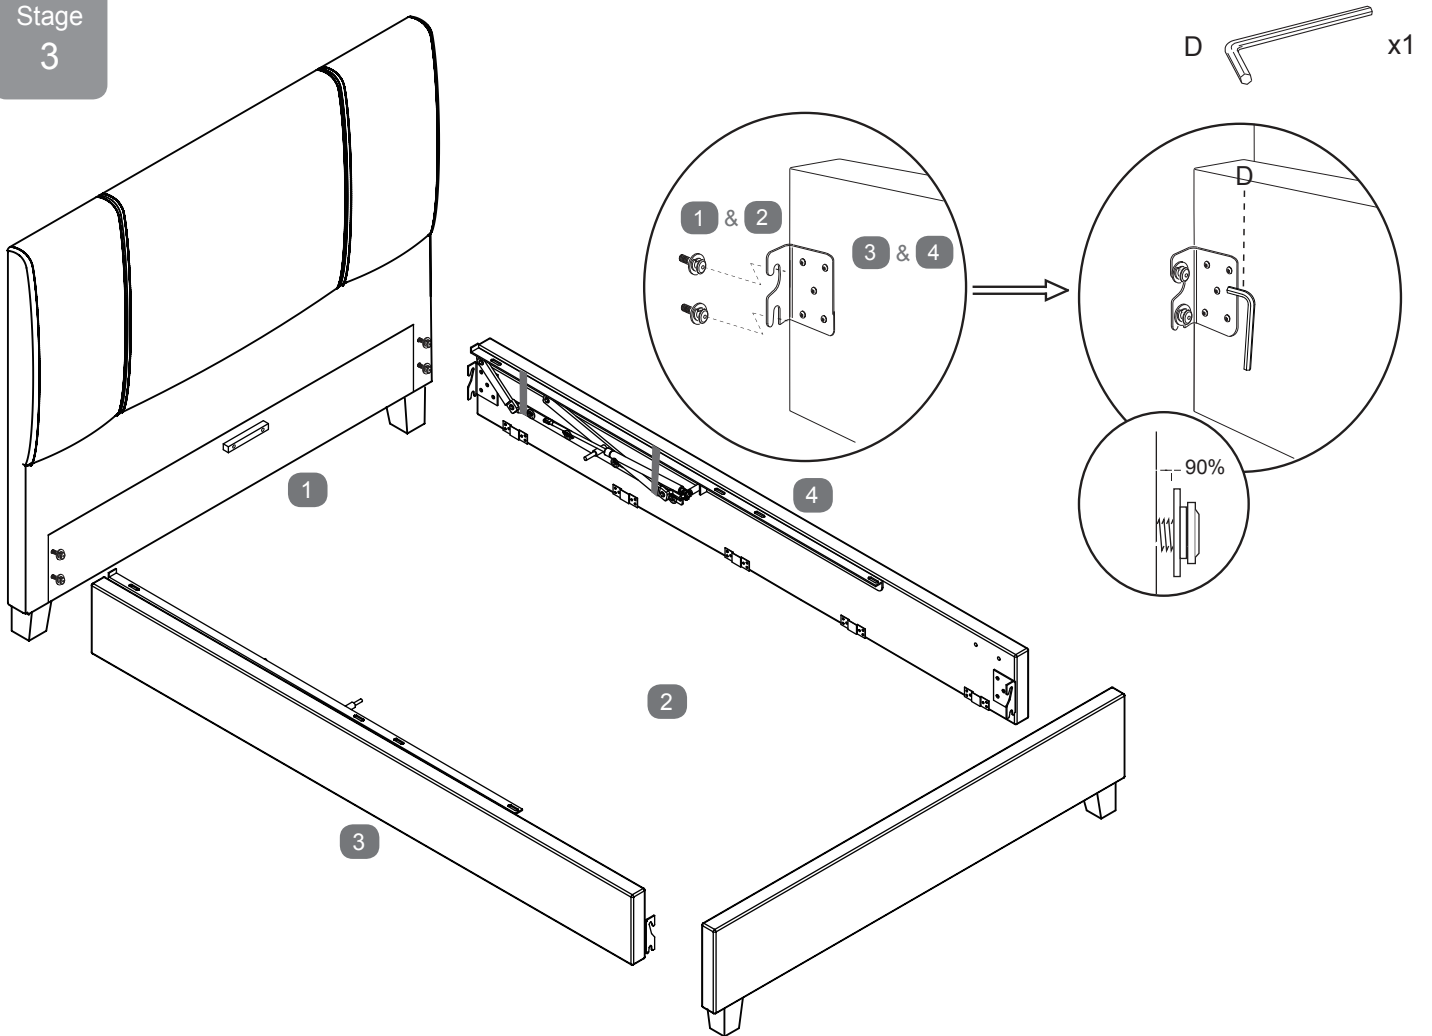

Stage
4

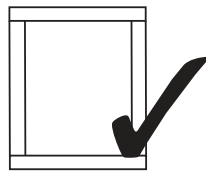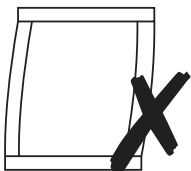


Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

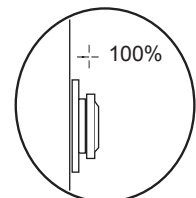


Base Board Assembly


Stage
5

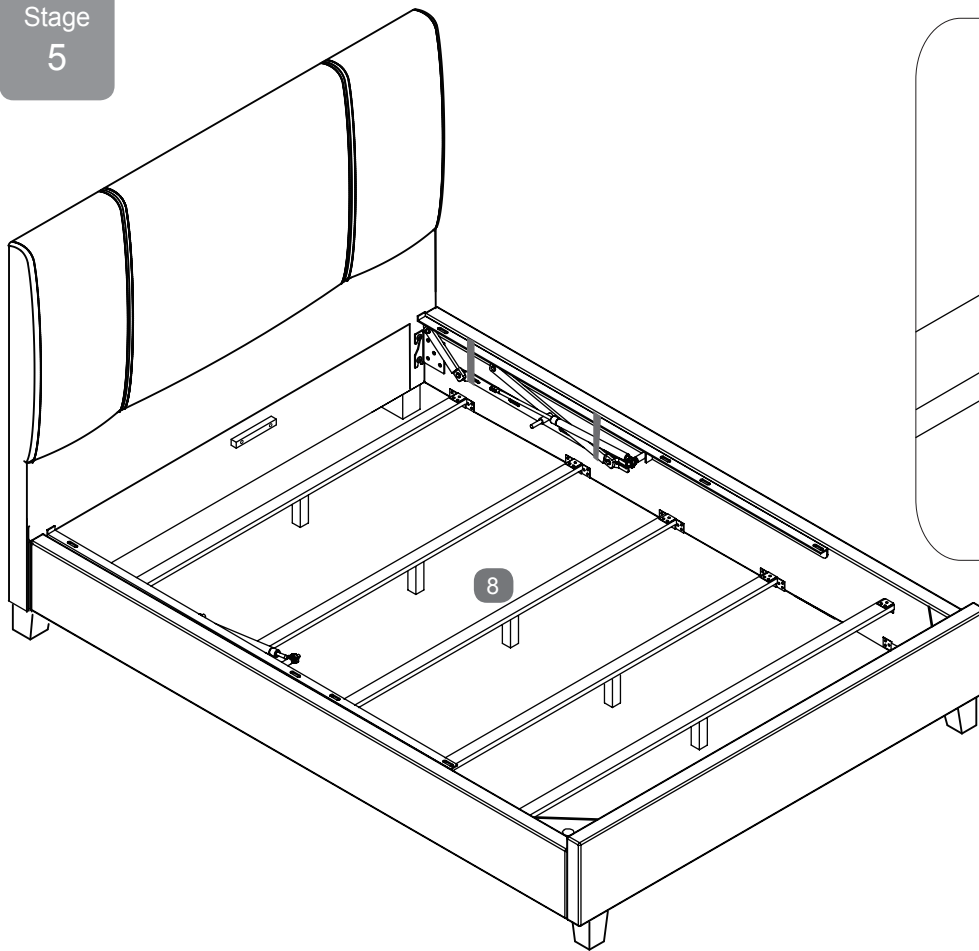


Stage
6

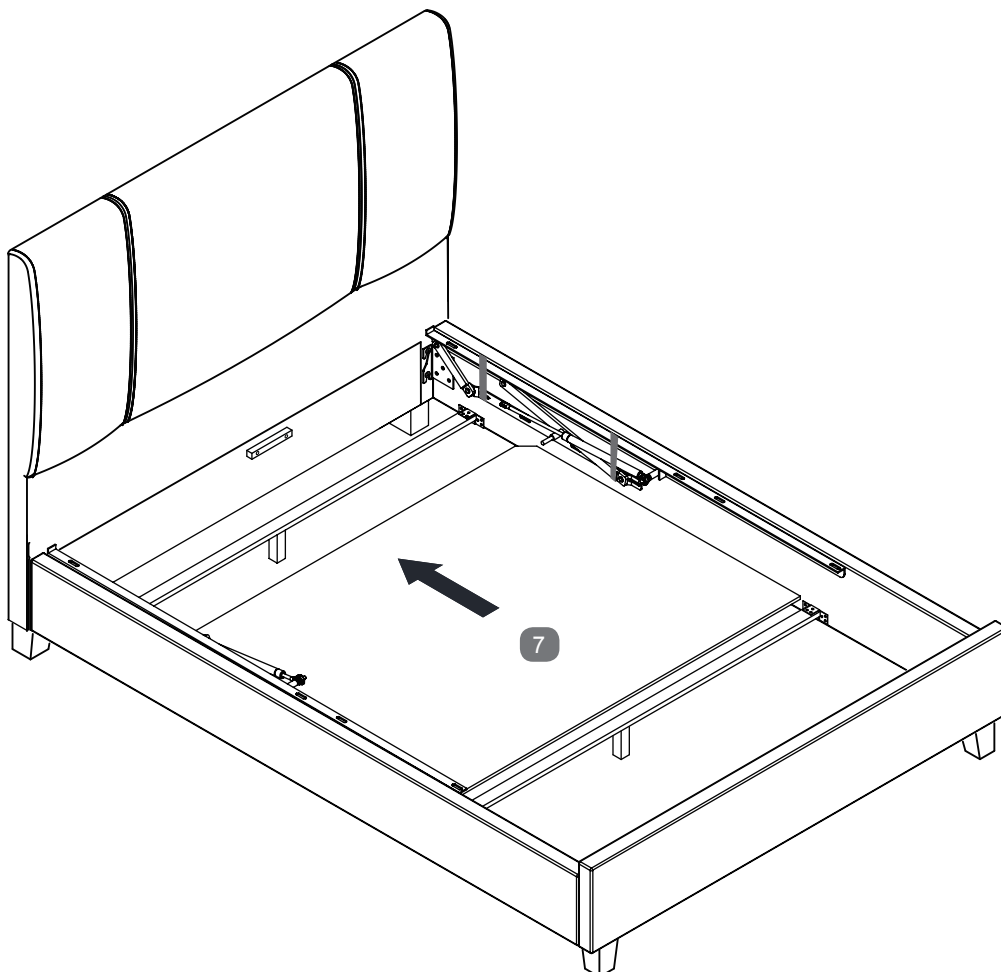






i) Un-tie the two mechanisms.

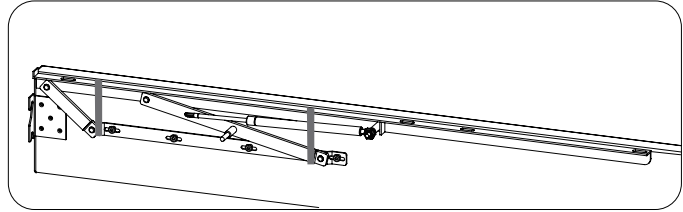

ii) Lift up mattress base board support bars.

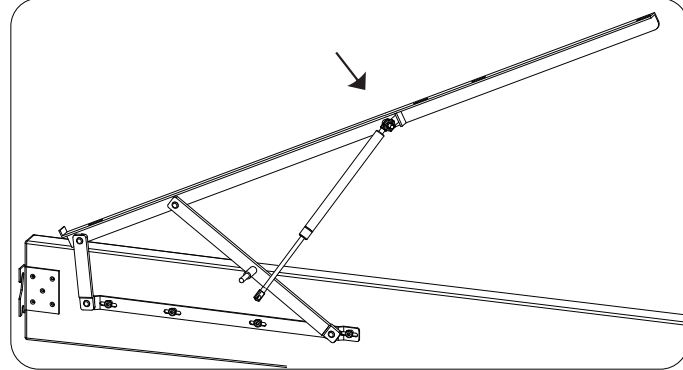


iii) Connect the piston stems

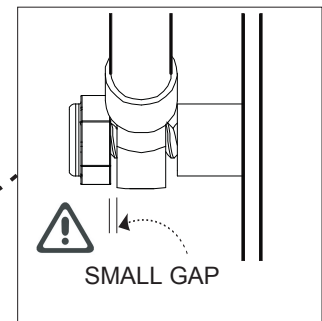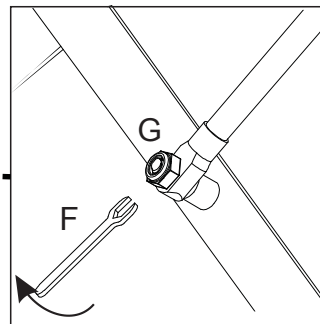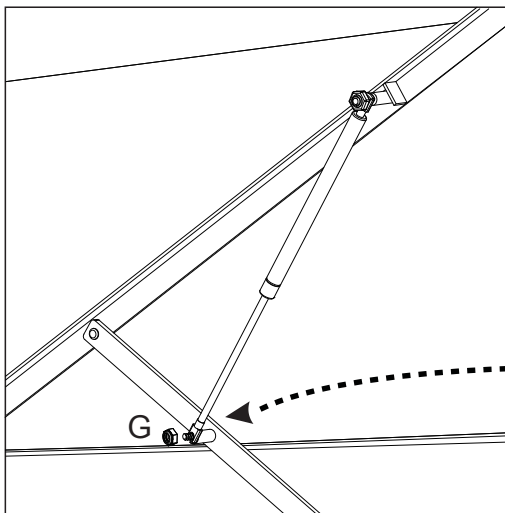

Hold up each arm and slide piston stem onto the threaded axle and fit nut (G) using spanner (F).

Note, do not overtighten - a small gap needs to be left - see sketch.

Slide in the headend baseboard (5).

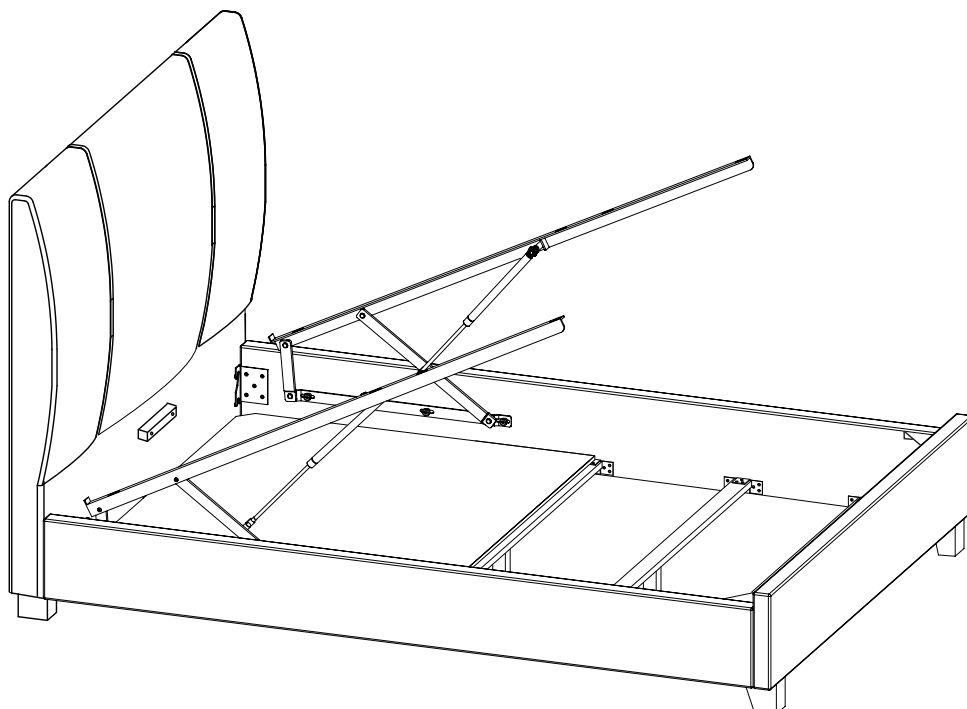


Mattress Base Assembly - Use Pack 'B'




Stage
8



SLIDE HEADEND MATTRESS BASE BOARD (5)
UP AGAINST THE LIFTING ARM STOP PLATES.

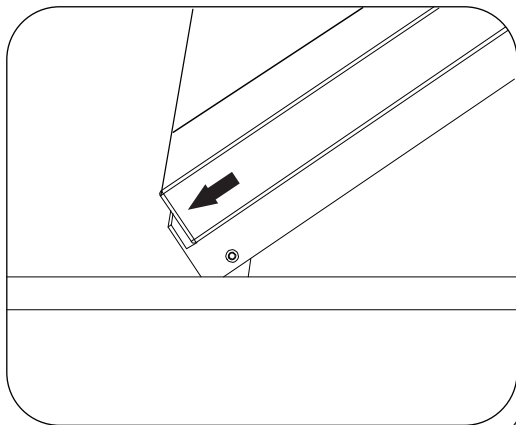




CAREFULLY SCREW BOLT SETS INTO BASE
BOARD AS SHOWN - DO NOT TIGHTEN 100% YET.

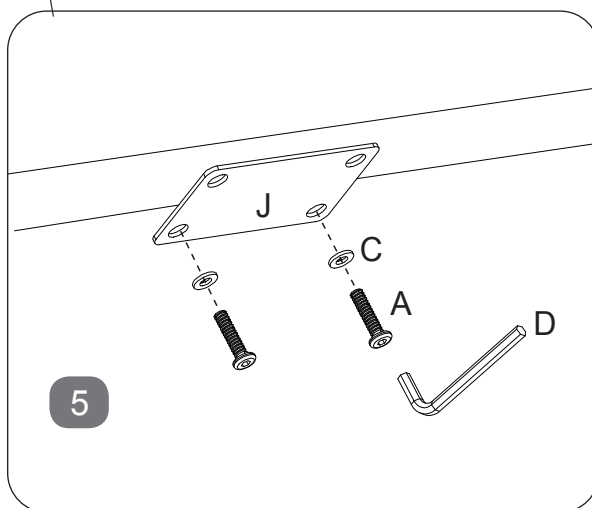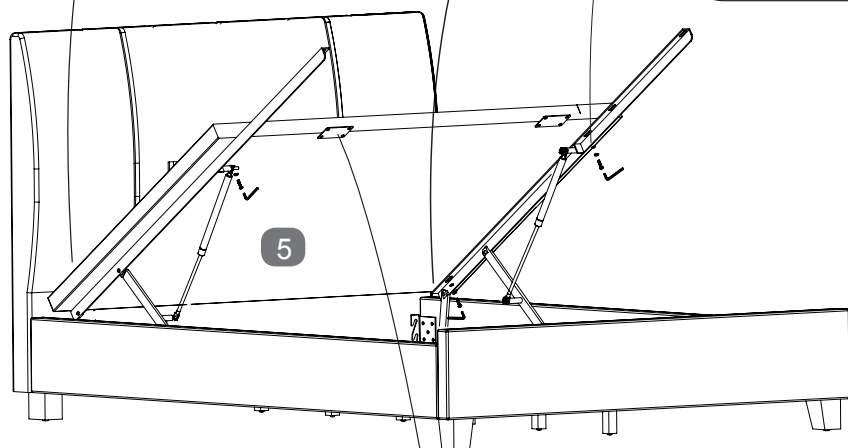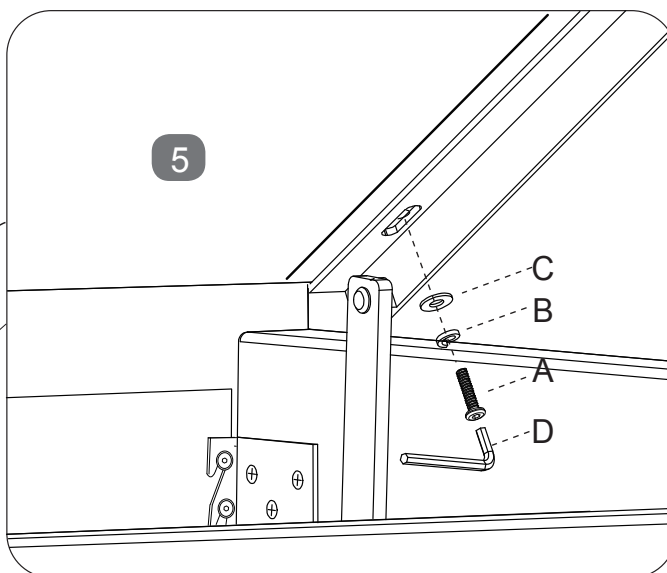


BEFORE FITTING (6) FIT BOTH PLATES (J) TO HEADEND MATTRESS BASE FIRST

Mattress Base Assembly - Use Pack 'B'

Stage
9






SLIDE FOOTEND MATTRESS BASE BOARD (6) INTO POSITION

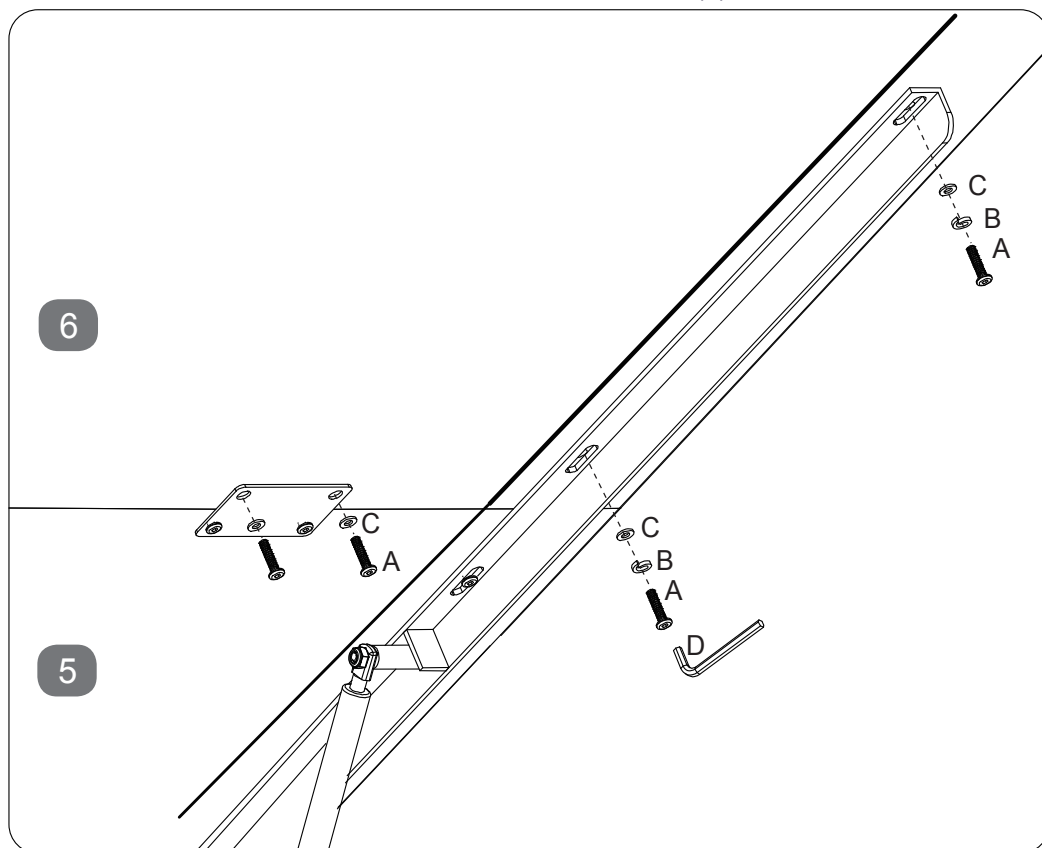


LOOSELY CONNECT THE PLATES SCREWING ALL 8 SETS OF BOLTS INTO PLACE

WHEN ALL BOLTS ARE IN PLACE, TIGHTEN ALL 16 BOLT SETS 100%

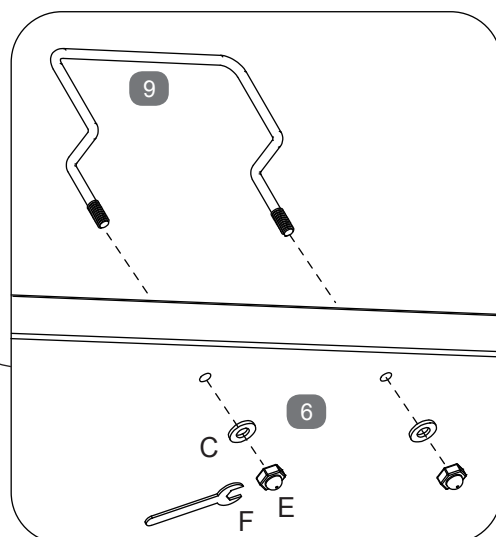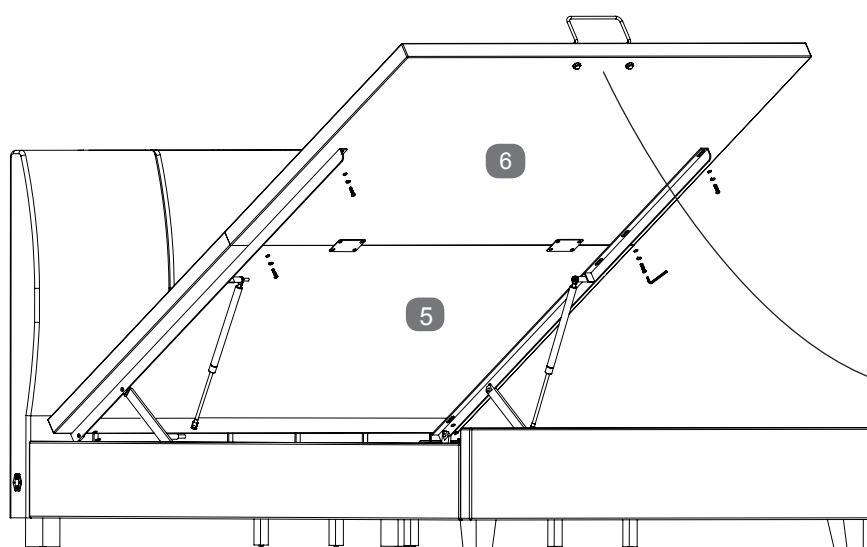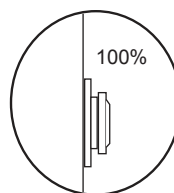


Base Board Assembly

Stage
10

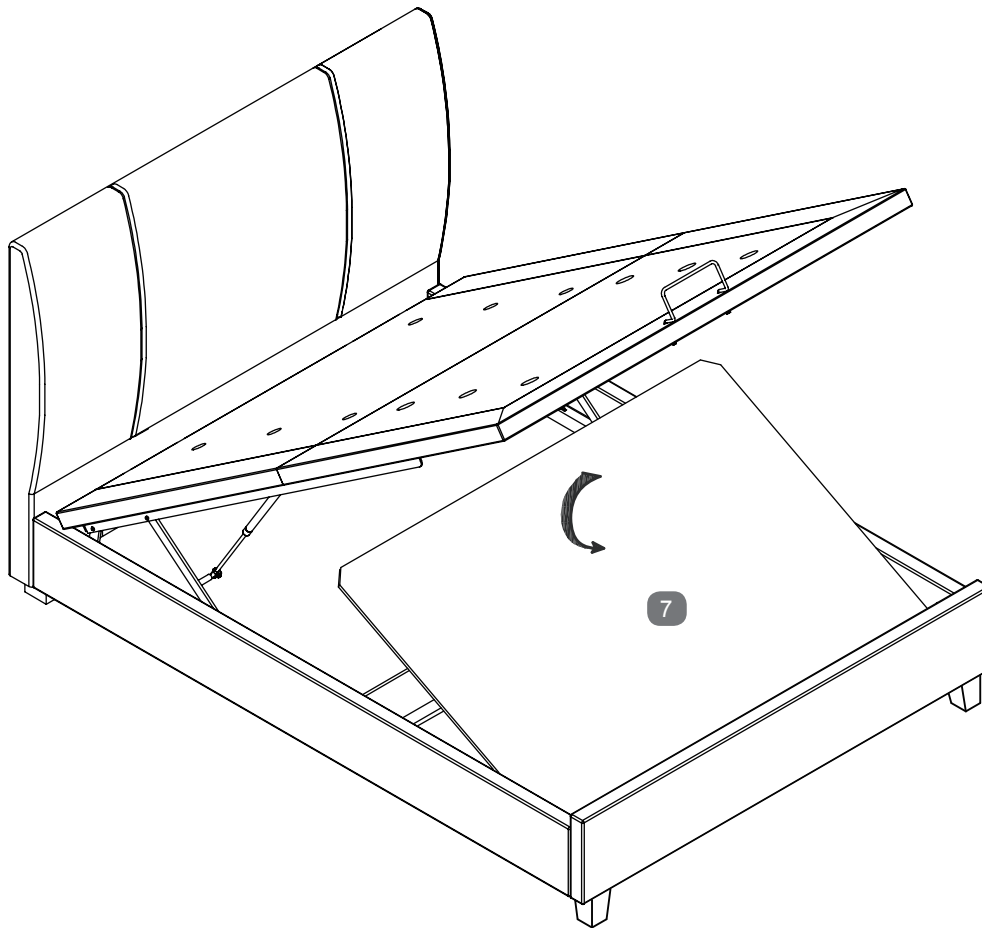

Warning.!

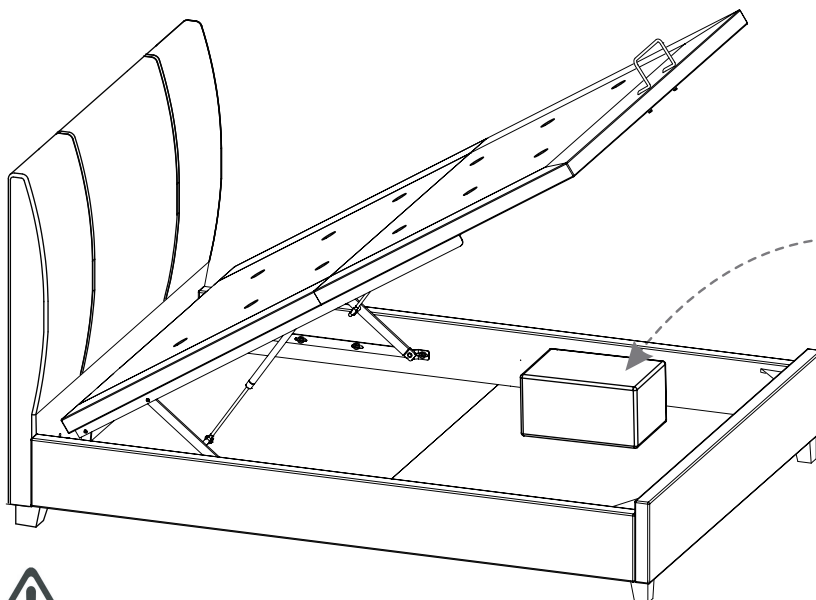

Note: Be very careful what you store under the bed - the top of an item, like a suitcase or a box, must not touch the underside of the mattress base or it may get damaged.
Maximum item height is 210mm.



NOTE: Before lifting the mattress base, place the mattress on the top. Without a mattress in place, the speed of movement is quick and may cause injury. Carefully lower the frame holding the handle firmly.

Depending on the weight of the mattress, the rising & lowering speed will vary so be careful until you get used to the speed. Always use the handle to lift or lower the frame - keep fingers well away from the moving parts.

When fully assembled and with the mattress in position, please raise & lower the ottoman 4/5 times to ensure the gas pistons are fully lubricated.