


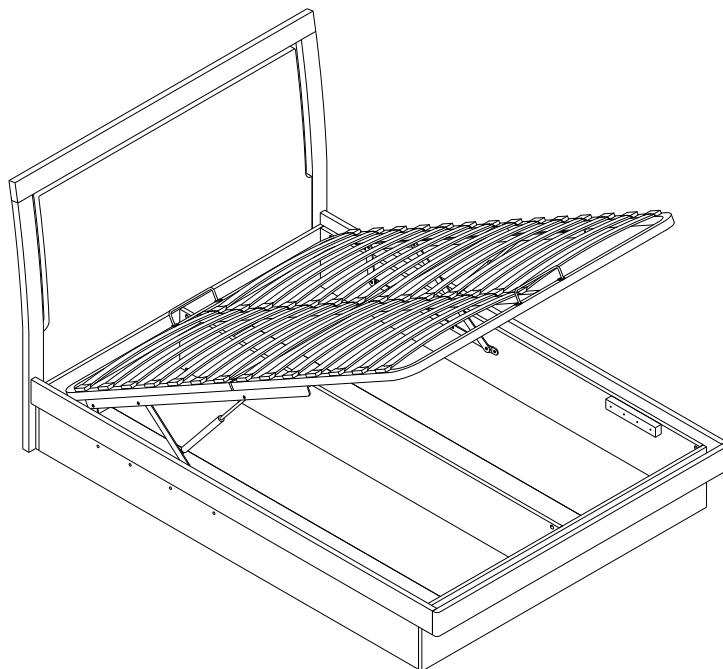

## ISABELLA BED

# Assembly Instructions

1



Minimum No. of people  
recommended to assemble  
This product.  
Approx assembly time:

2

1  
hour
















**NOTE:** It will require two people to assemble this bed. Assembly should be carried out in the room that the bed will be used in.

**Before you  
start, here  
is some  
helpful advice**


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
4. Assemble this product on a carpet.
5. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
6. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
7. Keep glue and fittings out of children's reach.

**In the unlikely event that this product has missing or damaged parts, please call 03442 920000 to obtain spares**
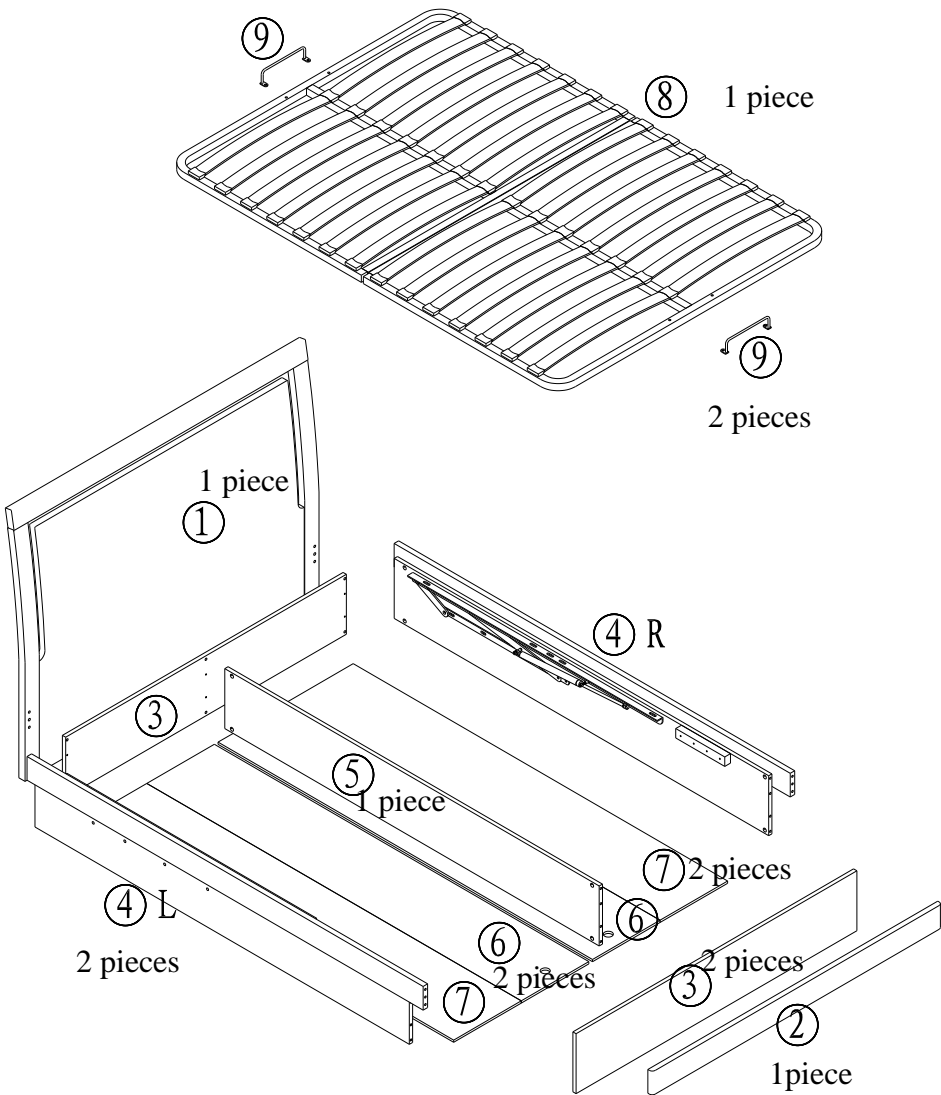
# Component parts and fittings contained in the box


PARTS			Fittings	
			<b>A</b>	 M8 x80mm Bolt    4pcs
			<b>B</b>	 Φ8 Washer    4pcs
			<b>C</b>	 M8 Barrel Nut    4pcs
			<b>D</b>	 Locking Nut    16pcs
			<b>E</b>	 Locking Pin    16pcs
			<b>F</b>	 Φ10Dowel    4pcs
			<b>G</b>	 Φ8 Dowel    12pcs
			<b>H</b>	 1/4" JCN Nut    4pcs
			<b>I</b>	 1/4" x 3/4" Bolt    4pcs
			<b>J</b>	 M8 x 20 Bolt    10pcs
			<b>K</b>	 Spanner    1pc
			<b>L</b>	 4MM Allen key    2pc
			<b>M</b>	 5MM Allen key    1pc
		<b>N</b>	 Nut    2pcs	

# ASSEMBLY

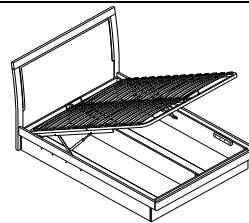


## STEP 1

- 1) Fit wood dowels (G) into holes in the ends of side rails (4) and center rail (5). Screw Locking Pins (E) into the headboard panel (3).
- 2) Use Locking Nuts (D) to fix the headboard onto side panel (4) and center panel (5).

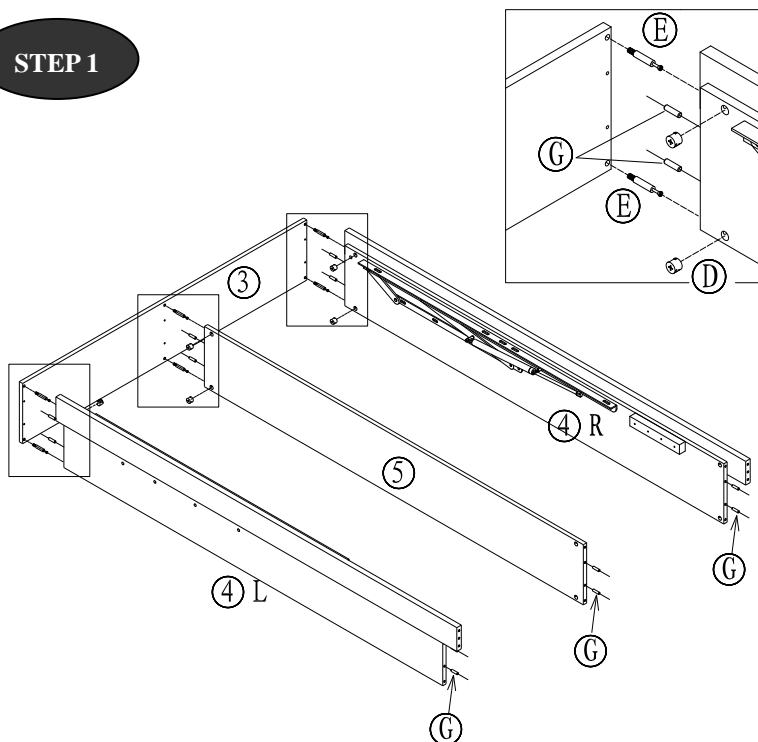


## STEP 2

- 1) Assemble footboard panels (2&3) to the side rails (4R&4L). Secure by tightening the locking nuts in the same way as described in step 1.

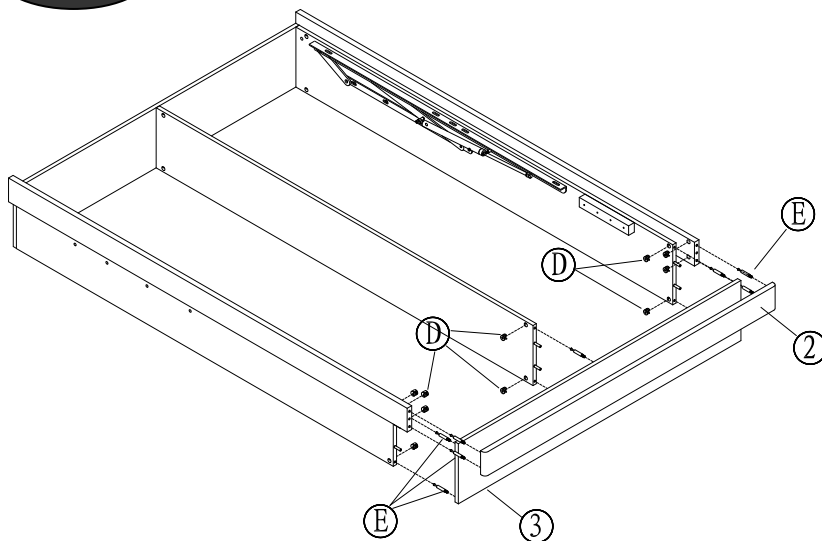


# ASSEMBLY

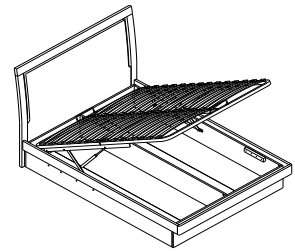


1) Fit the headboard (1) to the unit.

## STEP 3

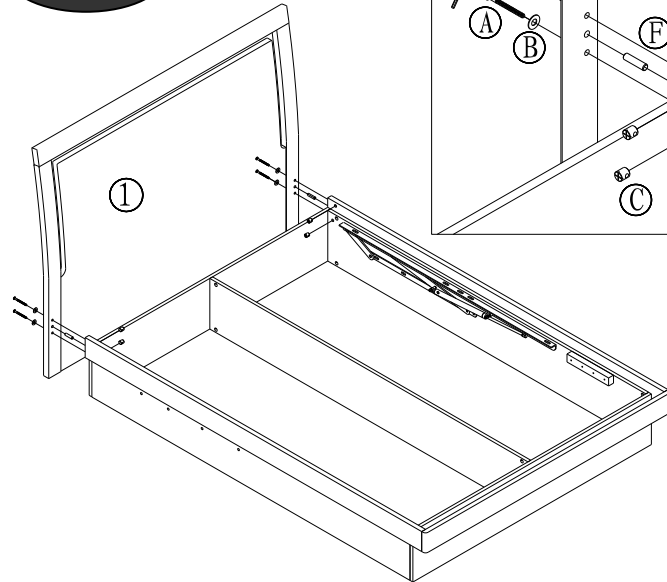


1) Fit the mattress support rails (9) to the slat frame (8).

## STEP 4

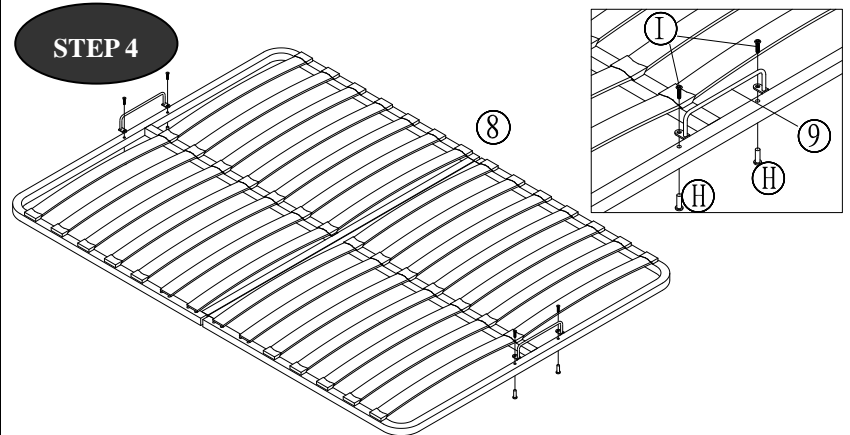


1) Screw the Nut (N) onto the piston bracket .

## STEP 5

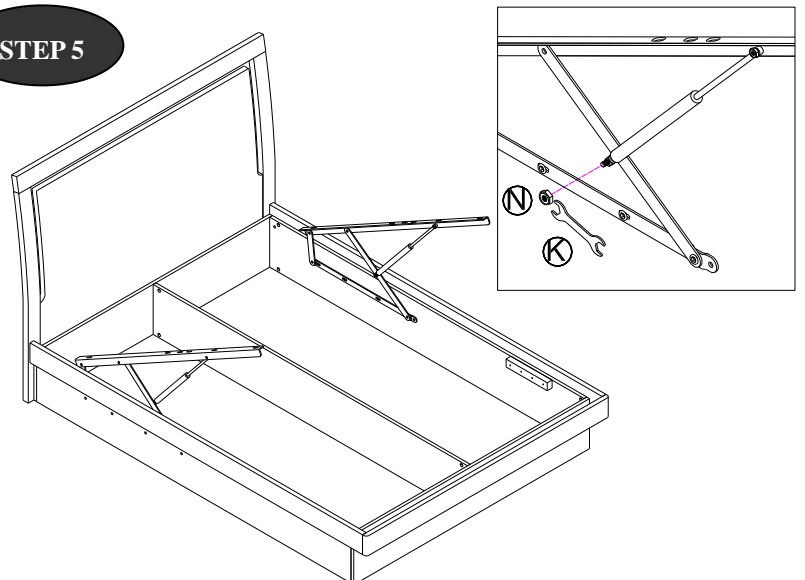


# ASSEMBLY

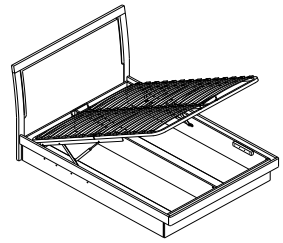


1) Two people carefully lower the slat frame onto the piston bracket . Secure by threading bolts (J) to slat frame on the piston bracket .

## STEP 6

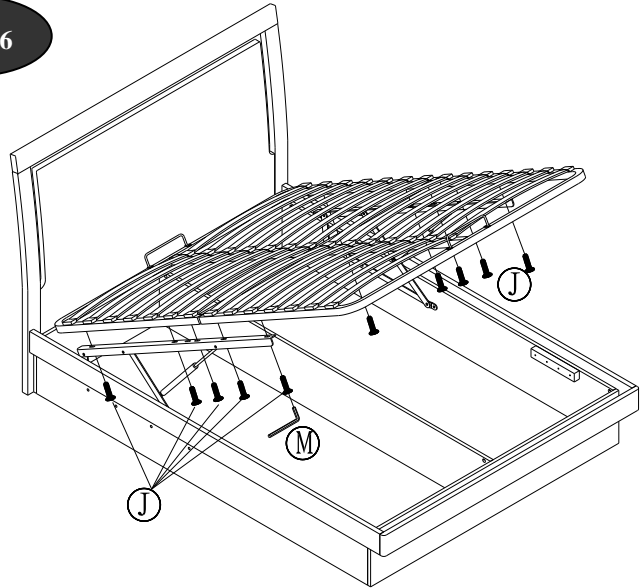

1) Position base boards (6&7) into the bed frame.

## STEP 7

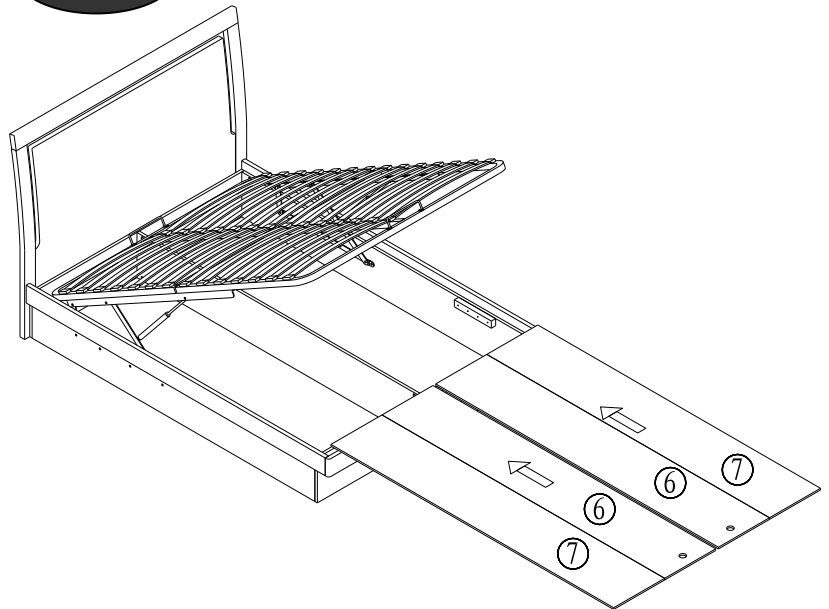

**Carton Information****Carton Dimensions (CM)**

Size	Box 1				Box 2				Box 3				Box 4				Box 5				Box 6			
	H	L	W	Weight Kg	H	L	W	Weight Kg	H	L	W	Weight Kg	H	L	W	Weight Kg	H	L	W	Weight Kg	H	L	W	Weight Kg
Single																								
4ft																								
Double	9	152	120	18	6.5	194	27.8	13	14.3	204	32.7	27	9.5	194	40.3	23	13	139	101	17				
King	9	167	120	20	6.5	204	27.8	15	14.3	214	32.7	29	9.5	204	44	25	13.5	154	106	20				
Super King																								

**Carton Content - Parts as per Assembly Instructions**

Size	Box 1	Box 2	Box 3	Box 4	Box 5	Box 6
Single						
4ft						
Double	part 1	part 3&5	part 2&4	part 6&7	part 8&9,A.I.,hardware	
King	part 1	part 3&5	part 2&4	part 6&7	part 8&9,A.I.,hardware	
Super King						

**Product Composition**

Head End	Plyboard, Solid ash, etc....
Side Rails	Solid ash, Particle board with ash veneer, etc...
Footend	Solid ash, Particle board with ash veneer, etc...
Drawers	
Feet	
Centre Support Leg	
Ottoman base composition	MDF with ash veneer
Middle Rail	Particle board with ash veneer, etc...