


# Payton bed

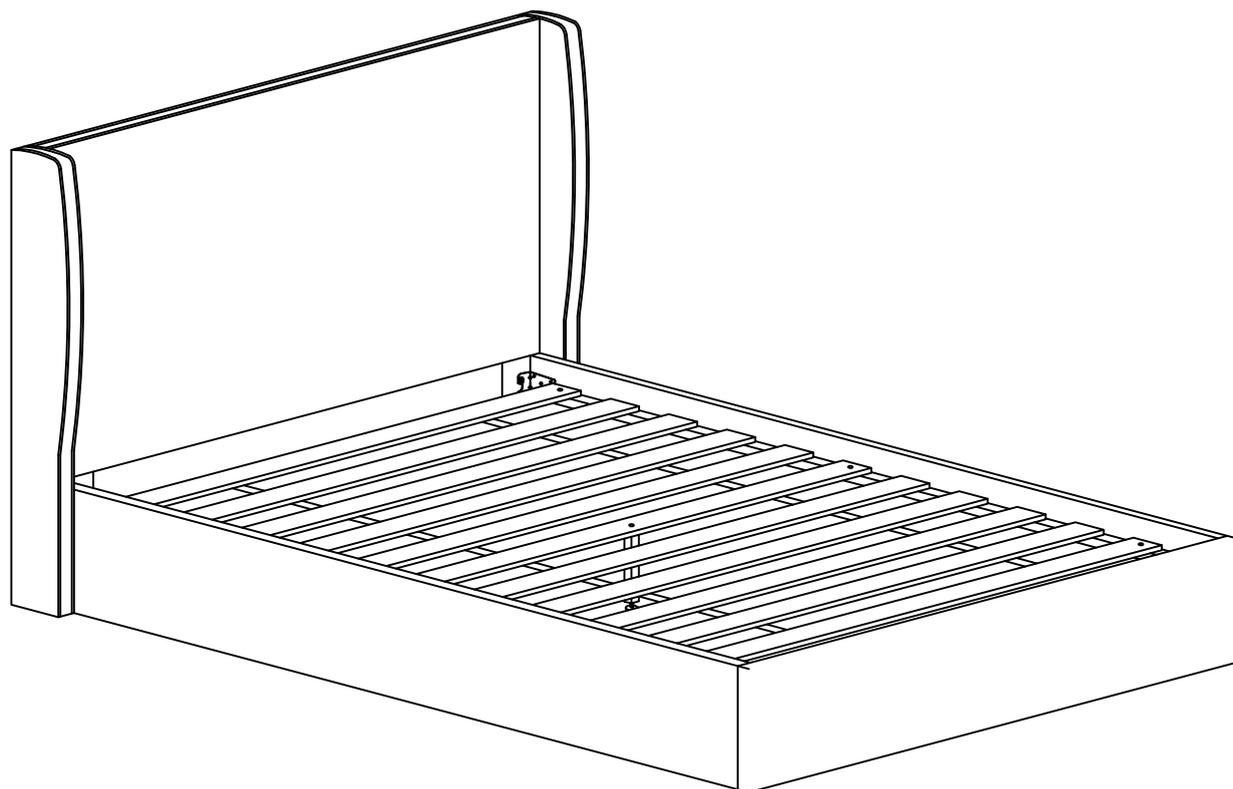

45 minutes approx  
assembly time



Two person  
assembly



# Dreams

Love your bed

# Thank you

Hello, thanks for choosing to purchase your bed from Dreams - you're now on your way to your best ever night's sleep. Before you begin building your bed, please take a moment to read through the instructions and make sure that you've got all the relevant parts listed on the following pages.



## Assembly tips

Before you begin, it's best to identify all parts and fittings to build your bed. We advise laying these out on the floor to check you have everything, and familiarising yourself before building.



## Top tip

We recommend that you build your new bed in the room you'd like it to be located - this will help prevent any risk of damage to your newly built bed whilst moving it.



## Safety and care

It's really important to ensure children and animals are kept away from the assembly area, as there are small components used in this bed which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation. To keep your little ones busy, there is a colouring page inside the back cover.



## Help and support


At Dreams, it's our mission to give the whole nation a great night's sleep - this means that the quality of our products is of utmost importance to us. If there are any issues with your product or any missing parts, please visit our website at [www.dreams.co.uk/help](http://www.dreams.co.uk/help)



## Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Our assembly instructions are printed on recycled paper. Please keep your assembly instructions safe to refer back to in the future.

# Parts

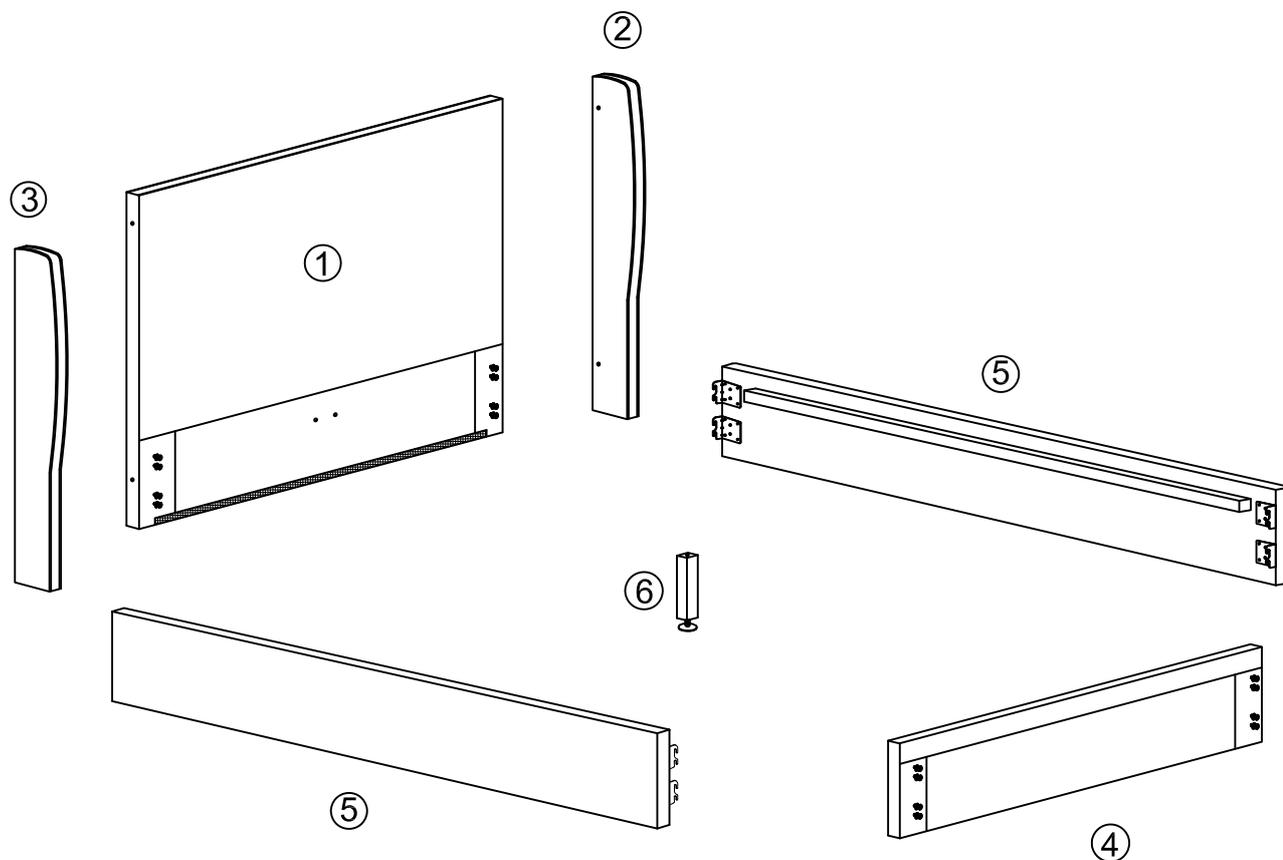




## Parts list

Code	Description	Qty	Box
1.	Headboard	1	1
2.	Wing-R	1	2
3.	Wing-L	1	2
4.	Footboard	1	3
5.	Side Rails	2	3
6.	Adjustable support wooden leg	1	3




# Fittings

Please check you have all the parts listed below with your product:

## PACK A (in box 1)

<p>B x 1pc</p>  <p>Allen Key (for M8 bolt)</p>	<p>A x 4pcs</p>  <p>Bolts (M8 x 45mm)</p>	<p>D x 4pcs</p>  <p>Washers (M8 x 19mm)</p>	<p>G x 4 pcs</p>  <p>Spring Washers (M8)</p>
---	--	---	---

## PACK B (in box 3)

<p>H x 7 pcs</p>  <p>Washers (M6 x 19mm)</p>	<p>C x 6 pcs</p>  <p>Bolts (M6 x 35mm)</p>	<p>I x 2 pcs</p>  <p>Allen Key (for M6 bolt)</p>	<p>E x 6 pcs</p>  <p>Bolts (M6 x 30mm)</p>
<p>F x 1pc</p>  <p>Screws (M8 x 50mm)</p>			



0cm 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

# Tools required

Please check you have all these below







Tape measure




Cross head screwdriver

# Step 1

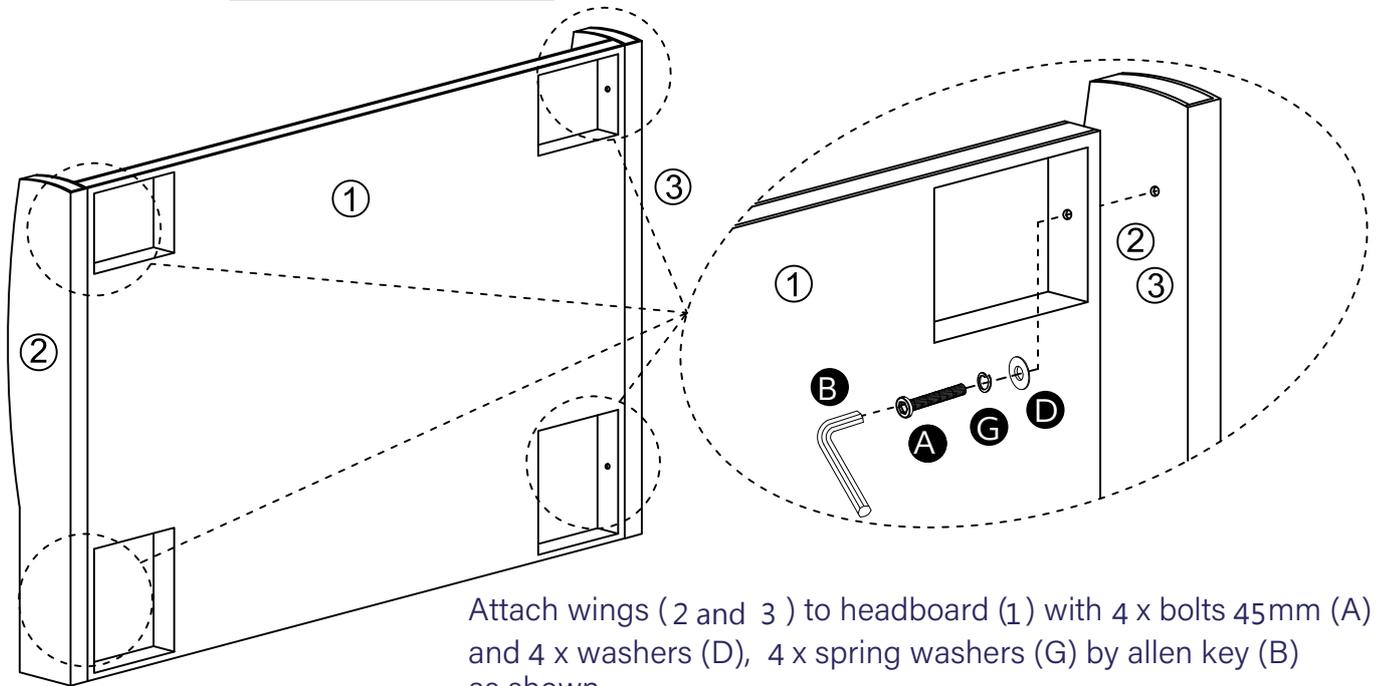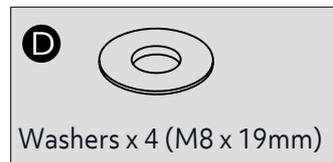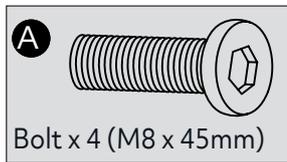
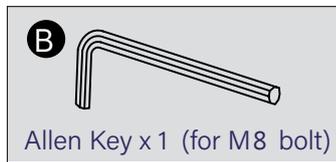


# Step 2

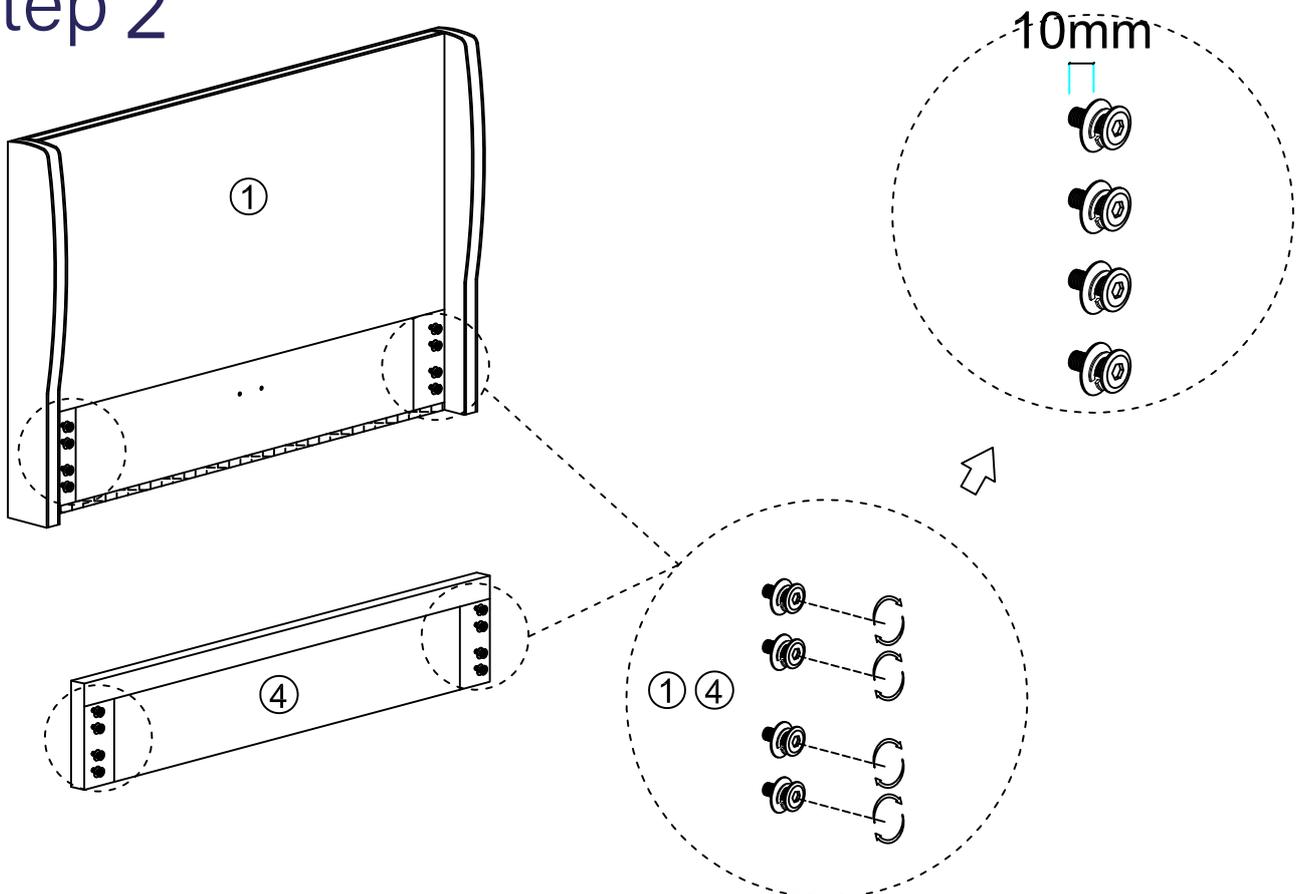



Untie all bolts from Headboard/Footboard (1 and 4) and keep 10mm distance as in the diagram.

# Step 3

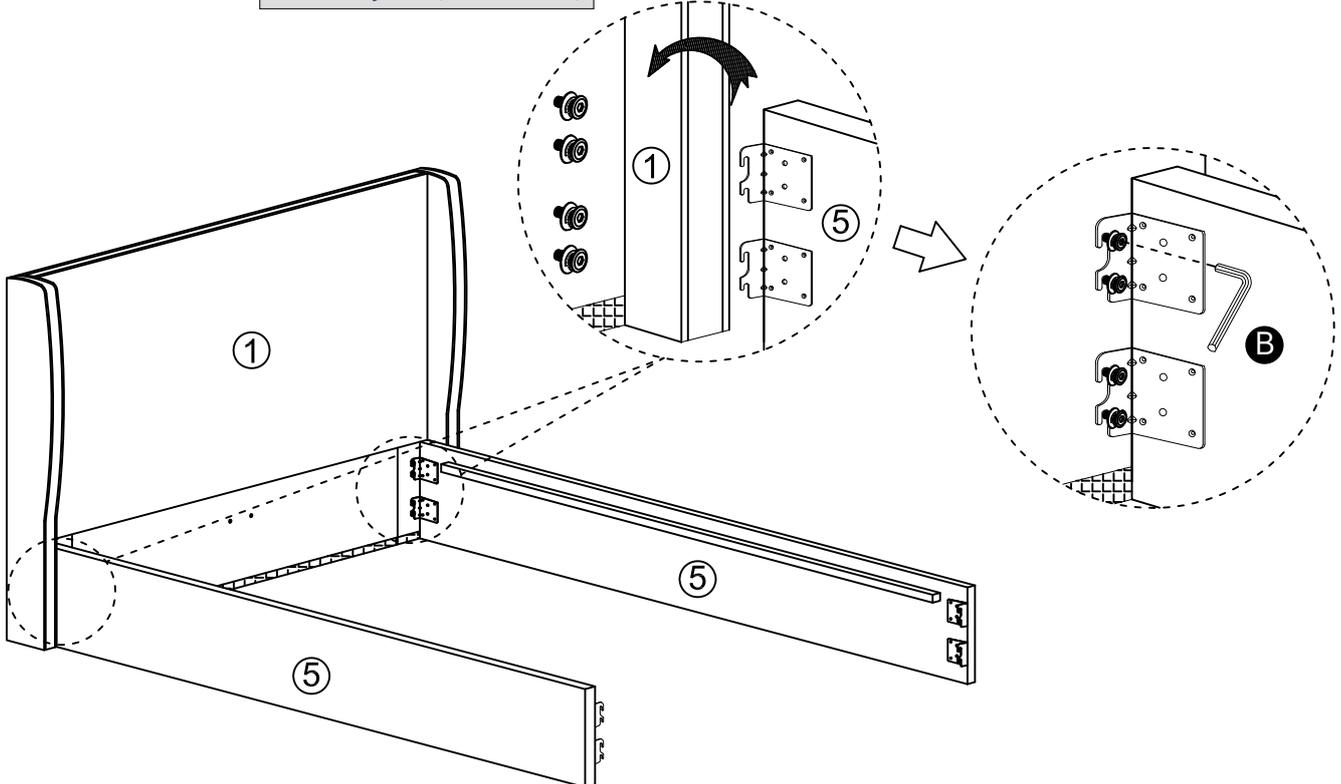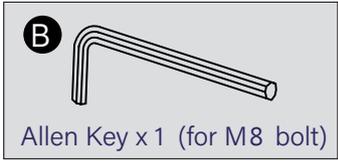

Attach side rails (5) to headboard (1) by allen key (B) as shown.





# Step 4

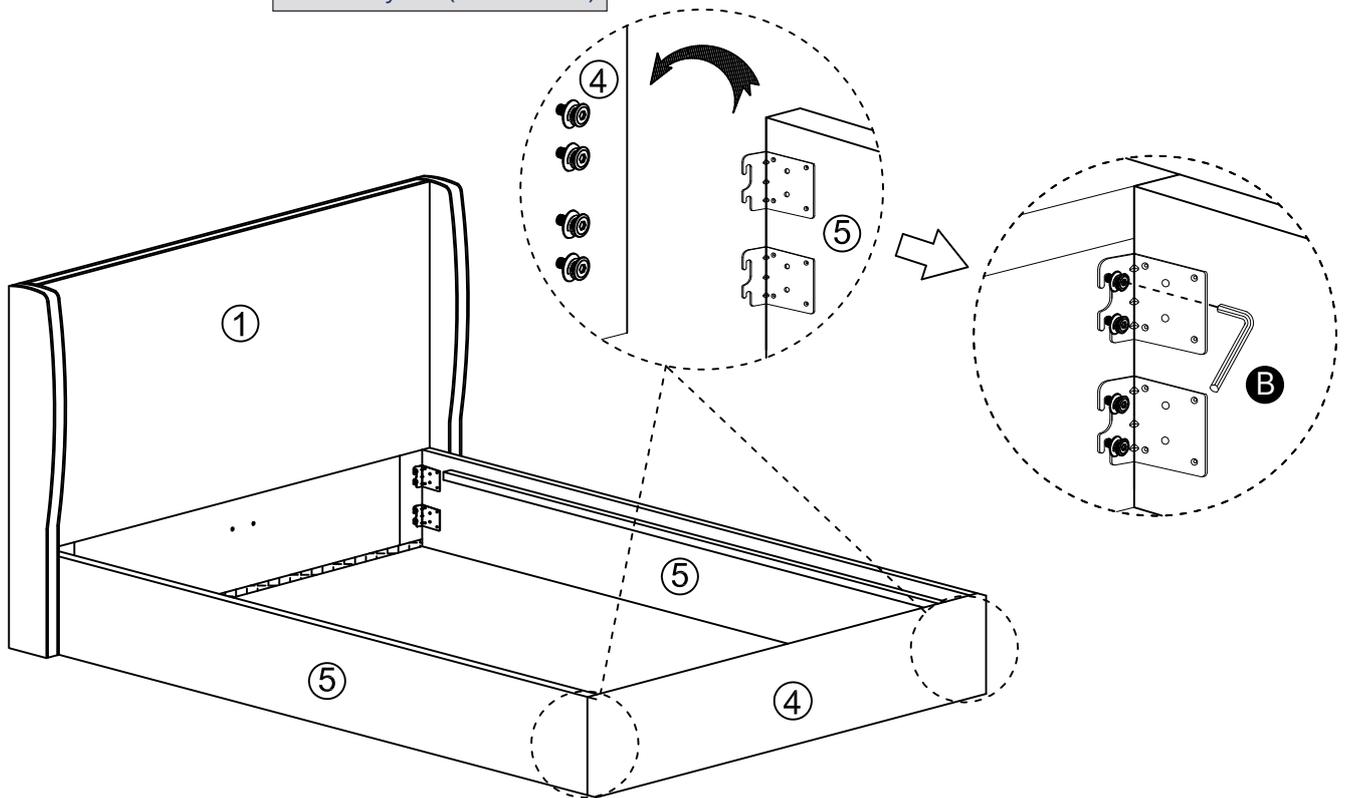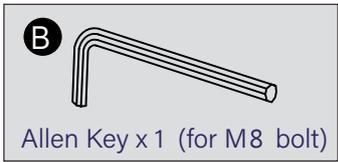

Attach side rails (5) to footboard (4) by allen key (B) as shown.

# Solid slat assembly





## Step 5

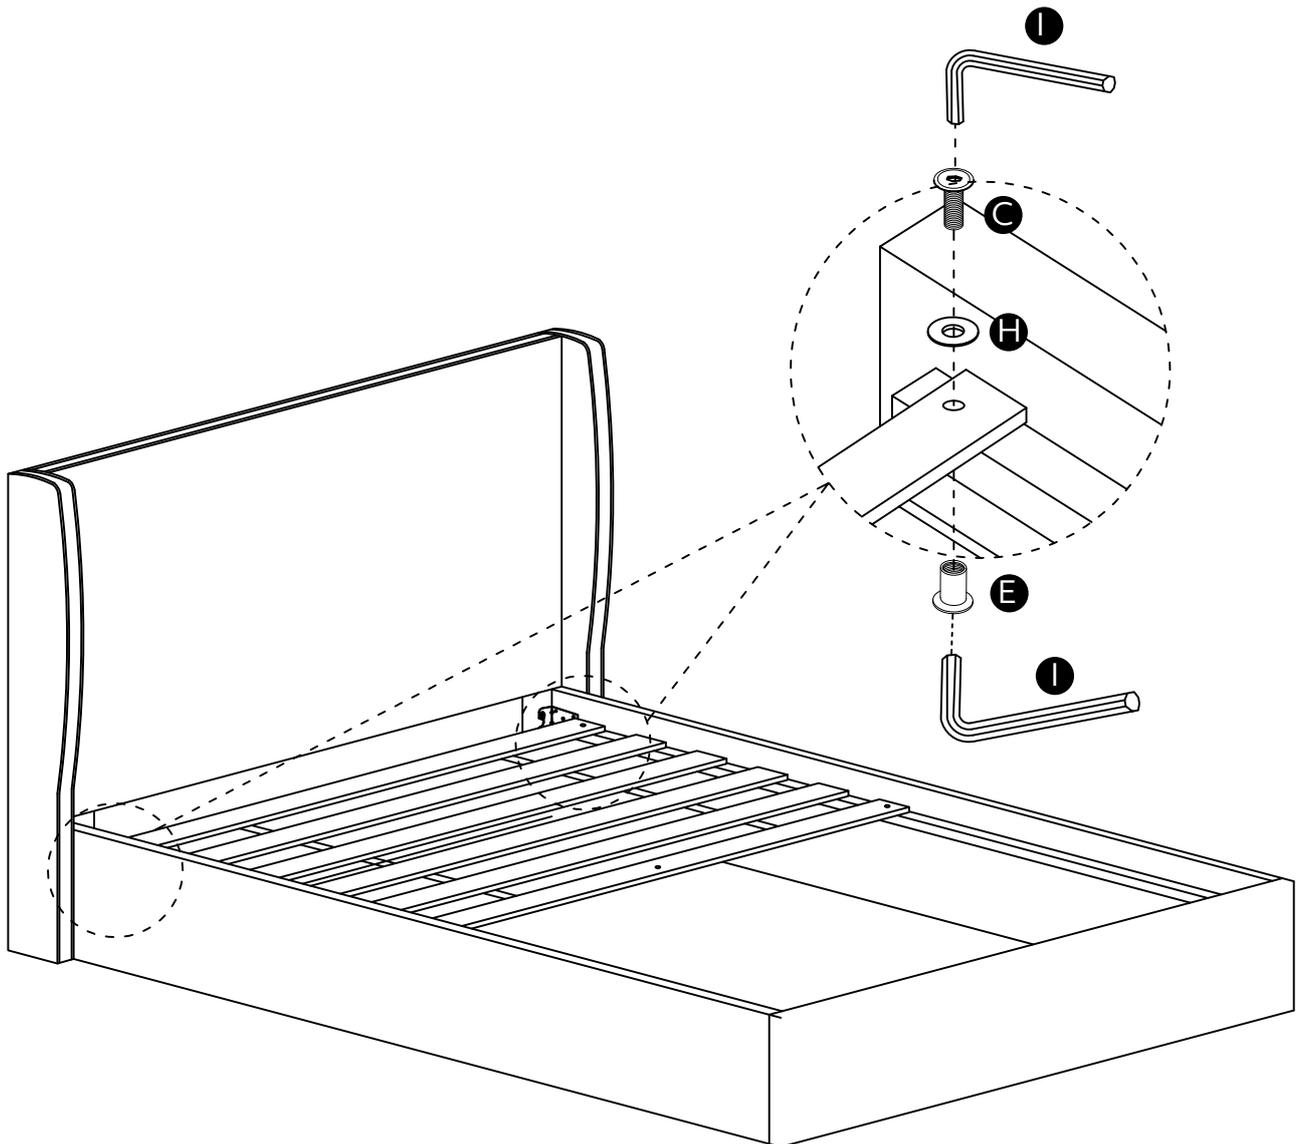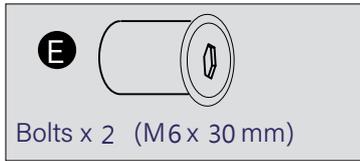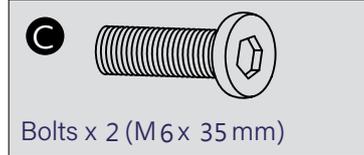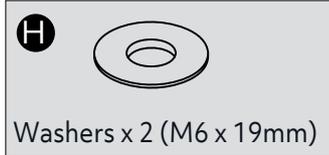

Carefully locate the slats onto the units, attach the slats on support bar of side rails with 2 x (E), 2 x (C) and 2 x (H) washers by using Allen key(I).

# Solid slat assembly






## Step 6

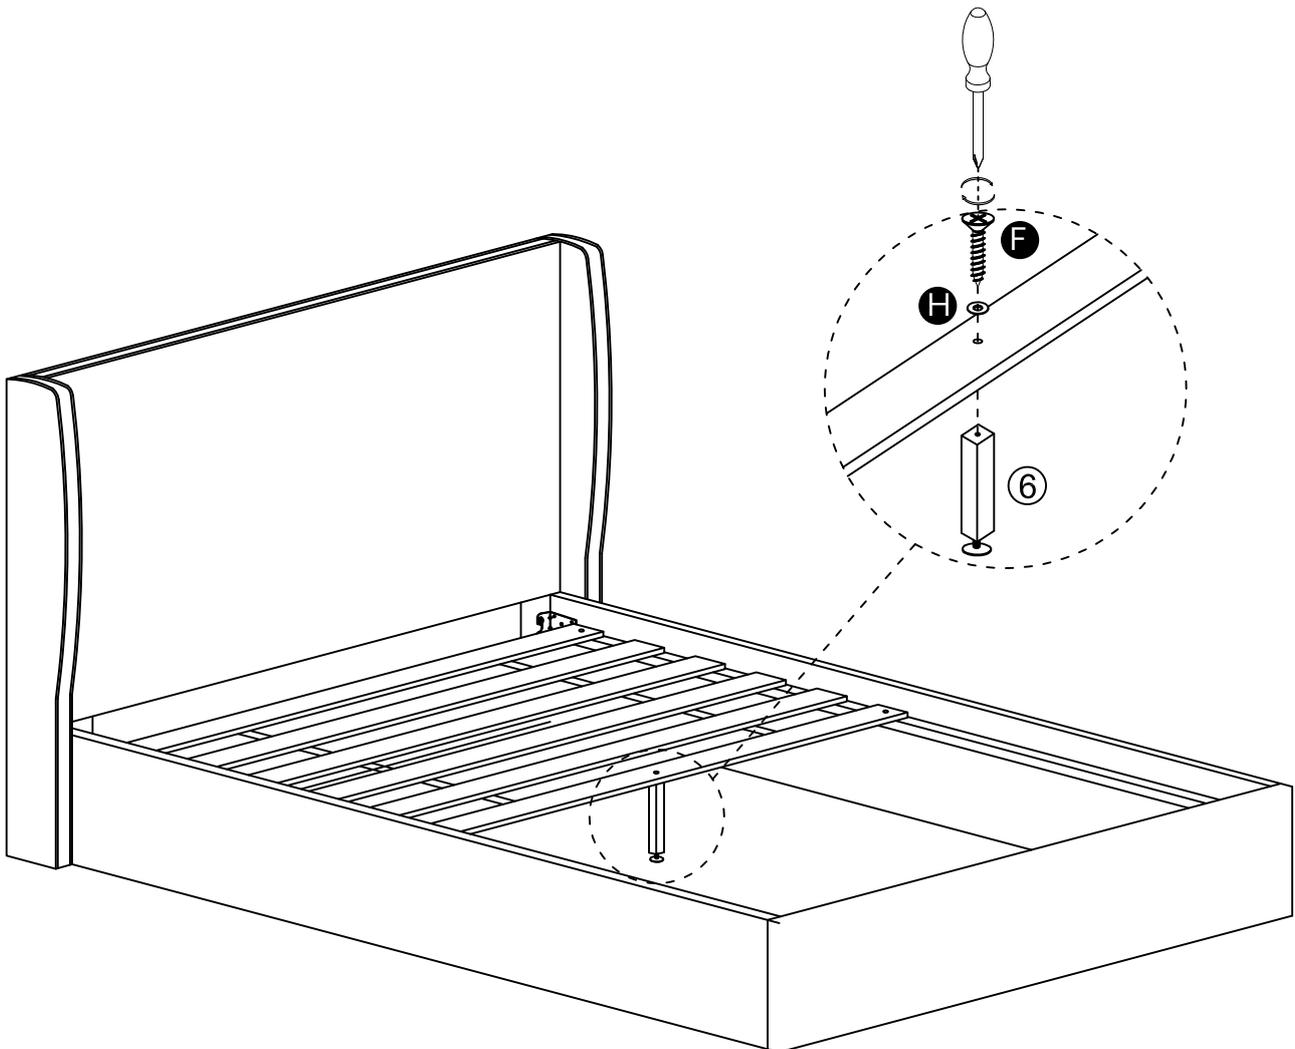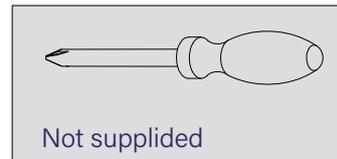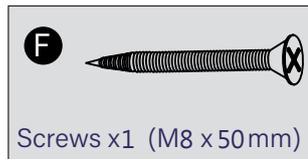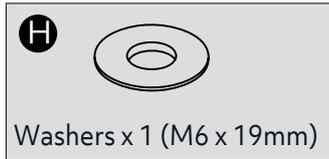

Fit the adjustable support wooden leg (6) with 1 x Screws 50 mm(F) and 1 pc washer(H) to the centre slat there is a pre-drilled hole on the centre slats as shown.

# Solid slat assembly





## Step 7

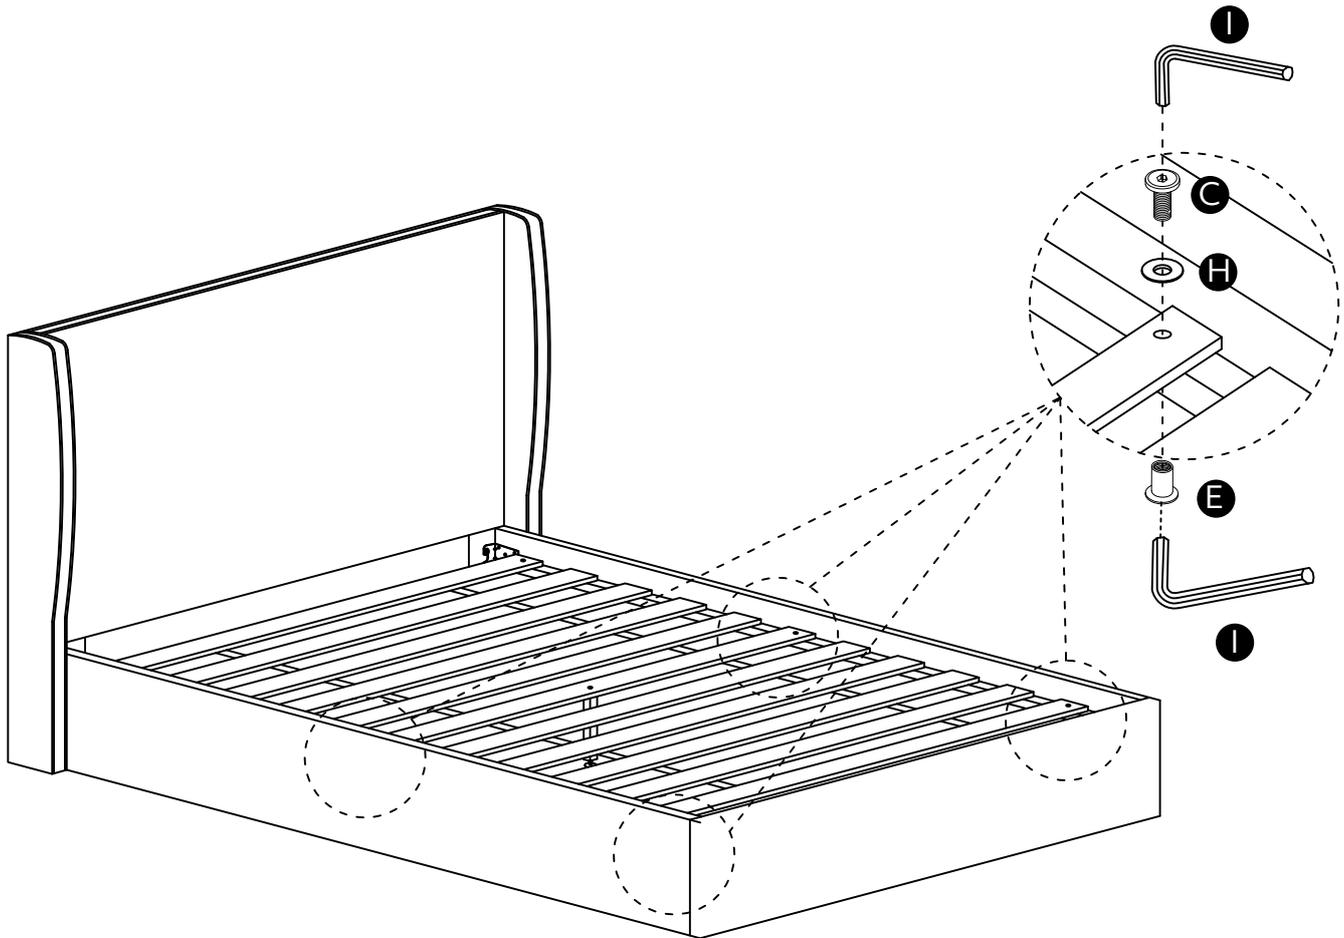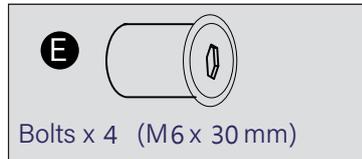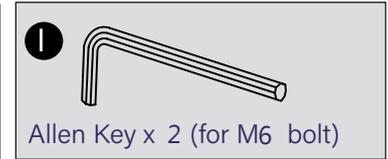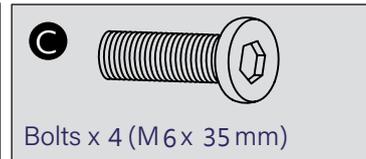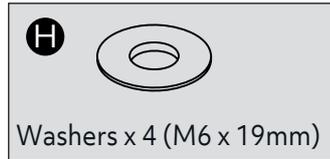

Carefully locate the slats onto the units, attach the slats on support bar of side rails with 4 x (E), 4 x (C) and 4 x (H) washers by using Allen key(I).



# Sprung slat assembly

## Step 8

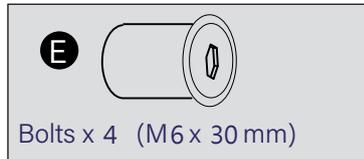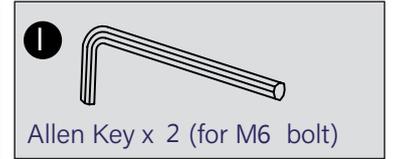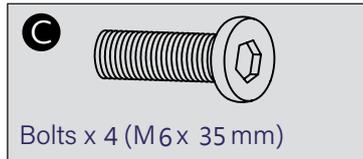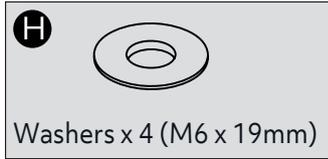

(1) Use the bolt to fix support leg onto The slat frame. Please note that these bolts are to be found inside the slat frame box. Carefully locate the slats onto the unit.

(2) Use bolt (M6x35mm) and JCN nut (M6x30mm) to fix the unit using 4mm allen key.

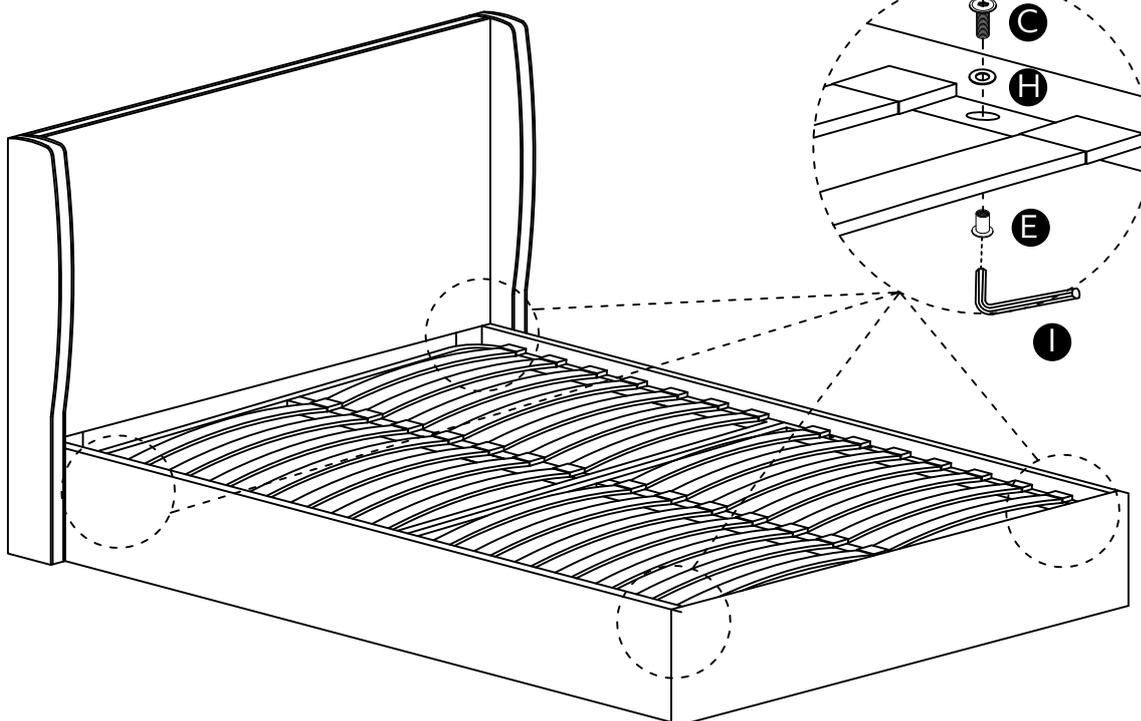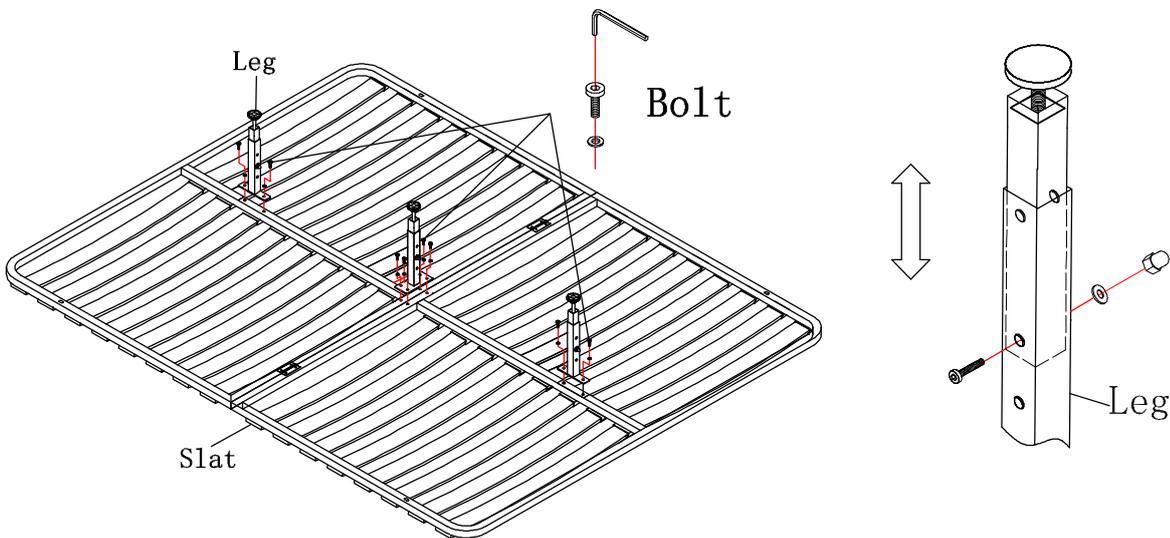

# Care and maintenance

Here are some tips to keep your new furniture in tip-top condition



## Cleaning

To clean your new furniture, we'd advise using a warm damp cloth or if fabric, remove dust using a low suction vacuum cleaner - please do not use abrasive chemicals or bleach as this may damage the product.



## Checking and moving

Periodically we recommend you check that the screws or fixtures haven't been become loose, over time. To move your new furniture, we recommend lifting it where possible, as dragging or pushing it could cause damage to the legs or flooring.



## Wood

Please note each of our wooden pieces are unique, meaning that markings and shade can vary slightly between beds. Over a period of time, the wood might lighten or fade slightly due to light exposure.



## Fabric

Please note depending on the lighting, positioning and surroundings of your room, the shade of the colour can sometimes appear slightly different. Over a period of time, the colour might lighten or fade slightly due to light exposure.



## Metal

Metal tends to be more resilient to everyday wear and tear. We recommend to gently dust your metal furniture and keep it dry to maintain its look.


**Thank you for shopping with us - we hope you have a great night's sleep**

*Sleep well*



# Little dreamers

Keep the little ones entertained while you assemble your new purchase.

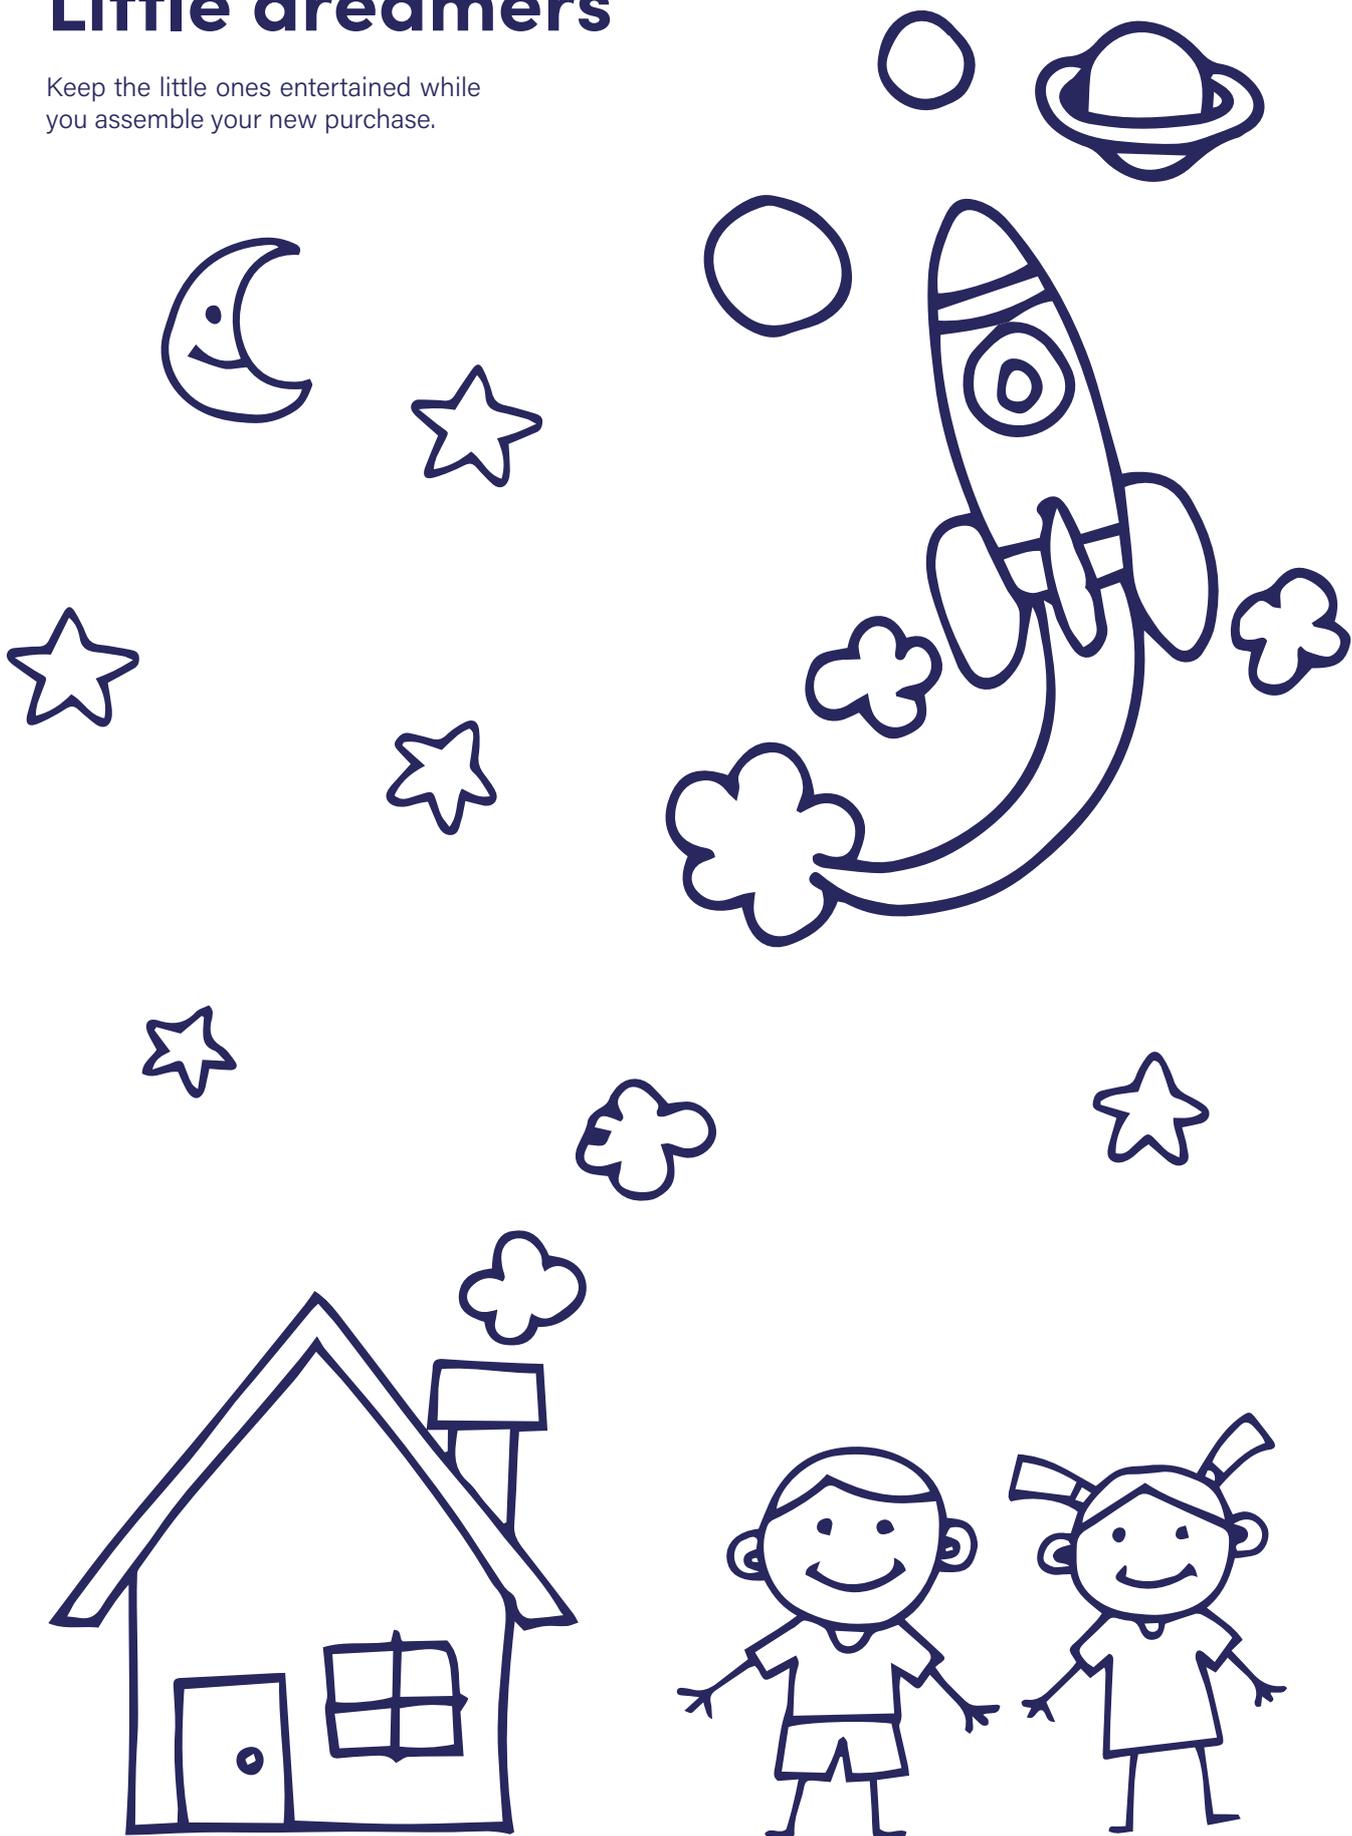



# Dreams

Love your bed

PRODUCED IN CHINA FOR:  
Dreams Limited | Knaves Beech | High Wycombe |  
HP10 9YU [www.dreams.co.uk](http://www.dreams.co.uk)  
Hometime Retail Limited | 6-16 Duncrue Crescent |  
Belfast | Antrim | BT3 9BW [www.dreams.ie](http://www.dreams.ie)