


Perrie bed

-metal slat frame system

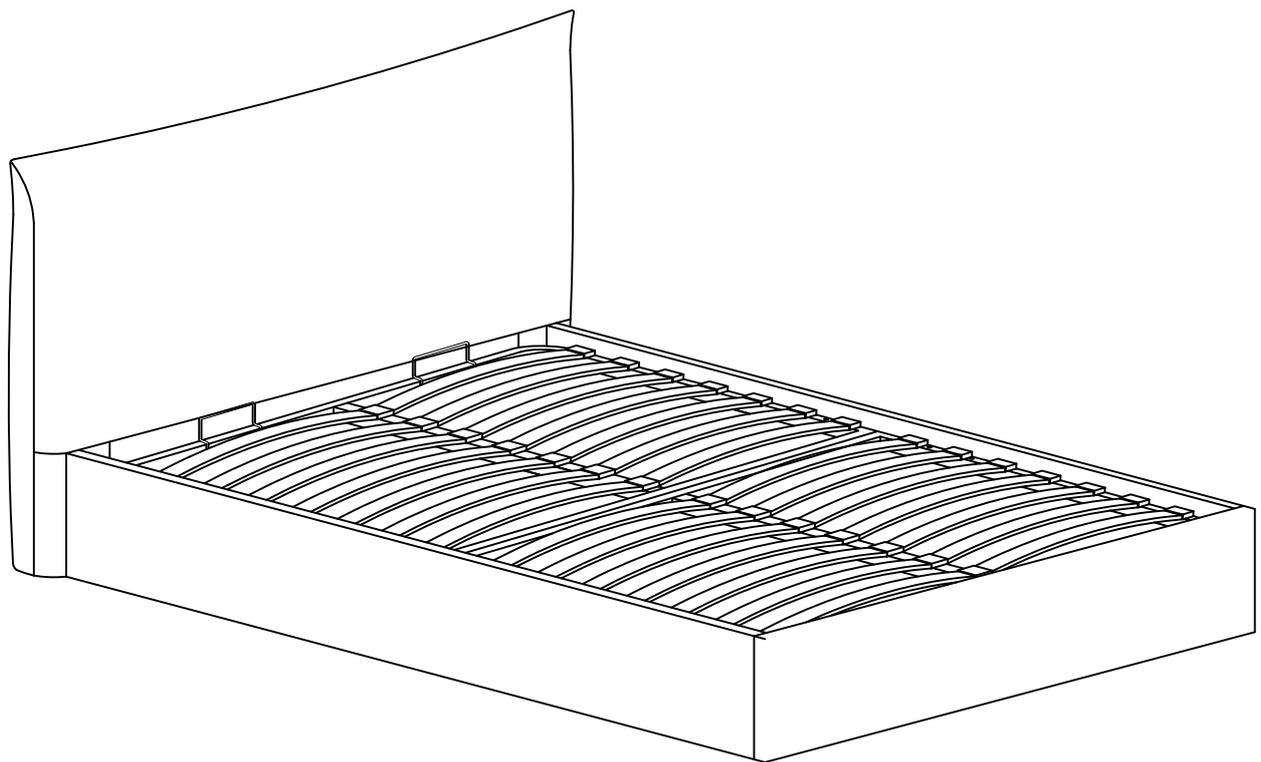

45 minutes approx
assembly time



Two person
assembly



Dreams

Love your bed

Thank you

Hello, thanks for choosing to purchase your bed from Dreams - you're now on your way to your best ever night's sleep. Before you begin building your bed, please take a moment to read through the instructions and make sure that you've got all the relevant parts listed on the following pages.



Assembly tips

Before you begin, it's best to identify all parts and fittings to build your bed. We advise laying these out on the floor to check you have everything, and familiarising yourself before building.



Top tip

We recommend that you build your new bed in the room you'd like it to be located - this will help prevent any risk of damage to your newly built bed whilst moving it.



Safety and care

It's really important to ensure children and animals are kept away from the assembly area, as there are small components used in this bed which could present a choking hazard. All plastic and wrapping materials should also be kept away from children and animals to prevent any risk of suffocation. To keep your little ones busy, there is a colouring page inside the back cover.



Help and support

At Dreams, it's our mission to give the whole nation a great night's sleep - this means that the quality of our products is of utmost importance to us. If there are any issues with your product or any missing parts, please visit our website at www.dreams.co.uk/help



Recycling

Please ensure that packaging is disposed of in a safe and environmentally friendly way, and recycle where possible. Our assembly instructions are printed on recycled paper. Please keep your assembly instructions safe to refer back to in the future.

IMPORTANT OTTOMAN SAFETY WARNINGS


- IMPORTANT – READ CAREFULLY – RETAIN FOR FUTURE REFERENCE
- Ensure the combined bedding and mattress weight is within the recommended weight guidance.
- Adult Operation Only: Not recommended for use by under 12 years old. Please note ease of operation is dependent on height and strength of user.
- Avoid Entrapment: Always lift the bed with the mattress in place, using the handle to lift and lower the base, keeping clear of the mechanism.
- Do not exceed the maximum weight as specified in the table below:



Bed	Bed Size	Min Weight (kg)	Max Weight (kg)
Perrie bed	Double	20	53
	King	20	62

- Fully Open Ottoman: Ensure the ottoman is fully open before accessing the storage area.
- Avoid Hinge Area: Do not reach into the storage area through the hinge mechanism.
- Keep Children and Pets Away: Ensure children and pets stay away from the storage area. Do not stand inside the internal storage area of the bed.
- Maintenance - Regularly inspect your bed to ensure it is functioning correctly.
- Safety Strap/Handle must be positioned in the centre of the bed frame.
- Always use the safety strap/handle to open.
- Keep hands clear of the mechanism when opening or closing the ottoman.
- No children or animals are left unattended when the frame is in the 'up' position.
- Do not overload the internal storage base.
- Before removing the mattress secure the frame to ensure it does not open unexpectedly.
- Do not attempt to lie on the mattress when the ottoman is in the raised position.
- When lifting the ottoman remove all bedding except the fitted sheet.
- Depending on the weight of the mattress, the rising speed will vary so be careful until you get used to the speed.
- NOTE: When fully assembled and the mattress is in position, please raise and lower the ottoman 4 / 5 times to ensure the gas pistons are fully lubricated.

Parts

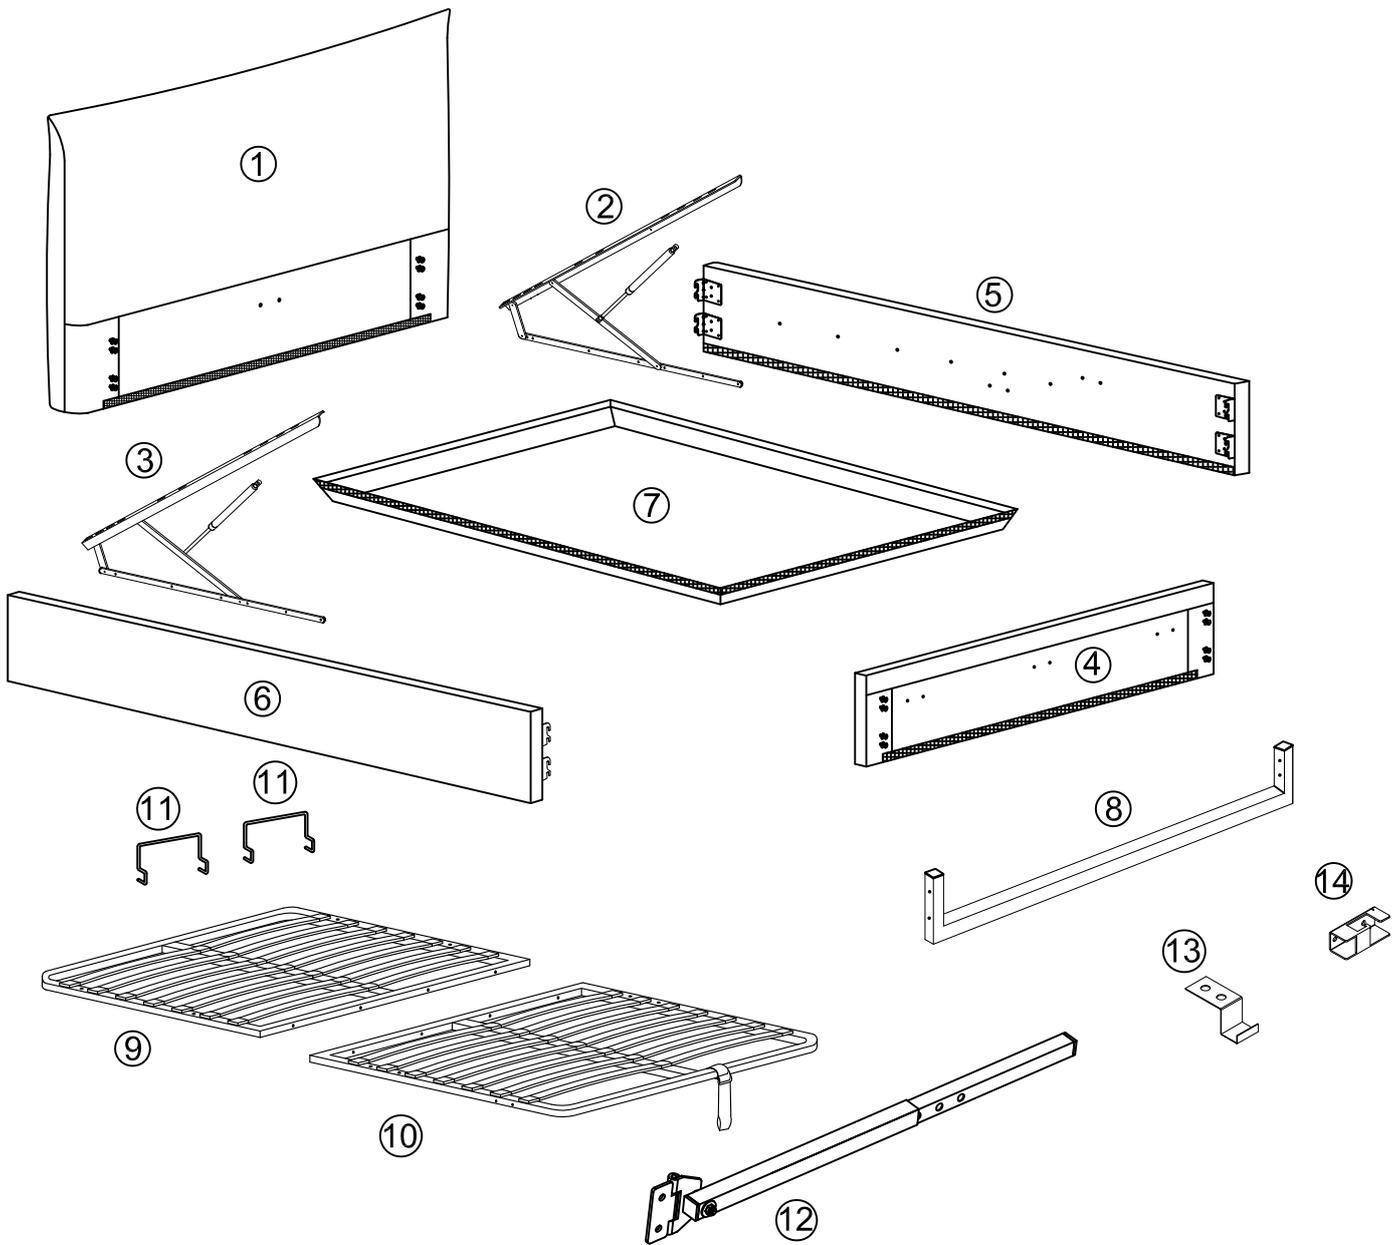


Parts list

Code	Description	Qty	Box	Code	Description	Qty	Box
1.	Headboard	1	1	8.	Centre Supporter	1	3
2.	Support frame- R	1	3	9.	Slat Frame	1	3
3.	Support frame- L	1	3	10.	Slat Frame	1	3
4.	Footboard	1	2	11.	Mattress holder	2	3
5.	Right Side Rail	1	2	12.	Ottoman support bar	1	3
6.	Left Side Rail	1	2	13.	Hanger	1	3
7.	Baseboard	1	3	14.	Brackets	1	3





Fittings

Please check you have all the parts listed below with your product:





PACK A(in box 1)

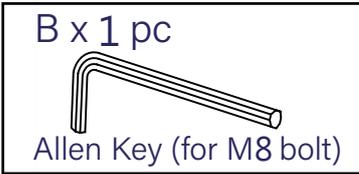







PACK B(in box 3) Hardware for Slat frames


<p>A x 8 pcs</p>  <p>Bolts (M8 x 45mm)</p>	<p>B x 1 pc</p>  <p>Allen Key (for M8 bolt)</p>	<p>C x 4 pcs</p>  <p>Bolts (M8 x 80mm)</p>
<p>E x 12 pcs</p>  <p>Nuts (M8)</p>	<p>F x 1 pc</p>  <p>Spanner (for M8 nut)</p>	<p>D x 24 pcs</p>  <p>Washers (M8 x 19mm)</p>

PACK C(in box 3)
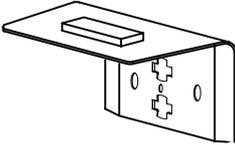
<p>A x 4 pcs</p>  <p>Bolts (M8 x 45mm)</p>	<p>D x 28 pcs</p>  <p>Washers (M8 x 19mm)</p>	<p>G x 28 pcs</p>  <p>Spring Washers (M8)</p>
<p>H x 24 pcs</p>  <p>Bolts (M8 x 25mm)</p>	<p>I x 6 pcs</p>  <p>Brackets</p>	

PACK D(in box 3) Hardware for ottoman support bar
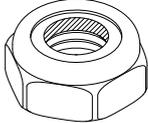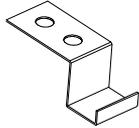
<p>E x 2 pcs</p>  <p>Nuts (M8)</p>	<p>J x 2 pcs</p>  <p>Bolts (M8 x 40mm)</p>	<p>K x 1 pc</p>  <p>M8 Bolt</p>	<p>L x 4 pcs</p>  <p>Bolts (M8 x 20mm)</p>	<p>13. Hanger x 1</p> 	<p>14. Brackets x 1</p> 
---	---	--	---	---	---



Tools required

Please check you have all these below







Tape measure




Cross head screwdriver

Step 1

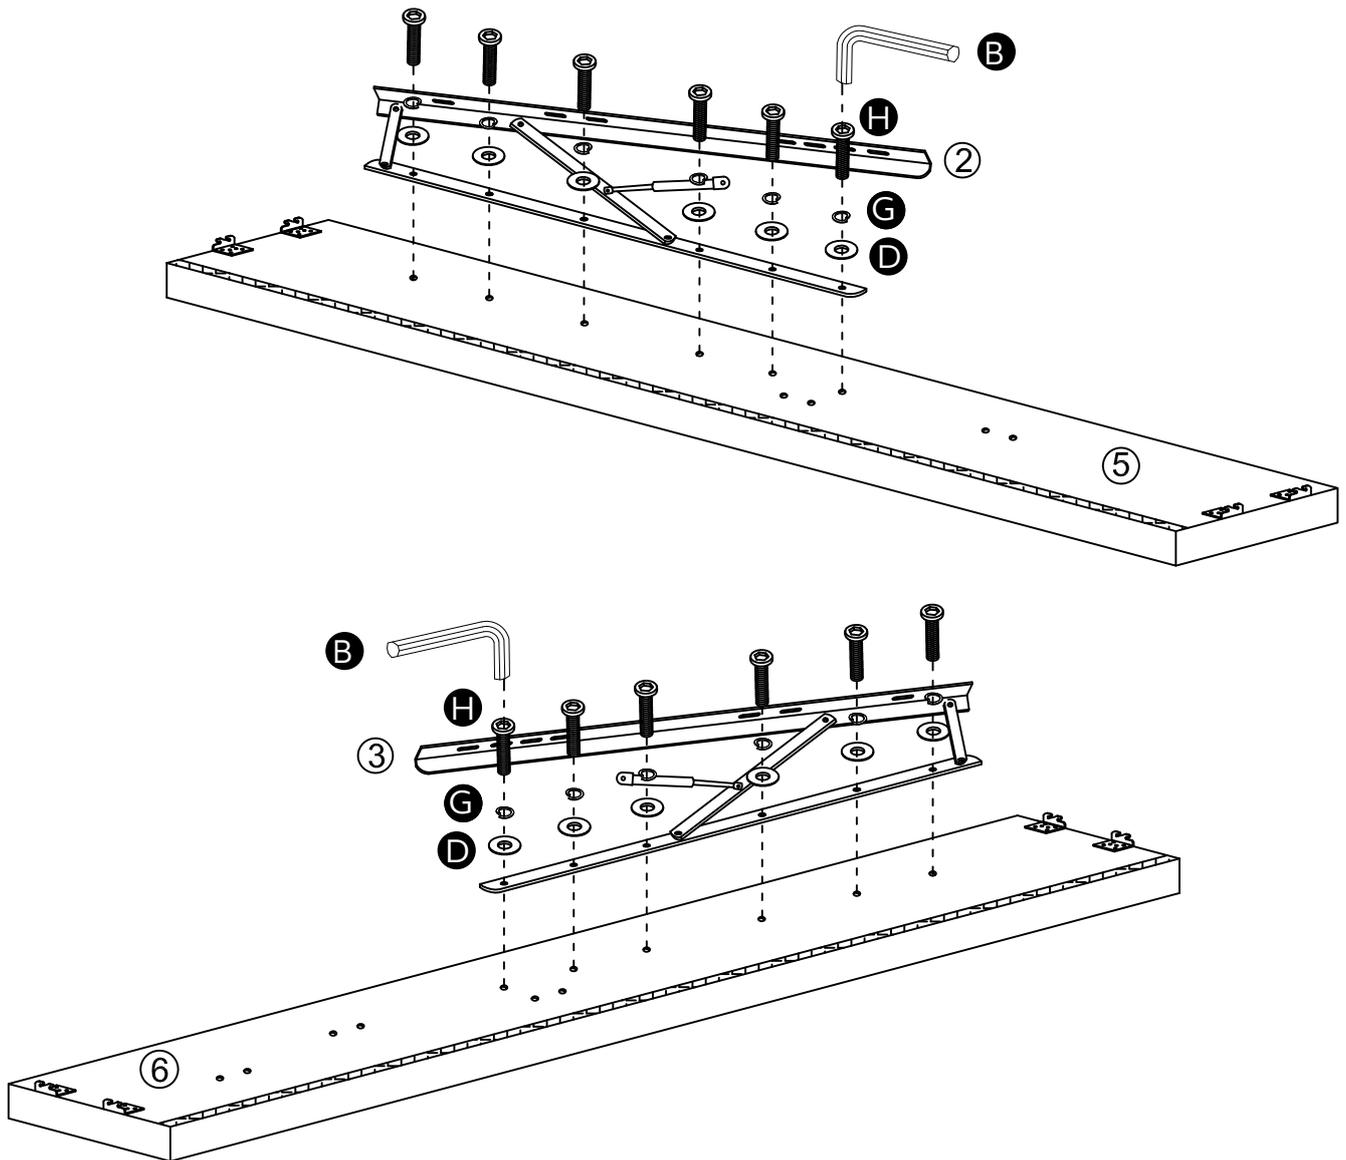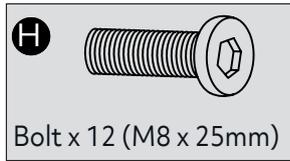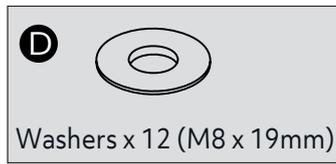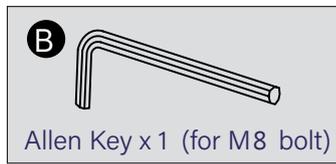


Attach Support frame (2 and 3) to side rail (5 and 6) with 12 x bolts 25 mm (H) and 12 x washers (D), 12x spring washers (G) by allen key (B) as shown.

Step 2

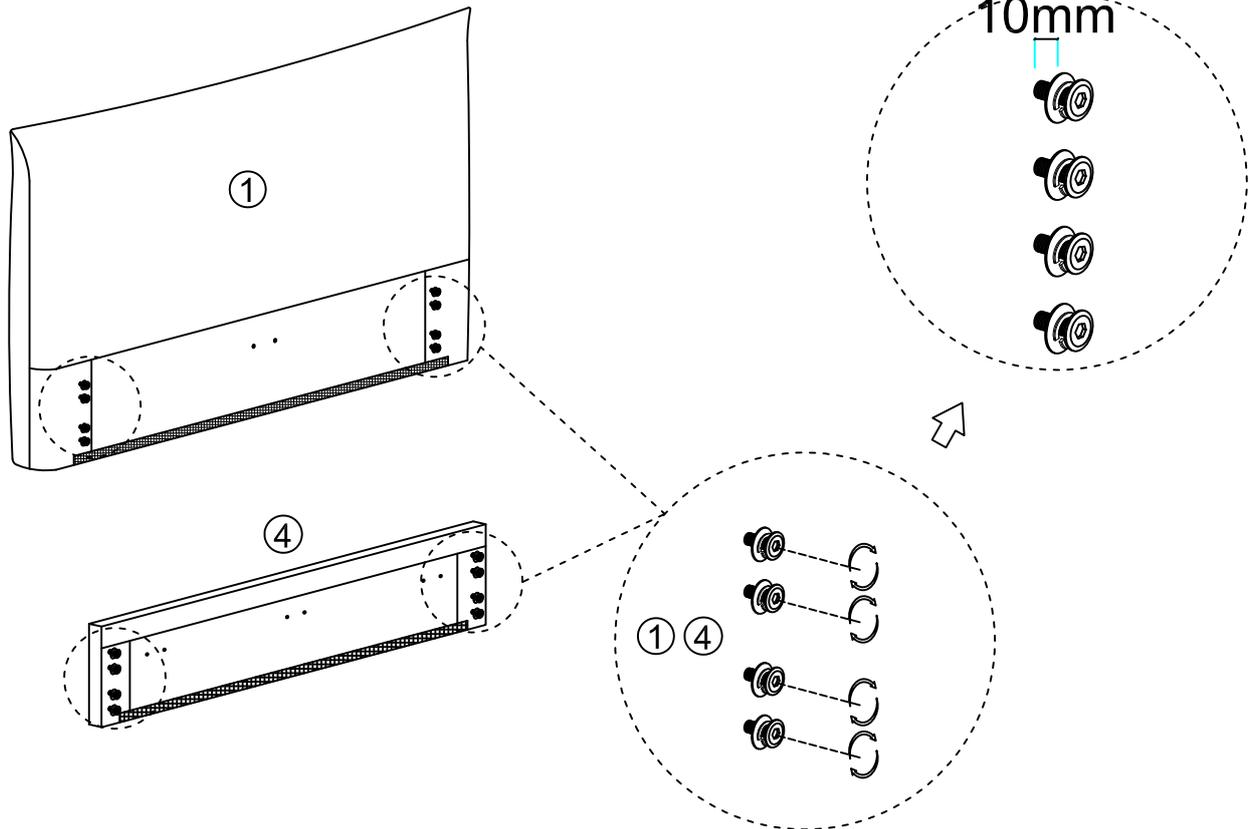



Untie all bolts from Headboard/Footboard (1 and 4) and keep 10mm distance as in the diagram.

Step 3

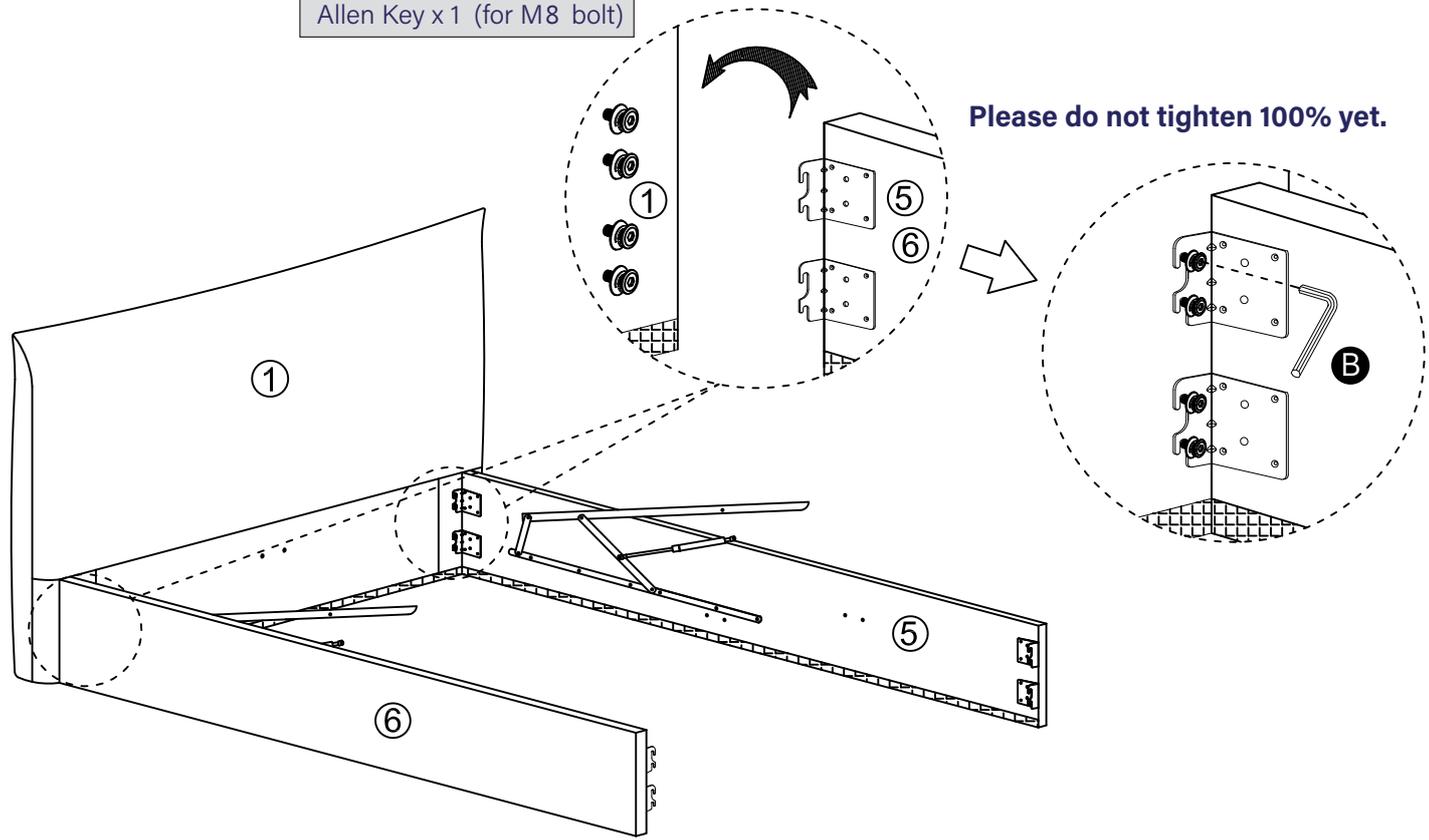





Attach side rails (5 and 6) to headboard (1) by allen key (B) as shown.

Step 4

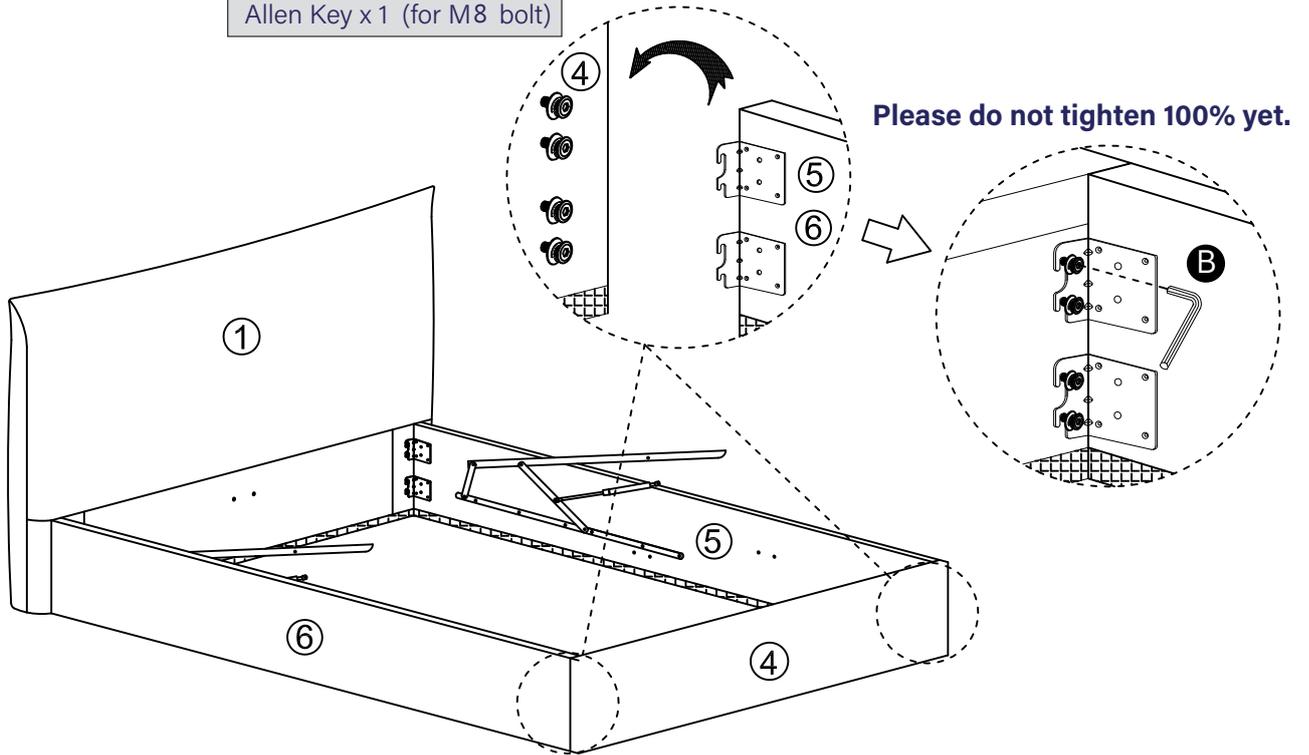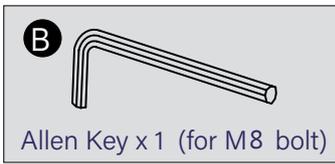







Attach side rails (5 and 6) to footboard (4) by allen key (B) as shown.

Step 5

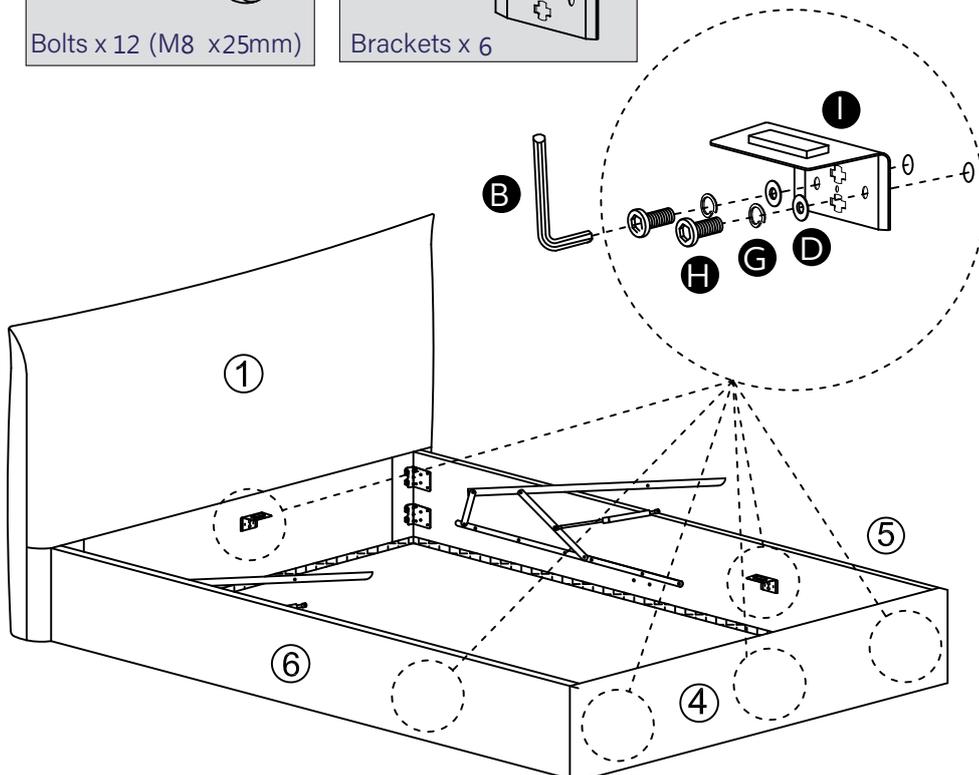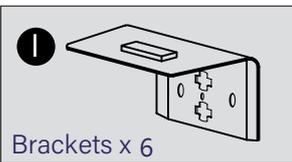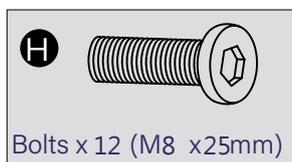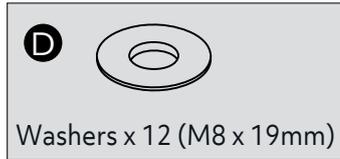


Attach 6 x brackets (I) to the headboard (1), side rails (5 and 6) and footboard (4) with 12 x bolts 25 mm (H) and 12x washers (D), 12x spring washers (G) by using allen key (B).

Step 6

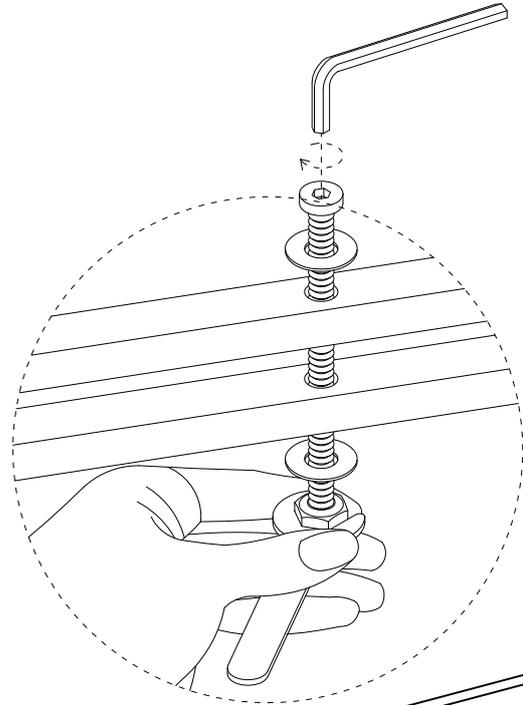
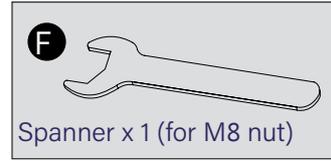
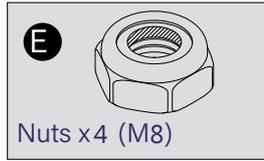
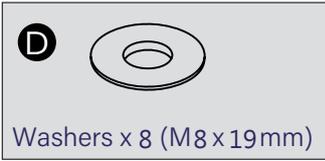
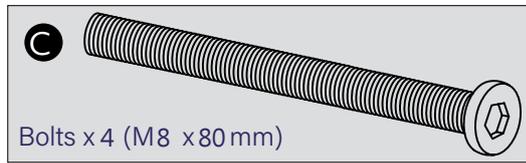
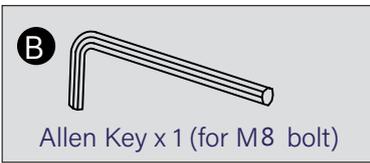


Fix the nut (E) at one end of bolt (C) by using spanner (F), then tighten the bolt (C) by using allen key (B).



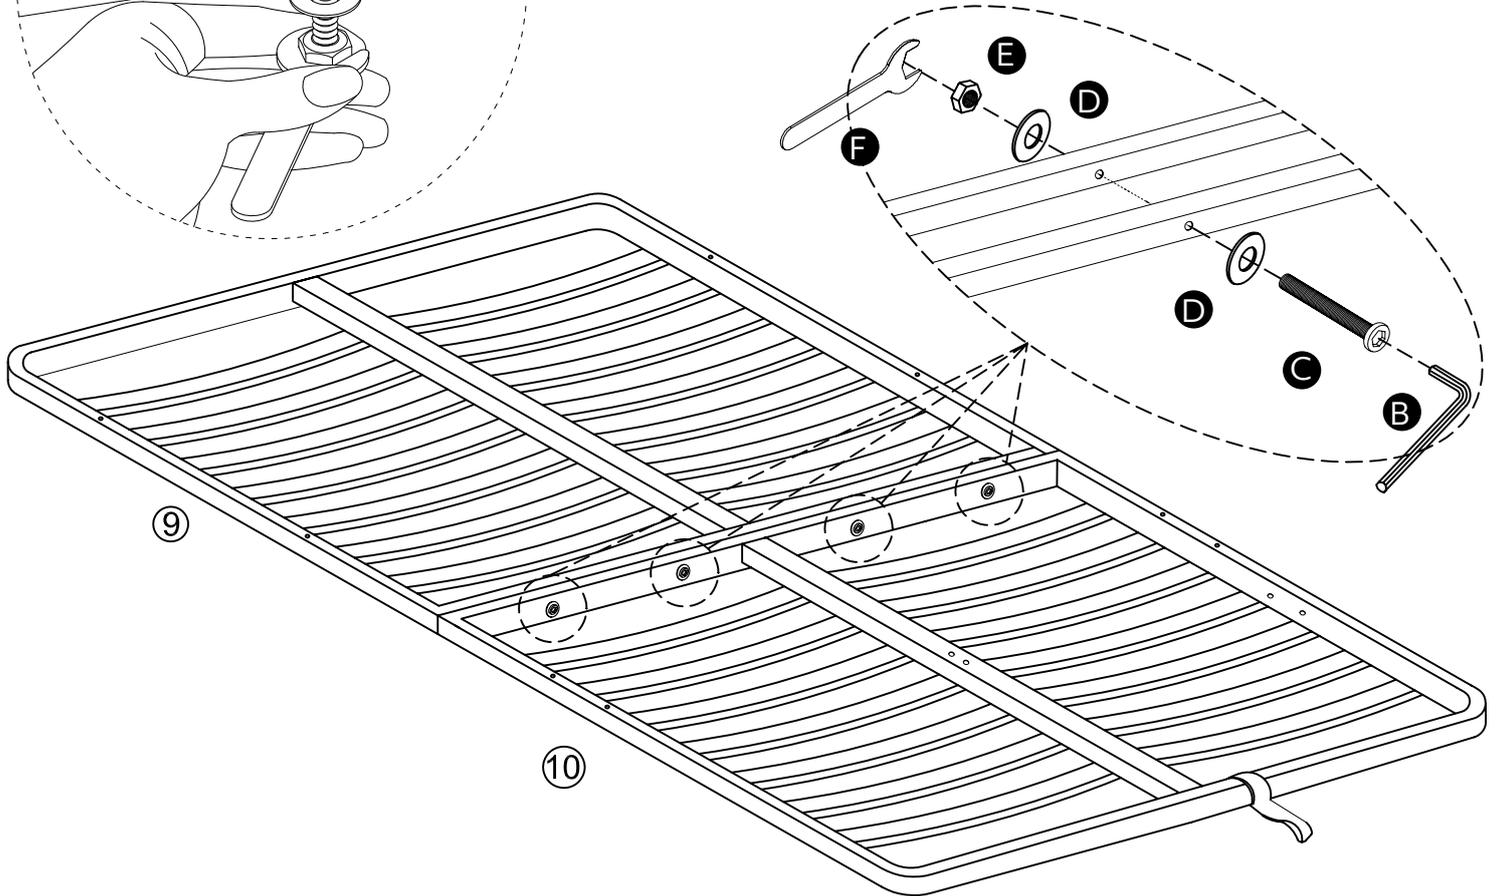


Tighten both slat frame (9 and 10) together with 4 x bolts 80mm (C), 8 x washers (D) and 4 x nuts (E) by using spanner (F) and allen key (B).

Step 7

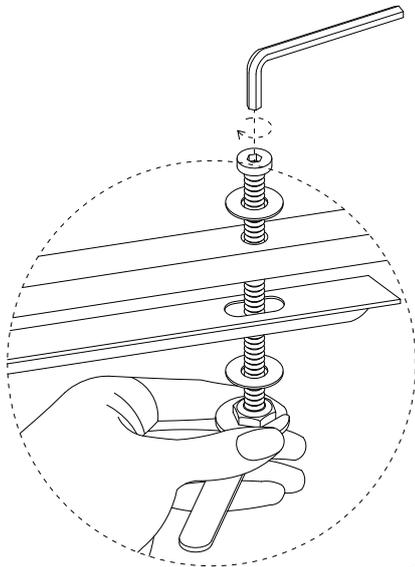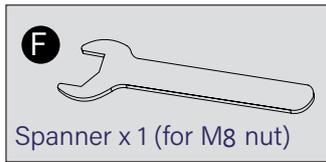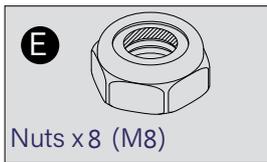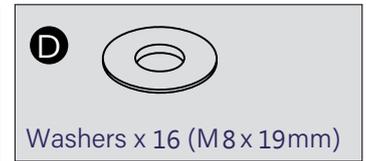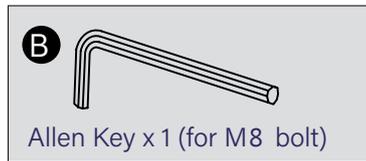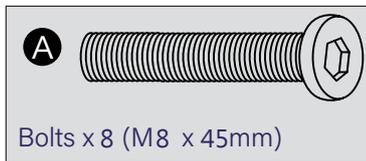

Fix the nut (E) at one end of bolt (A) by using spanner (F), then tighten the bolt (A) by using allen key (B).

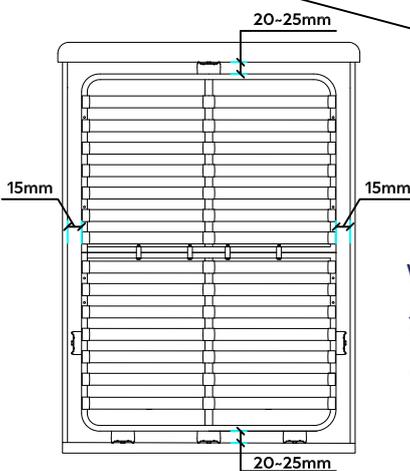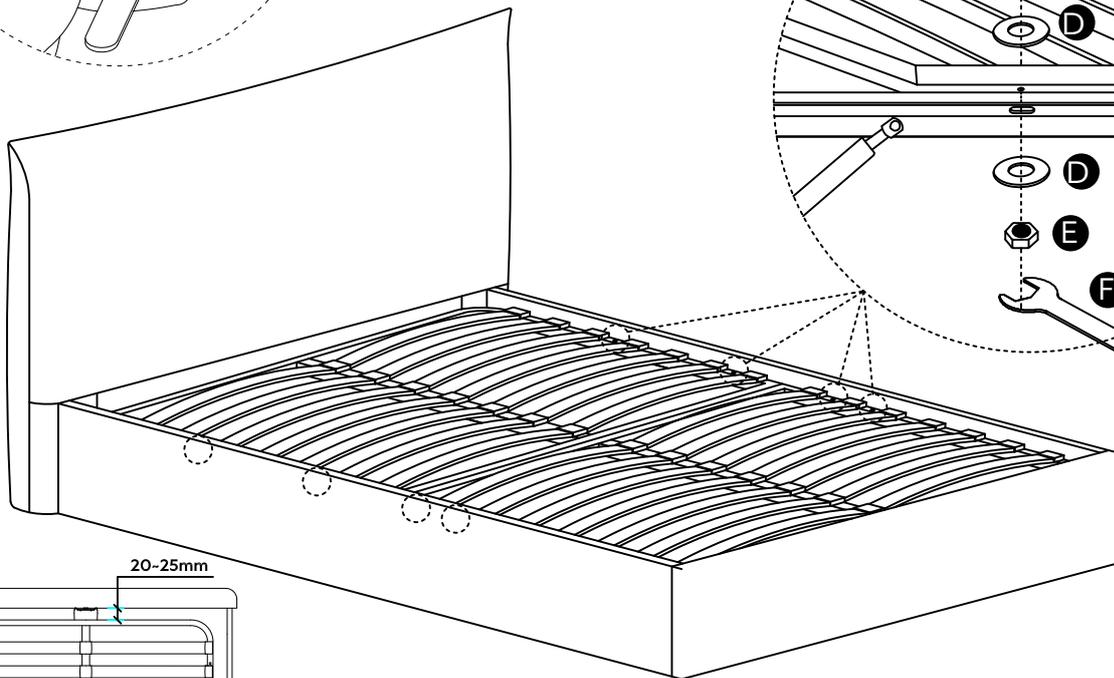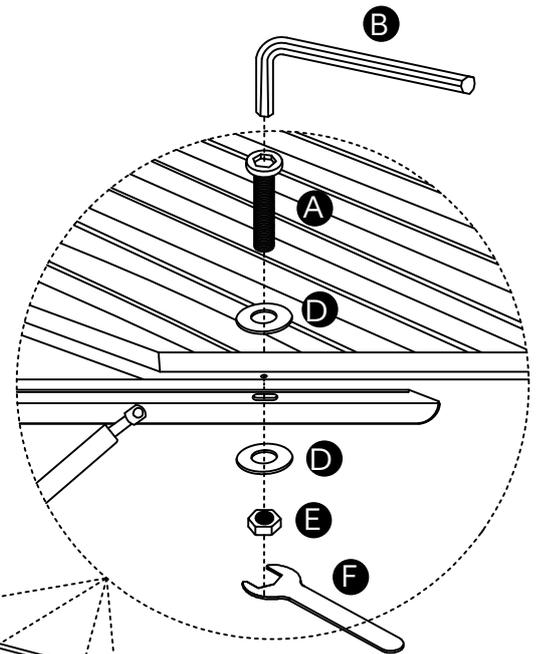


We suggest to assemble the slat frame in the middle position of the bed and try to keep 15mm distance on both side rails and keep 20~25mm distance on headboard and footboard need to be equal distance.

With help from your assistant, lift slat frame (9 and 10) onto slat frame support bars aligning first set of holes on the support bars (nearest to headboard). Using 8 x bolts 45mm (A), 16 x washers (D) and 8 x nuts (E) by allen key (B) and spanner (F).


Ensure slat frame (9 and 10) is central with even gaps all around before fully tightening all bolts.

Step 8

Un-tie each mechanism, take out the transit protection block
Tilt the arms upwards slat frame support bar.
Tighten all nuts and washers on the arms.



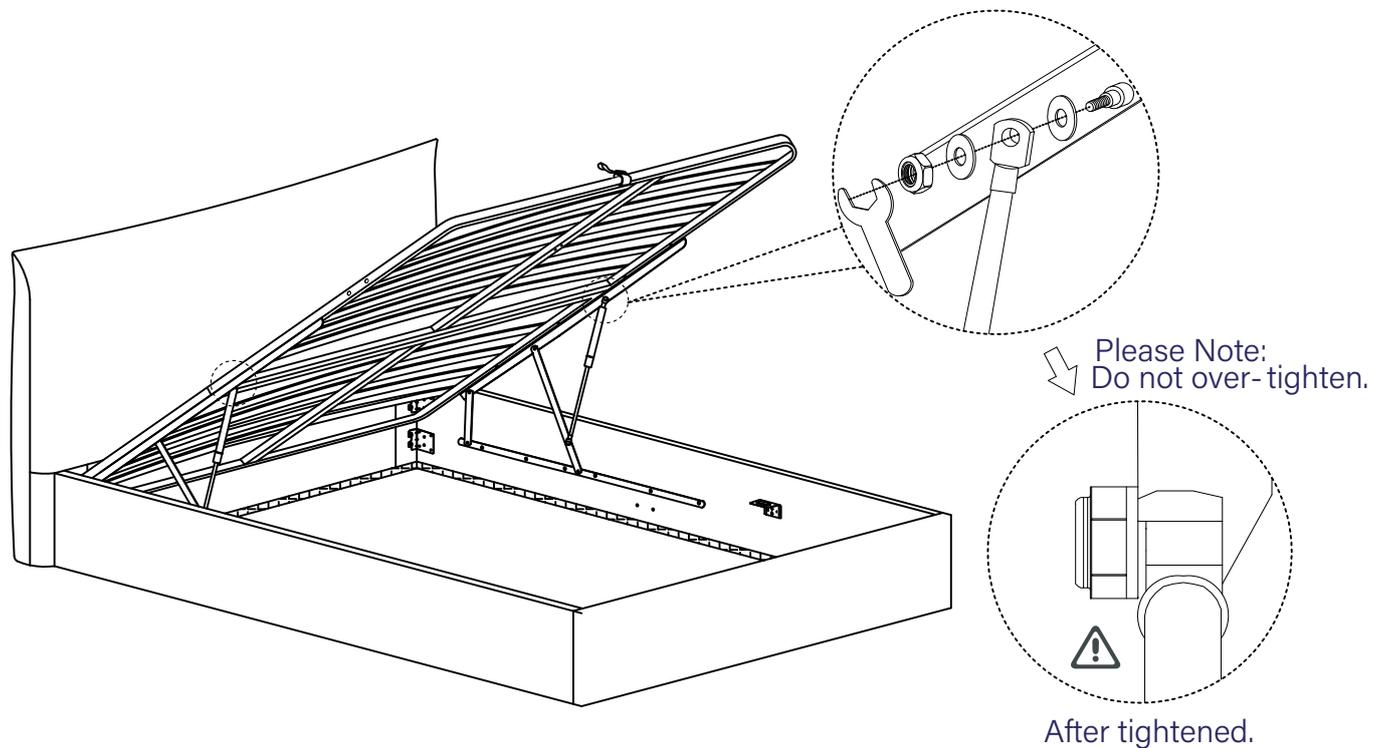


Step 9

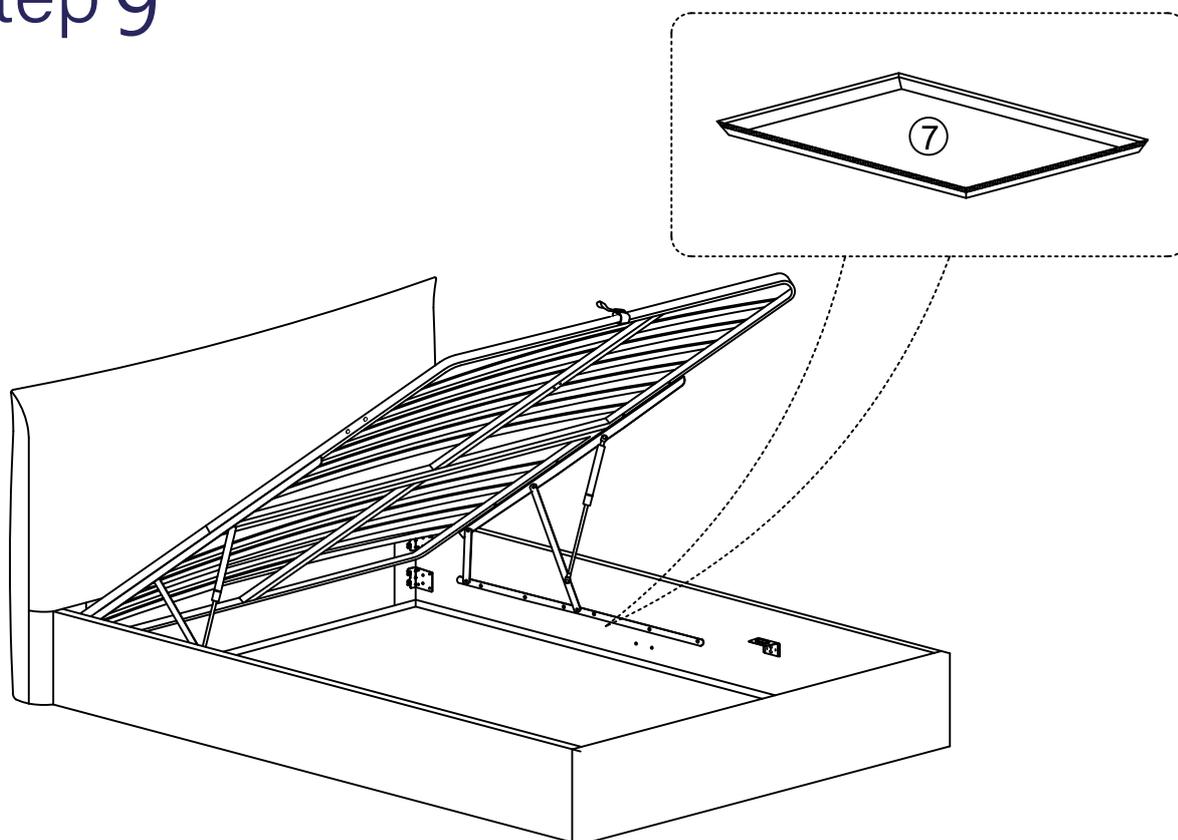

Put the baseboard (7) inside of bed. Attach the velcro to the four edges of frame.

Step 10

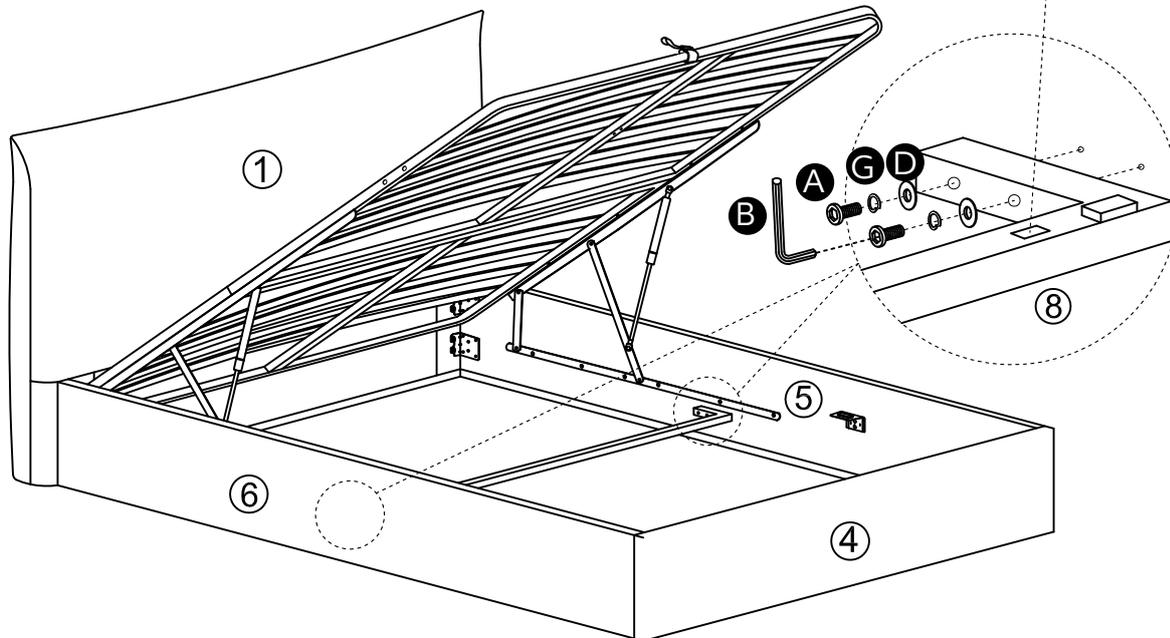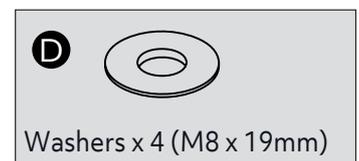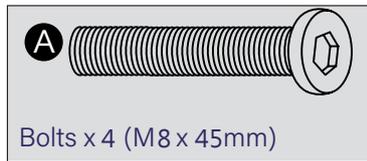


Tighten the center supporter(8) to the side rails (5 and 6) with 4 x bolts 45 mm (A) and 4 x washers (D), 4 x spring washers (G) by using allen key (B).

Step 11


B 
Allen Key x 1 (for M8 bolt)


E 
Nuts x 2 (M8)

F 
Spanner x 1 (for M8 nut)

J 
Bolts x 2 (M8 x 40mm)



K 
M8 x 1 Bolt

L 
Bolts x 4 (M8 x 20mm)

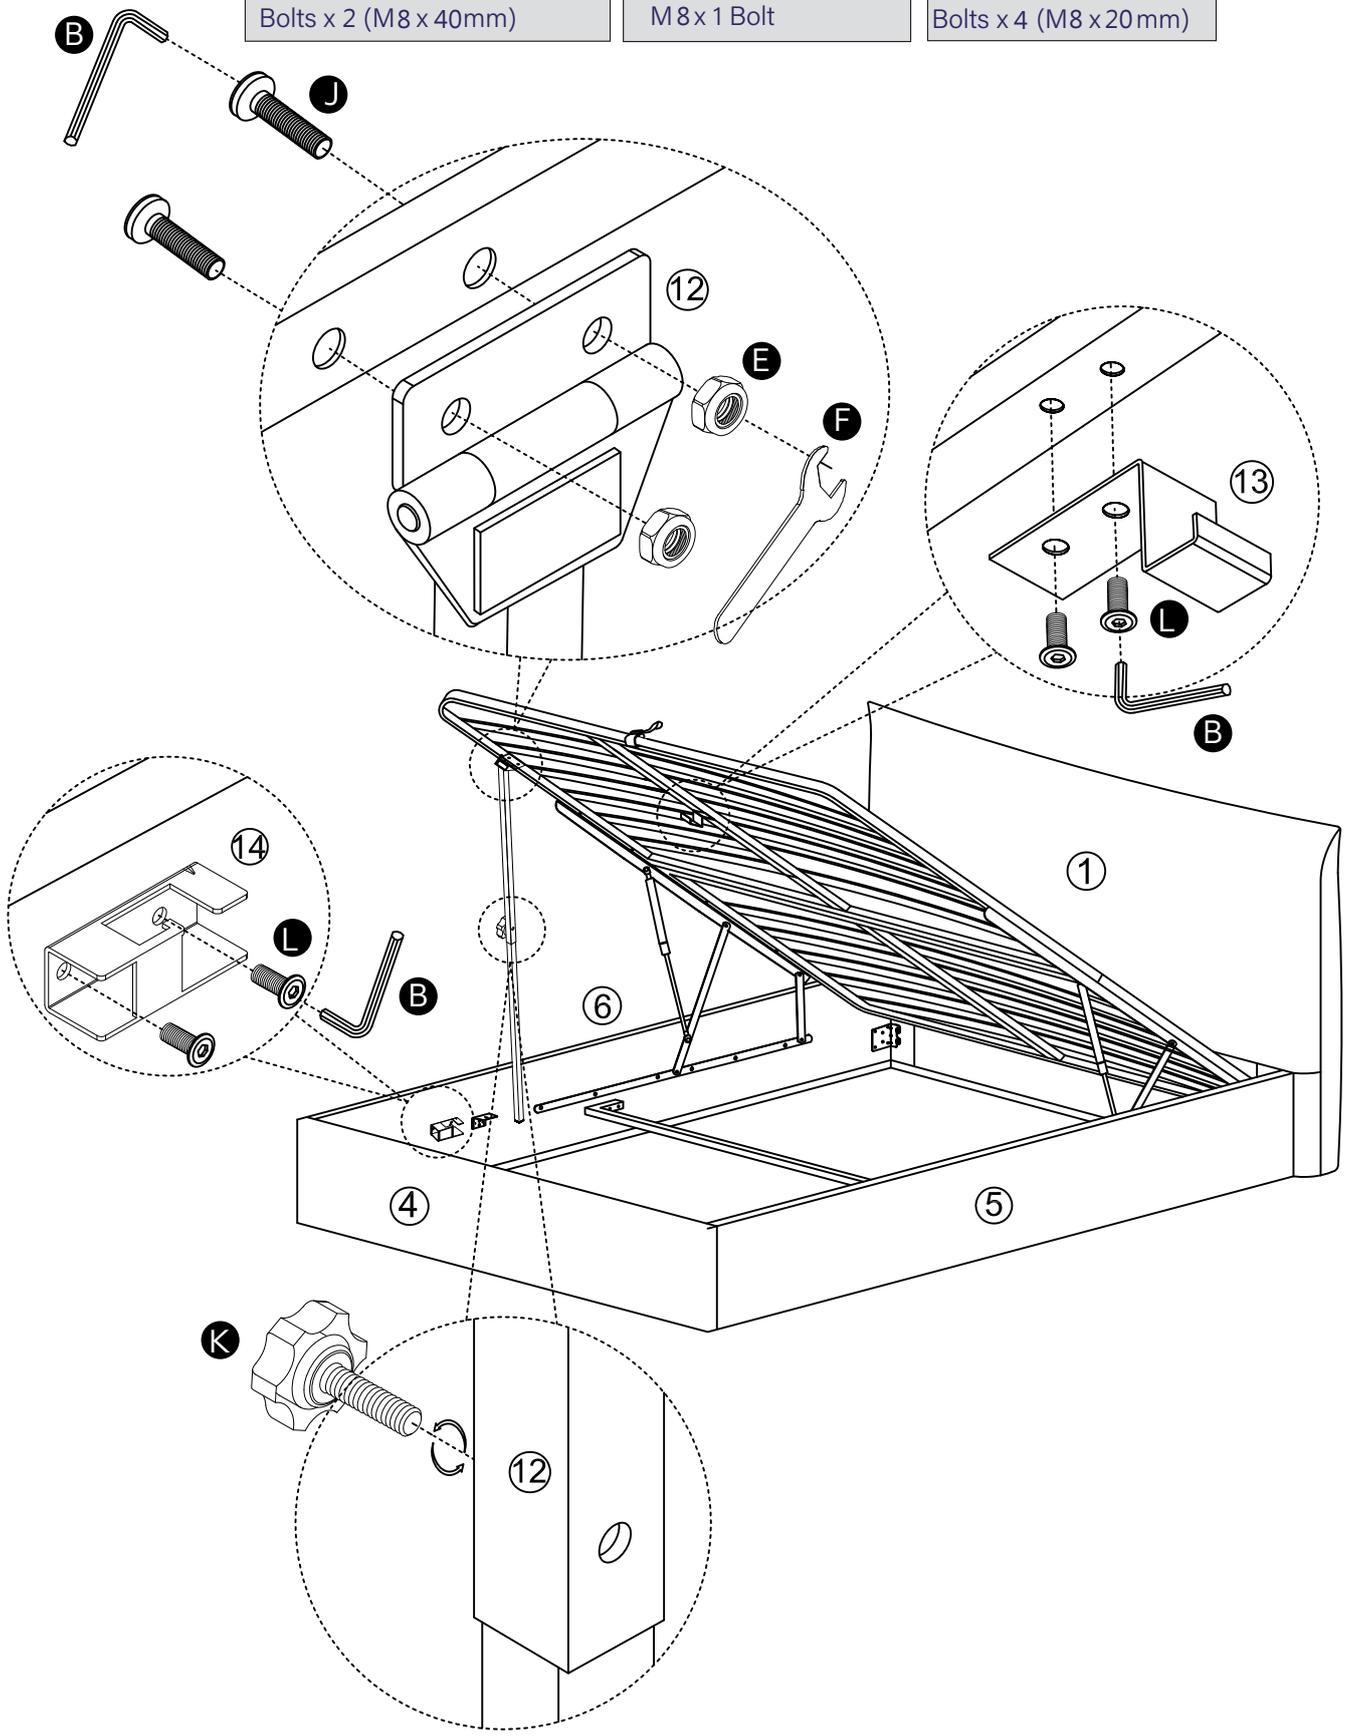


The bracket (14) must be assembled on the left side rail (6).

Step 12

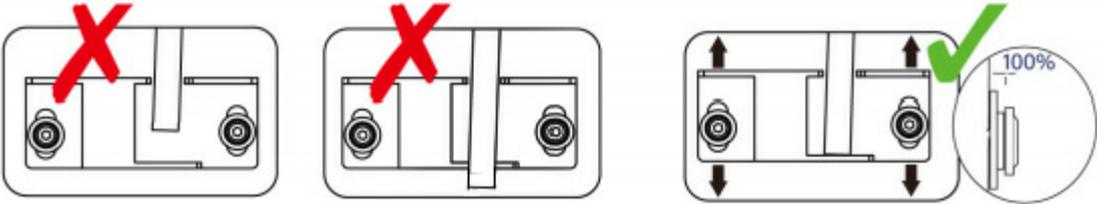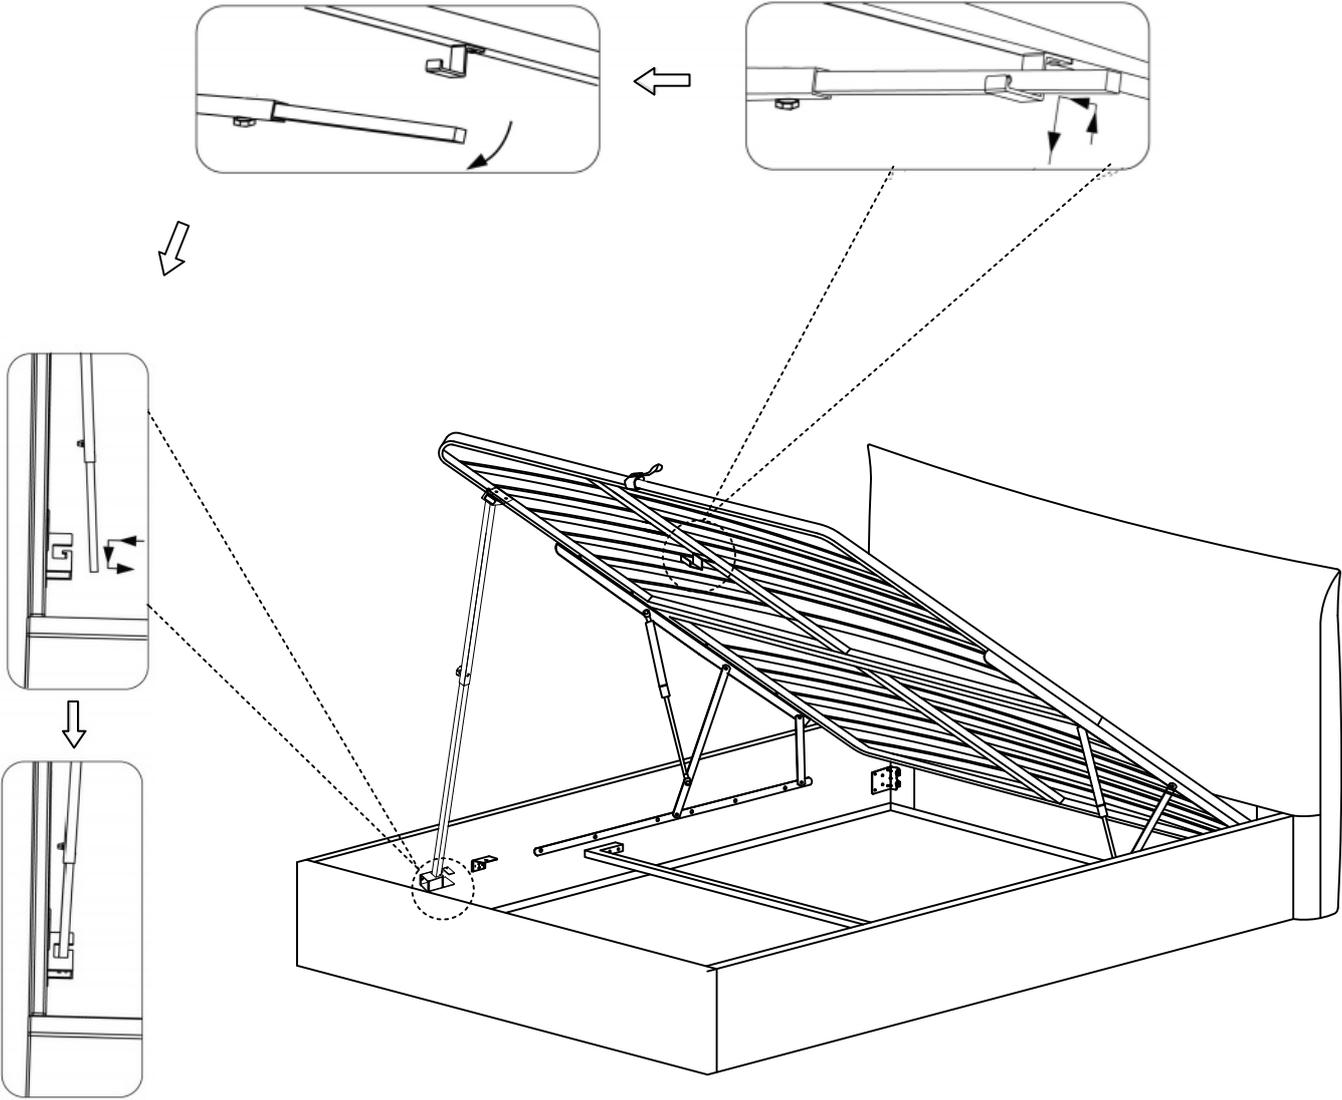

Step 13

Put mattress holders (11) on the slat frame shown in the diagram.

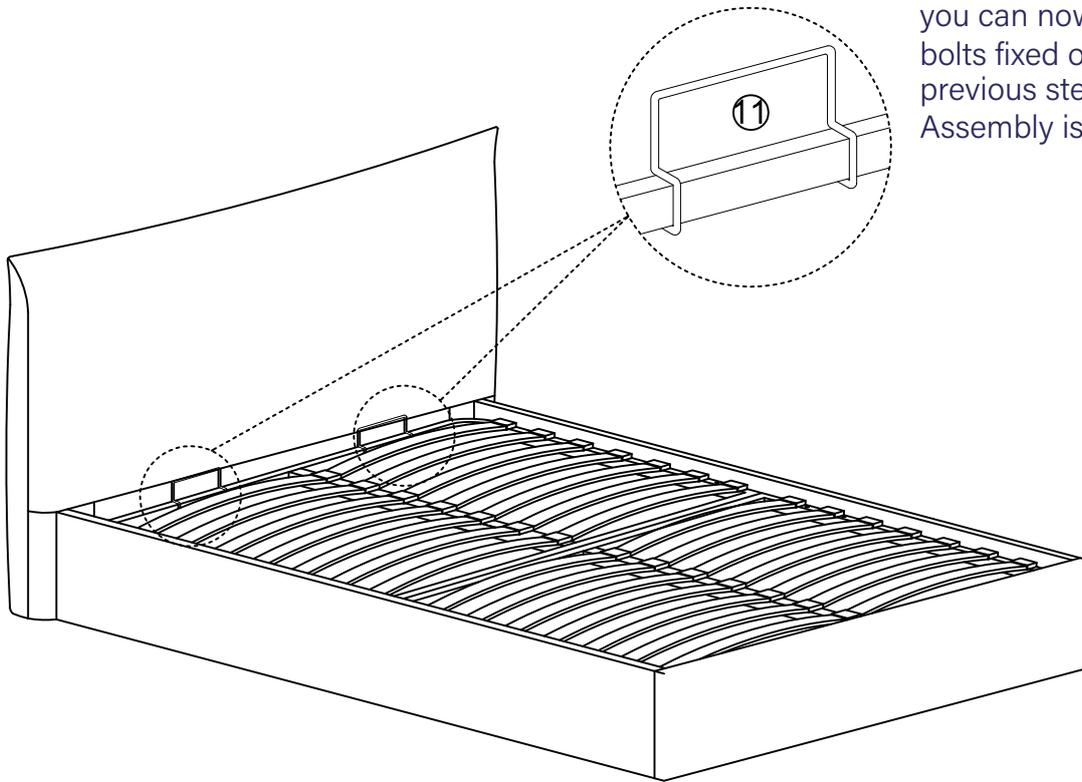

you can now fully tighten all bolts fixed on the previous steps. Assembly is complete.


Depending on the weight of the mattress, the rising speed will vary so be careful until you get used to the speed.

Always use the strap to lift or lower the frame - keep fingers well away from the moving parts.

NOTE: When fully assembled and the mattress is in position, please raise and lower the ottoman 4 / 5 times to ensure the gas pistons are fully lubricated.

IMPORTANT OTTOMAN SAFETY WARNINGS

- IMPORTANT – READ CAREFULLY – RETAIN FOR FUTURE REFERENCE
- Ensure the combined bedding and mattress weight is within the recommended weight guidance.
- Adult Operation Only: Not recommended for use by under 12 years old. Please note ease of operation is dependent on height and strength of user.
- Avoid Entrapment: Always lift the bed with the mattress in place, using the handle to lift and lower the base, keeping clear of the mechanism.
- Do not exceed the maximum weight as specified in the table below:

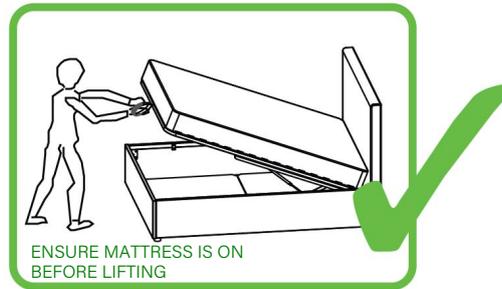

Bed	Bed Size	Min Weight (kg)	Max Weight (kg)
Perrie bed	Double	20	53
	King	20	62

- Fully Open Ottoman: Ensure the ottoman is fully open before accessing the storage area.
- Avoid Hinge Area: Do not reach into the storage area through the hinge mechanism.
- Keep Children and Pets Away: Ensure children and pets stay away from the storage area. Do not stand inside the internal storage area of the bed.
- Maintenance - Regularly inspect your bed to ensure it is functioning correctly.
- Safety Strap/Handle must be positioned in the centre of the bed frame.
- Always use the safety strap/handle to open.
- Keep hands clear of the mechanism when opening or closing the ottoman.
- No children or animals are left unattended when the frame is in the 'up' position.
- Do not overload the internal storage base.
- Before removing the mattress secure the frame to ensure it does not open unexpectedly.
- Do not attempt to lie on the mattress when the ottoman is in the raised position.
- When lifting the ottoman remove all bedding except the fitted sheet.
- Depending on the weight of the mattress, the rising speed will vary so be careful until you get used to the speed.
- NOTE: When fully assembled and the mattress is in position, please raise and lower the ottoman 4 / 5 times to ensure the gas pistons are fully lubricated.

Care and maintenance

Here are some tips to keep your new furniture in tip-top condition



Cleaning

To clean your new furniture, we'd advise using a warm damp cloth or if fabric, remove dust using a low suction vacuum cleaner - please do not use abrasive chemicals or bleach as this may damage the product.



Checking and moving

Periodically we recommend you check that the screws or fixtures haven't been become loose, over time. To move your new furniture, we recommend lifting it where possible, as dragging or pushing it could cause damage to the legs or flooring.



Wood

Please note each of our wooden pieces are unique, meaning that markings and shade can vary slightly between beds. Over a period of time, the wood might lighten or fade slightly due to light exposure.



Fabric

Please note depending on the lighting, positioning and surroundings of your room, the shade of the colour can sometimes appear slightly different. Over a period of time, the colour might lighten or fade slightly due to light exposure.



Metal

Metal tends to be more resilient to everyday wear and tear. We recommend to gently dust your metal furniture and keep it dry to maintain its look.

Thank you for shopping with us - we hope you have a great night's sleep

Sleep well



Little dreamers

Keep the little ones entertained while you assemble your new purchase.





Dreams

Love your bed

PRODUCED IN CHINA FOR:
Dreams Limited | Knaves Beech | High Wycombe |
HP10 9YU www.dreams.co.uk
Hometime Retail Limited | 6-16 Duncrue Crescent |
Belfast | Antrim | BT3 9BW www.dreams.ie