


Dreams

Dreams OWNERS MANUAL

SLEEPMOTION 100i SINGLE SIZE

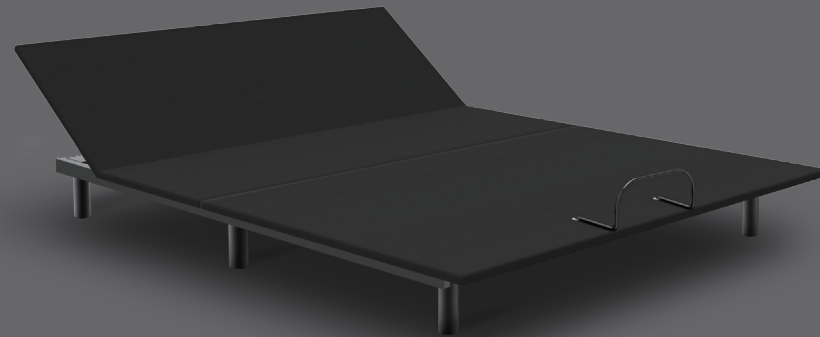

THANK YOU

Thank you for choosing the Sleepmotion 100i bed from Dreams. You have made a sound investment in our high quality Sleepmotion 100i which will hopefully help you relax & sleep better for many years to come. Please take a few minutes to read through this guide which will aid with assembling the product and how to use the features and benefits on the Sleepmotion 100i.

USER GUIDE

This product has been designed to use when in bed, please do not use this product to help you get in and out of bed. Its also not been designed to be in the upright position when sleeping. Please make sure the bed is set to flat before going to sleep.

WARNINGS

IMPORTANT: PLEASE READ ALL SAFETY INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT. PLEASE SAVE THESE INSTRUCTIONS IN A SAFE PLACE. FOR FUTURE REFERENCE.

ENSURE THIS PRODUCT IS PLACED ON A FLAT, CLEAN, DRY SURFACE.

ELECTRICAL SAFETY.
Always connect this product to a grounded surge protector and grounded standard 120-volt circuit wall outlet. DO NOT OPERATE THIS PRODUCT WHEN ANY OF THE CORDS OR ELECTRICAL UNIT IS DAMAGED. Keep all cords away from moving parts and any heated surfaces. FOR INDOOR USE ONLY. When moving or cleaning this product, turn off all electrical functions prior to unplugging from wall outlet.

SMALL CHILDREN/PETS
Immediately dispose of all packaging materials as soon as the product is unpacked. DO NOT ALLOW CHILDREN OR PETS TO PLAY ON OR UNDER THE BED. CHILDREN SHOULD NOT OPERATE THIS PRODUCT WITHOUT ADULT SUPERVISION.

IN-HOME USE / HOSPITAL DISCLAIMER

This product is designed solely for in-home use. This product is not designed to use as a hospital bed and does not meet hospital standards. Do not use with oxygen equipment or near explosive/flammable gases.

WEIGHT RESTRICTIONS

Recommended weight restrictions for PowerBases:
(all weights include the weight of the mattress and bedding)

This product will support the recommended weight limits when weight is distributed evenly across the base. This product is not designed to support or lift this amount in the head or foot sections alone. Consumers should not enter or exit the bed when any portion of it is in the raise position. Do not sit on the head or foot sections while in the raised position. Exceeding the recommended weight restrictions or other misuse of this product could damage the bed and void the warranty.

Weight Capacity: 355 kgs.

SOUND

Sounds does not exceed <70 DB.



Caution

When raising or lowering the bed, Do Not allow persons or animals to enter or place limbs in the area under the raised components OR When the bed is motion. Pressing any button on the remote control will stop the operation.

CARELESSNESS
CAUSES FIRE

Batch No.

To comply with The Furniture and Furnishings
(Fire) (Safety) Regulations:

This article does not include a
schedule 3 interliner

All the foams, fillings and composites have been
tested to ensure compliance with the relevant
ignisability test. All covers and fillings have
been tested to ensure that they are cigarette
resistant. All covers have been tested to ensure
that they are match resistant.

Further details are available
from your retailer.

Fabric Content

100% Polyester Fibre

WARNING

DO NOT PLACE THIS ITEM OF
FURNITURE ON A DAMP SURFACE
AS STAINING MAY RESULT

PRODUCT RATINGS

IMPORTANT: USE THIS PRODUCT ONLY AS DESCRIBED IN THESE INSTRUCTIONS. DO NOT MODIFY ANY PARTS OR COMPONENTS.

MOTOR RATINGS

The Sleepmotion base motors are not designed to operate for more than two (2) continuous minutes within an eighteen (18) minute time period. Exceeding this rating will shorten the life of the motors, and will void the warranty.

POWER RATINGS

INPUT: AC 100i-240V-50/60HZ, 1.5 Amp

OUTPUT: DC 29V-2A

FUSE: 1.5A 250V

If a short circuit should occur, switch off and remove the plug from the wall. The customer should seek professional assistance from a qualified electrician. DO NOT open any of the motor components, alter or change any wiring, modify the base, or change the product in any way, as it will void the warranty.

FCC COMPLIANCE

Operates on 2.4 GHz frequency transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void users right to operate the device.

For any questions or concerns regarding this product please visit our Help Centre on the Dreams website:

www.dreams.co.uk

CONTENTS

This is a Sleepmotion base,which includes the functions of back up/down, memory and flat.
Please prevent the children from playing or operating the Sleepmotion base alone.

Overview..... 1-2

Assembly / Remote Control 3-13

Test All Functions 14

Electronic Components Information 15-16

Warranty / Electronic Components 17

Additional Trouble Shooting 18-19











STEP 1

Place the bed box in a desired location with the top of the box facing up.





STEP 2

Before discarding the packing materials, check to make sure all parts are included.
All electronics and components are located in boxes under the base or attached to the frame.

Note: Due to the weight this product is a 2 person build, to prevent injury please make sure there are 2 people present when assembling this product.

A	Bed Base		1 pc
B	Retainer Bar		1 pc
C	Transformer		1 pc
D	Wired Remote Control		1 pc
E	Washer		6pcs
F	Legs		10" each 6 pcs
G	Power Cord		1 pc
I	Connecting Bolt		2 pcs
J	Hex Wrench		1 pc
K	Connecting Plate		1 pc

ASSEMBLY

A	Bed Base		1 pc
I	Connecting Bolt		2 pcs
J	Hex Wrench		1 pc
K	Connecting Plate		1 pc

STEP 3

Unfold the base to flat position. Refer to image (i)/ (ii).


STEP 4

Align the holes of the Connecting Plate (K) and Bed Base (A). Secure by tightening Bolts (I) with Wrench (J). Refer to image (iii) .


i



ii

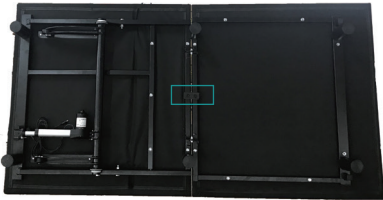

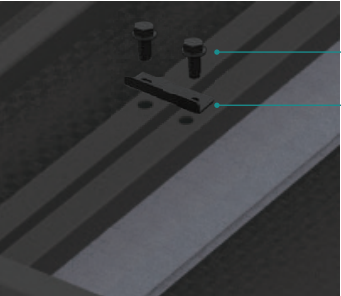


iii



I

K

ASSEMBLY

A	Bed Base		1 pc
E	Washer		6 pcs
F	Legs	 10"	each 6 pcs


STEP 5

Place washer (E) on the leg (F), and then connect to bed base (A). Refer to image (i/ii/iii).


i




ii

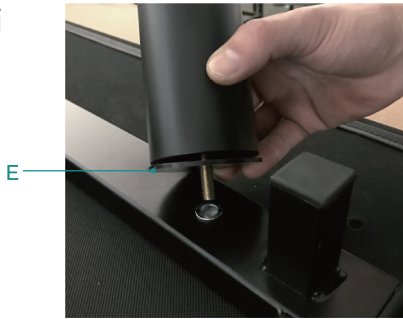

iii

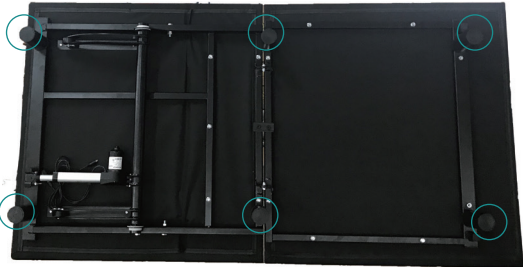

ASSEMBLY

A	Bed Base		1 pc
C	Transformer		1 pc
G	Power Cord		1 pc
D	Wired Remote Control		1 pc



STEP 6

Insert power cord located on Bed Base (A) into Transformer (C). Refer to image (i).

STEP 7

Insert Power Cord (G) into Transformer (C). Refer to image (i) .

i

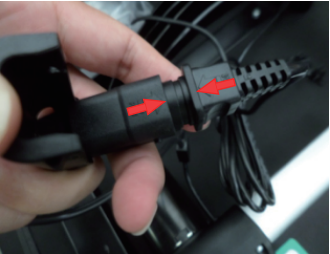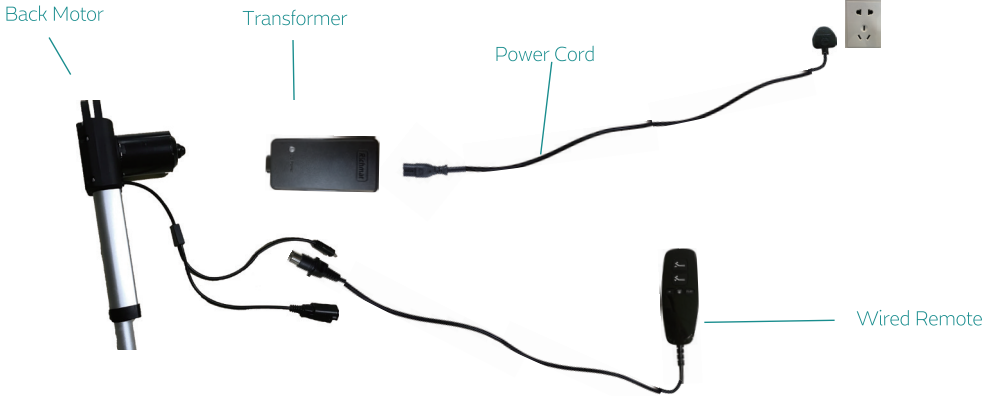

'Arrow' to 'Arrow' plug in

REMOTE CONTROL

D Wired Remote Control



1 pc

OVERVIEW

All of the bed functions are controlled from the Remote Control (D). The Remote Control (D) comes with some pre-set positions. Refer to image (i) for a complete list of remote control functions

Adjust the motion bed to the position you want, press and hold the "Memory" button simultaneously. The blue light on the remote starts flashing, the position memorized when you hear four drops.

i



Note:

The Flat button is pre-programmed, there is no need to adjust this setting. Please also note, the flat button is a one press operation, so you do not have to hold it down for the bed to move into the flat position.

ASSEMBLY

A Bed Base



1 pc

B Retainer Bar



1 pc

STEP 8

Turn over the whole base with legs standing on the floor, this is a 2 man lift. Please refer to image (i). Hold the metal frame when turning over the base, do not hold the upholstered frame only.

STEP 9

Insert the retainer bar (B) into 2 holes on the foot end of Bed Base (A). Refer to image (ii).


Note :

If you have purchased the Sleepmotion 100i as part of a bedframe, please now refer to the bed assembly instruction.
If you have purchased a Sleepmotion Headboard please assemble to the bed at this point (the assembly instructions and fixing kit for your headboard can be found in the zipped compartment at the back of the headboard).

i



ii

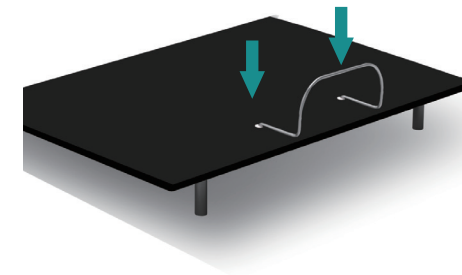


ASSEMBLY

A	Bed Base		1 pc
J	Hex Wrench		1 pc

STEP 10

Put the Bed Base (A) into the bed frame, then lift the foot end of bed base, tighten the screws with Wrench (J). Please refer to image(i).

i

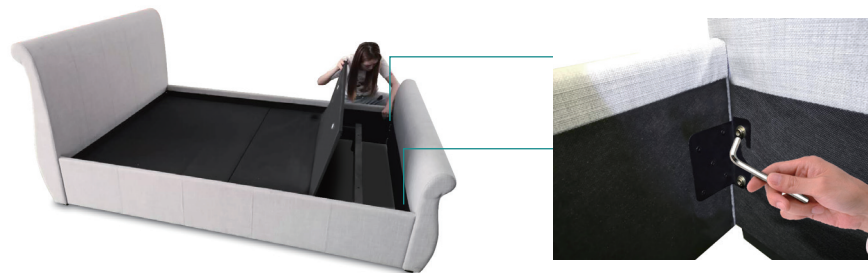

TEST ALL FUNCTIONS

Head Up
Head Down
Flat
Flash light



OVERVIEW


To ensure proper setup, use remote and test all functions for three (3) seconds.

Note: If you purchase Sleepmotion base together with bedframe, the Sleepmotion should be assembled first and then bedframe assembled round it.

ELECTRONIC COMPONENTS INFORMATION

OVERVIEW

All electronic components are pre-installed. However, some input locations are important for proper set up and functionality. Refer to image (i) and (ii) to familiarise yourself for correct setting and part locations.

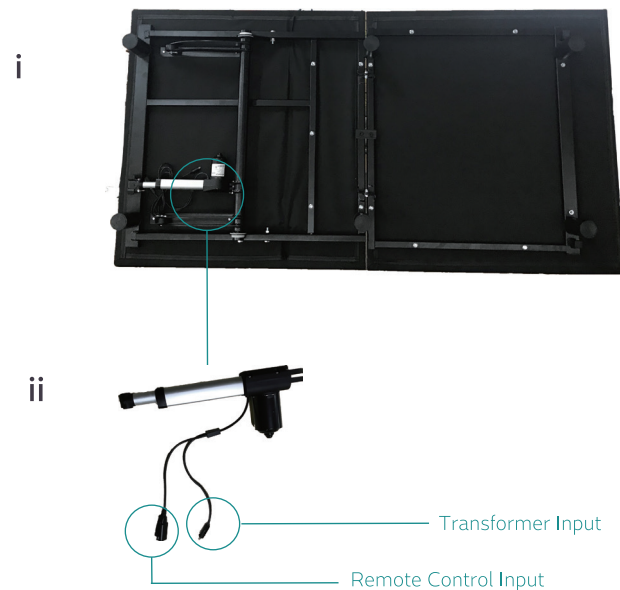

WARRANTY





ELECTRIC COMPONENTS

1- Year Full Warranty

Dreams will replace any electronic components if components fail during the 1 year from the date of delivery.

Maintenance and repair are to be only carried out by dreams or their recommended representatives.

ELECTRONIC COMPONENTS

M	Back Motor		1 pc
D	Wired Remote Control		1 pc
C	Transformer		1 pc
G	Power Cord		1 pc

ADDITIONAL TROUBLE SHOOTING

IF ONE OR MORE FUNCTIONS OF THE BED HAVE STOPPED WORKING

Turn off and unplug, check under the bed base to verify the wired connections are secure and there are no cords or bedding obstructing the movement of the base.

NO FUNCTIONS ON THE BED WILL OPERATE

Check to ensure the power cord is properly connected. Unplug the base for 1 hour to reset the electronic components. Plug base into a different electrical outlet, or test current outlet with another working appliance. A grounded electrical surge protector is recommended with use of this product.

FOR FURTHER ASSISTANCE CONTACT US AT : www.dreams.co.uk

Name of Manufacturer	: DREAMS
Address of Manufacturer	: Knaives Beech, Loudwater, High Wycombe, HP10 9YU, United Kingdom.
Model / Designation	: Electrically Actuated Adjustable Bed
Type	: 100i
Year of Manufacture	: 2020



NOTES:

This image shows a blank sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are approximately 20 lines visible. On the left side, there is a vertical margin line, creating a narrow left margin. The paper appears to be from a notebook or a standard ruled document.

Sleepmotion Base Correct Usage Guidelines

To stop any potential damage to your sleepmotion bed/motors please make sure you follow the below guidelines :

1. When operating the back rise please make sure you are not sitting on the back section (image1). Your weight needs to be distributed in the laying position as below (image2).

