


# Dreams

OWNERS MANUAL

SLEEPMOTION 800i KD

# Dreams

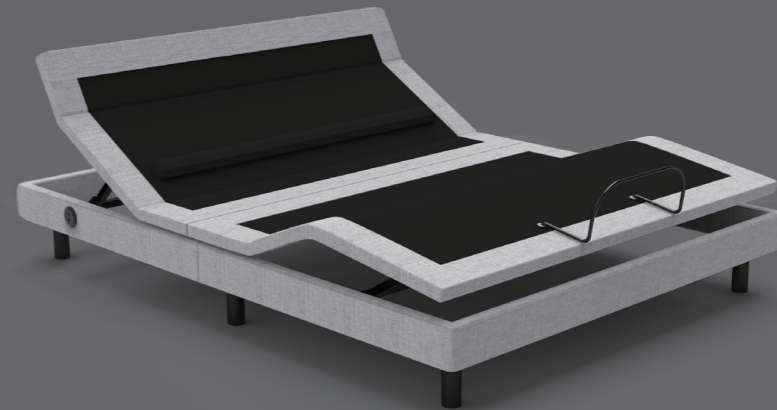

## THANK YOU

Thank you for choosing the Sleepmotion 800i bed from Dreams. You have made a sound investment in our high quality Sleepmotion 800i which will hopefully help you relax & sleep better for many years to come. Please take a few minutes to read through this guide which will aid with assembling the product and how to use the features and benefits on the Sleepmotion 800i.

## WARNINGS

**IMPORTANT: PLEASE READ ALL SAFETY INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT. PLEASE SAVE THESE INSTRUCTIONS IN A SAFE PLACE. FOR FUTURE REFERENCE.**

**ENSURE THIS PRODUCT IS PLACED ON A FLAT, CLEAN, DRY SURFACE.**

### ELECTRICAL SAFETY.

Always connect this product to a grounded surge protector and grounded standard 120-volt circuit wall outlet. **DO NOT OPERATE THIS PRODUCT WHEN ANY OF THE CORDS OR ELECTRICAL UNIT IS DAMAGED.** Keep all cords away from moving parts and any heated surfaces. **FOR INDOOR USE ONLY.** When moving or cleaning this product, turn off all electrical functions prior to unplugging from wall outlet.

### SMALL CHILDREN/PETS

Immediately dispose of all packaging materials as soon as the product is unpacked. **DO NOT ALLOW CHILDREN OR PETS TO PLAY ON OR UNDER THE BED. CHILDREN SHOULD NOT OPERATE THIS PRODUCT WITHOUT ADULT SUPERVISION.**

## IN-HOME USE / HOPITAL DISCLAIMER

This product is designed solely for in-home use. This product is not designed to use as a hospital bed and does not meet hospital standards. Do not use with oxygen equipment or near explosive/flammable gases.

## WEIGHT RESTRICTIONS

Recommended weight restrictions for PowerBases:  
(all weights include the weight of the mattress and bedding)

This product will support the recommended weight limits when weight is distributed evenly across the base. This product is not designed to support or lift this amount in the head or foot sections alone. Consumers should not enter or exit the bed when any portion of it is in the raise position. Do not sit on the head or foot sections while in the raised position. Exceeding the recommended weight restrictions or other misuse of this product could damage the bed and void the warranty.

Weight Capacity: 355 kgs.

## SOUND

Sounds does not exceed <70 DB.



### Caution

*When raising or lowering the bed, Do Not allow persons or animals to enter or place limbs in the area under the raised components. OR When the bed is motion, Pressing any button on the remote control will stop the operation.*

<b>CARELESSNESS CAUSES FIRE</b> Batch No. _____
To comply with The Furniture and Furnishings (Fire) (Safety) Regulations: This article does not include a schedule 3 interliner All the foams, fillings and composites have been tested to ensure compliance with the relevant ignitability test. All covers and fillings have been tested to ensure that they are cigarette resistant. All covers have been tested to ensure that they are match resistant. Further details are available from your retailer. Fabric Content 100% Polyester Fibre
<b>WARNING</b> <b>DO NOT PLACE THIS ITEM OF FURNITURE ON A DAMP SURFACE AS STAINING MAY RESULT</b>



## PRODUCT RATINGS

**IMPORTANT: USE THIS PRODUCT ONLY AS DESCRIBED IN THESE INSTRUCTIONS. DO NOT MODIFY ANY PARTS OR COMPONENTS.**

### MOTOR RATINGS

The Sleepmotion base motors are not designed to operate for more than two (2) continuous minutes within an eighteen (18) minute time period. Exceeding this rating will shorten the life of the motors, and will void the warranty.

### POWER RATINGS

**INPUT:** AC 100-240V-50/60HZ, 1.5 Amp

**OUTPUT:** DC 29V-2A

**FUSE:** 1.5A 250V

If a short circuit should occur, switch off and remove the plug from the wall. The customer should seek professional assistance from a qualified electrician. DO NOT open any of the motor components, alter or change any wiring, modify the base, or change the product in any way, as it will void the warranty.

### FCC COMPLIANCE

Operates on 2.4 GHz frequency transmitter.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void users right to operate the device.

For any questions or concerns regarding this product please visit our Help Centre on the Dreams website:

[www.dreams.co.uk](http://www.dreams.co.uk)

## CONTENTS

This is a Sleepmotion base, which includes the functions of head up/down, back up/down, lumbar up/down, foot up/down, back/foot massage, zero gravity and flat. Also, it could be controlled by wireless remote and Napp application.

Please prevent the children from playing or operating the Sleepmotion base alone.

Overview.....	1-2
Assembly / Remote Control .....	3-16
Test All Functions .....	17-18
Electronic Components Information .....	19-20
Warranty / Electronic Components .....	21-22
APP .....	23-25
Additional Trouble Shooting .....	26-28

## OVERVIEW













### STEP 1

Place the bed box in a desired location with the top of the box facing up.

### STEP 2

Before discarding the packing materials, check to make sure all parts are included. All electronics and components are located in boxes under the base or attached to the frame.

**Note:** Due to the weight this product is a 2 person build, to prevent injury please make sure there are 2 people present when assembling this product.

A	Bed Base		2 pcs	F	Legs		each 8 pcs
B	Retainer Bar		1 pc	G	Power Cord		1 pc
C	Transformer		1 pc	H	AAA Battery		2 pcs
D	Wireless Remote Control		1 pc	I	Connecting Bolt		8 pcs
E	Washer		8 pcs	J	Wrench		1 pc
				K	Connecting Plate		2 pcs
				L	Pairing Cable		1 pc

**ASSEMBLY**

**Contents:**

A Bed Base 2 pcs



K KD Connecting Plate 2 pcs



I Bolts (1) 8 pcs



J Wrench 1 pc




**STEP 3**

Slide the head piece and the foot piece of the bed together so that the holes line up. Refer to image (i).

**STEP 4**

Align the holes of the Connecting Plates (K) and Bed Base (A). Secure by tightening Bolts (I) with Wrench (J). Refer to image (ii)/(iii).


i

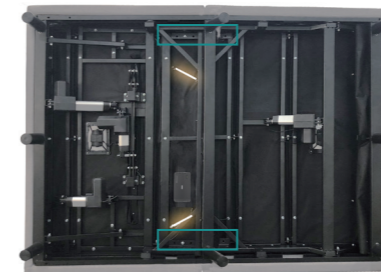


ii



iii

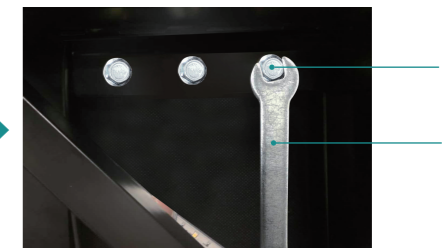

**ASSEMBLY**

A	Bed Base		1 pc
E	Washer		8 pcs
F	Legs	 + 	each 8 pcs

There is a variable height option on the Sleepmotion 800i, either 6" or 9". If you would like 6" please just use the larger leg supplied.

If you would like 9" please connect the smaller leg (3") to the larger leg (6") before following the steps below.

If you have a headboard option use the specific holes in image(iv)

**STEP 5**

Place washer (E) on the leg (F), and then connect to bed base (A). Refer to image (i/ii/iii).

Refer to image (iii) for leg placement. There are two holes at each leg position. The legs can be placed in either of the two holes depending on the width of the space in which the feet need to fit.


**Note:**

The 3" leg should not be used individually.


i



ii

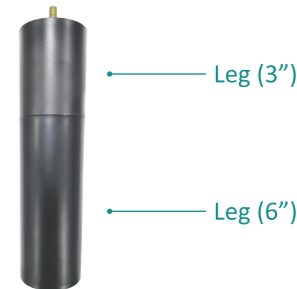

iii

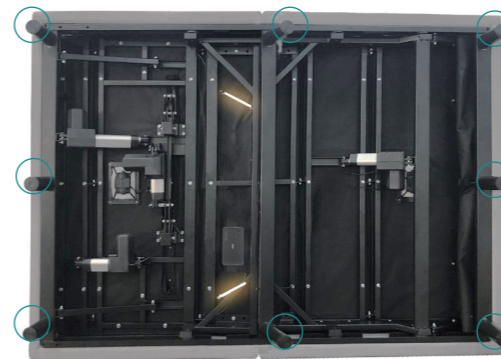

iv




## ASSEMBLY




### STEP 6

Connect cable from foot motor to foot motor input slot in control box (both cable and input slot are labelled with green sticker).

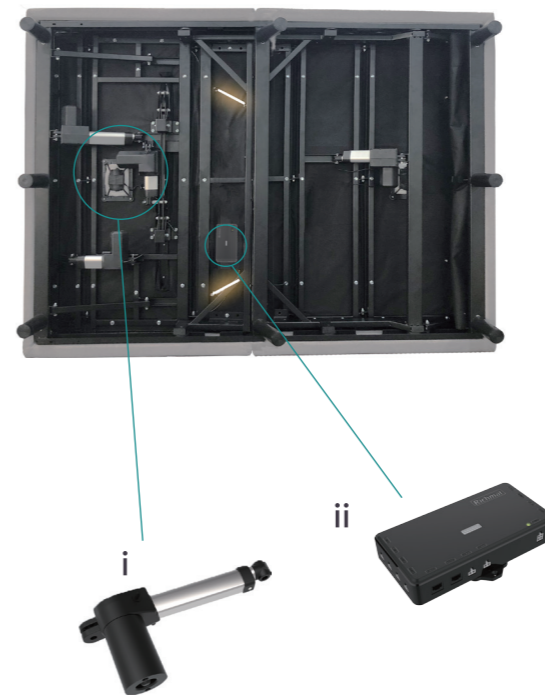Please refer to the image (i)/(ii).



**ASSEMBLY**


L	Pairing Cable		1 pc
C	Transformer		1 pc
G	Power Cord		1 pc

**STEP 7**



Insert Pairing Cable(L) into Transformer (C). Refer to image (i).

**STEP 8**

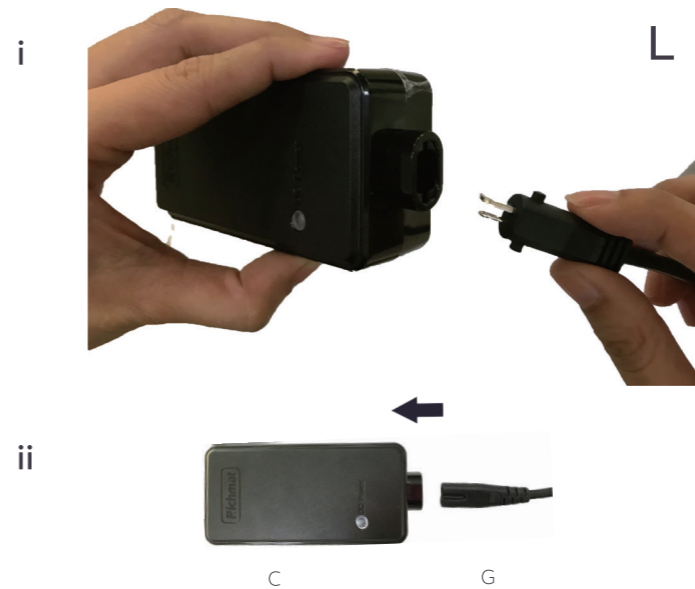Insert Power Cord (G) into Transformer (C). Refer to image (ii).



## REMOTE CONTROL


D	Wireless Remote Control		1 pc
H	AAA Battery		2 pcs

### OVERVIEW

All of the bed functions are controlled from the Remote Control (D). The Remote Control (D) comes with some pre-set positions. Refer to image (i) for a complete list of remote control functions.

### REMOTE CONTROL BATTERY INSTALLATION:

Remove the battery cover on the back of Remote Control (D). Insert the AAA Batteries (H).

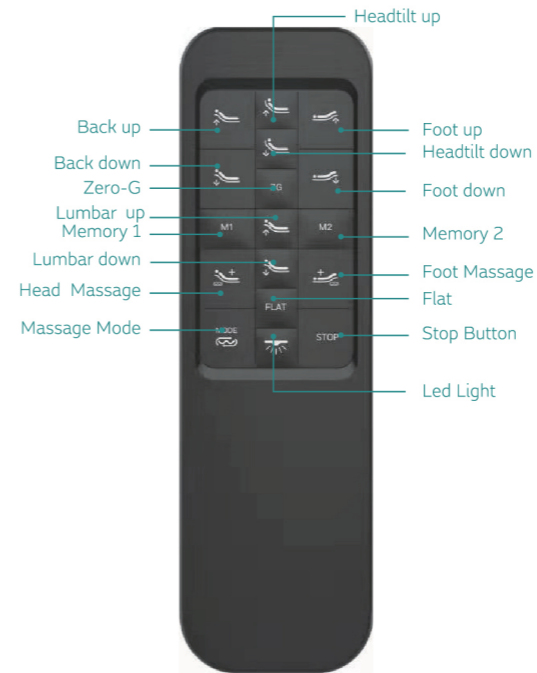

**Note:** The Zero-G and Flat buttons shown above are pre-programmed with the manufactures suggested bed positions. No programming is necessary by the user.

PRESS ANY BUTTON ON THE REMOTE TO STOP THE MOTION.



## REMOTE CONTROL

### PAIRING SET UP

1. Insert Power cable (G) into wall outlet to make sure there is power to the Sleepmotion 800i.
2. Press and hold the "Back down" and "Foot up" buttons simultaneously.
3. Press the the Pair/Flat button on the pairing cable once.
4. Once you hear bleeping sound from control box, pairing done.
5. If the remote does not paired, check the remote control batteries and repeat the process.

**Note:**

This bed can also be controlled via the Dreams App 'Napp by Dreams'. Please see page 23- 25 for instructions.



## ASSEMBLY

A Bed Base



1 pc

B Retainer Bar



1 pc

### Note:

If you have purchased a Sleepmotion Headboard please assemble to the bed at this point (the assembly instructions and fixing kit for your headboard can be found in the zipped compartment at the back of the headboard)

### STEP 9

Turn over the whole base with legs standing on the floor, this is a 2 man lift. Please refer to image (i). Hold the metal frame when turning over the base, do not hold the upholstered frame only.


### STEP 10

Insert the retainer bar (B) into 2 holes on the foot end of Bed Base (A). Refer to image (ii).

i



ii

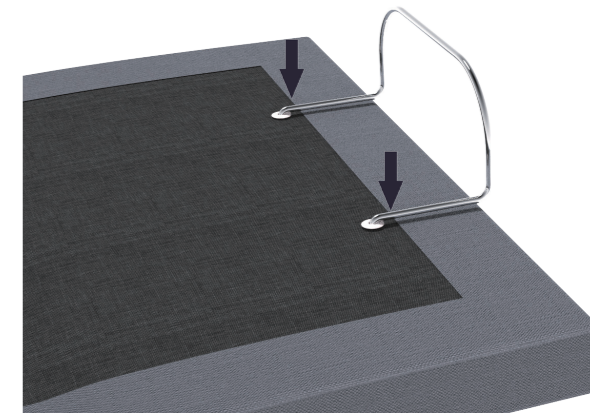

## TEST ALL FUNCTIONS

### OVERVIEW

To ensure proper setup, use remote and test all functions for three (3) seconds.


- APP Application
- Head Motor
- Foot Motor
- Head Tilt Motor
- Lumbar Motor
- Head Massage
- Foot Massage
- Zero Gravity
- Memory 1
- Memory 2
- Flat
- LED underbed Light
- USB Charger



**ELECTRONIC COMPONENTS INFORMATION**

**OVERVIEW**

Electronic inputs is crucial important for the adjustable bed to function well. Please follow the instruction showed in image (i) / (ii) to connect the input cables.

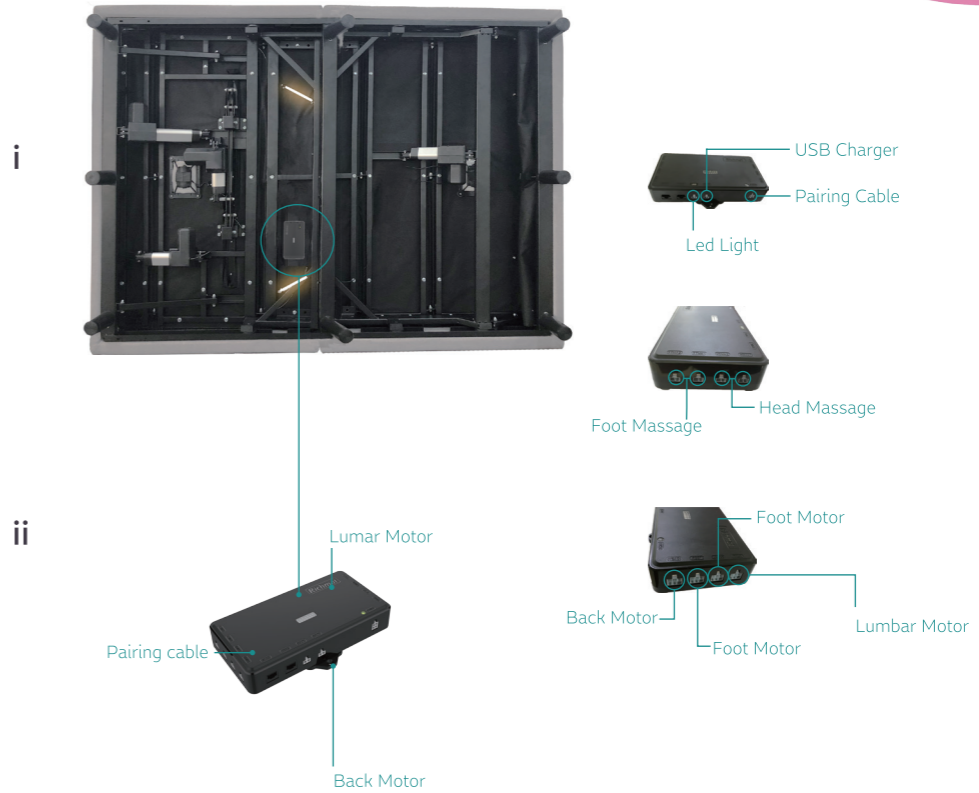

**WARRANTY**











**ELECTRIC COMPONENTS**

**1- Year Full Warranty**

Dreams will replace any electronic components if components fail during the 1 year from the date of delivery.

Maintenance and repair are to be only carried out by dreams or their recommended representatives.

**ELECTRONIC COMPONENTS**

<b>N</b>	Back Motor		1 pc	<b>C</b>	Transformer		1 pc
<b>O</b>	Foot Motor		1 pc	<b>M</b>	Control Box		1 pc
<b>P</b>	Lumbar Motor		1 pc	<b>H</b>	Power Cord		1 pc
<b>L</b>	Pairing Cable		1 pc	<b>D</b>	Wireless Remote Control		1 pc
<b>Q</b>	Massage Motor		2 pcs	<b>R</b>	Head Motor		2 pcs


**APP**

To control the bed via and App please go onto the App store or Google Play and download 'Napp by Dreams'.

Once downloaded and registered 'Add Device' and then follow the instructions.

Once connected you will be able to control your Sleepmotion 200i via Napp by Dreams with the buttons shown in image (ii).

i

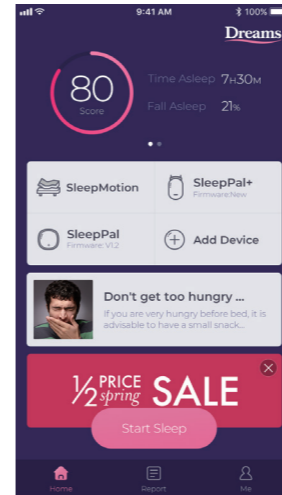

Home


ii



800i Control Page


APP

iii

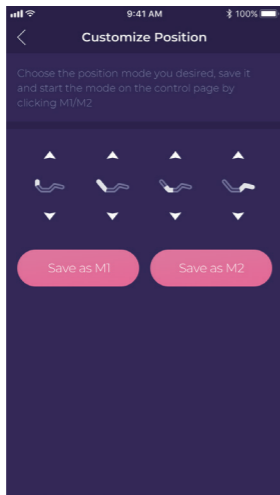

Customise Position Memory Function

iv

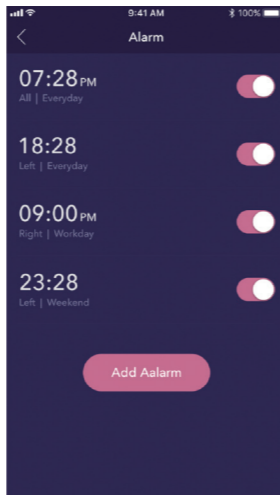

Alarm

**ADDITIONAL TROUBLE SHOOTING**

**IF ONE OR MORE FUNCTIONS OF THE BED HAVE STOPPED WORKING**

Turn off and unplug, check under the bed base to verify the wired connections are secure and there are no cords or bedding obstructing the movement of the base.

**THE REMOTE CONTROL WILL NOT OPERATE THE BED FUNCTIONS**

Make sure the three (3) AAA batteries are installed correctly in the remote control. Ensure the remote control is successfully paired with the control box on the bed.

**NO FUNCTIONS ON THE BED WILL OPERATE**

Check to ensure the power cord is properly connected. Unplug the base for 1 hour to reset the electronic components. Plug base into a different electrical outlet, or test current outlet with another working appliance. A grounded electrical surge protector is recommended with use of this product.

**FOR FURTHER ASSISTANCE CONTACT US AT : [www.dreams.co.uk](http://www.dreams.co.uk)**

Name of Manufacturer :	DREAMS
Address of Manufacturer :	Knaves Beech, Loudwater, High Wycombe, HP10 9YU, United Kingdom.
Model / Designation :	Electrically Actuated Adjustable Bed
Type :	800i
Year of Manufacture :	2020



NOTES:

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---


---

## Sleepmotion Base Correct Usage Guidelines

To stop any potential damage to your sleepmotion bed/motors please make sure you follow the below guidelines :


- When operating the back rise please make sure you are not sitting on the back section (image1). Your weight needs to be distributed in the laying position as below (image2).

(image1)

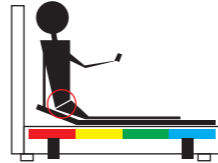

Back  
 Lumbar  
 Leg  
 Foot


(image2)

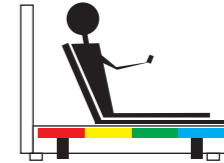

Back  
 Lumbar  
 Leg  
 Foot


- When operating the foot rise please make sure you are not sitting on the foot section (image 3). Your weight needs to be distributed in the laying position as below (image 4).

(image3)

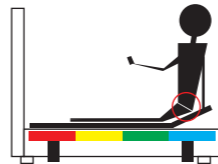

Back  
 Lumbar  
 Leg  
 Foot

(image4)

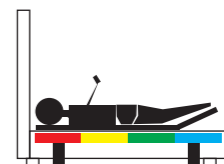

Back  
 Lumbar  
 Leg  
 Foot